

**NAVFAC P-307**

**JUNE 1998**



## FOREWORD


The objectives of this publication are to ensure optimum service life of the equipment, to ensure the equipment itself is safe to operate, and to ensure weight handling operations are conducted safely and efficiently. It provides administrative and technical criteria for personnel with responsibility for management, inspection, testing, certification, alteration, repair, operation, and/or use of applicable equipment. This manual also incorporates industry standards, where appropriate, in accordance with SECNAV and COMNAVFACENGCOM policy.

SECNAVINST 11260.2 assigns overall Navy-wide management responsibility for shore based weight handling equipment (WHE) to COMNAVFACENGCOM and authorizes the establishment of a Navy Crane Center (NCC) of Expertise. The Director of NCC has direct access to the Chief of Naval Operations and the Assistant Secretary of the Navy (I&E) on matters involving the safe and reliable operation of Navy WHE.

NCC responsibilities include: procuring designated types of WHE in accordance with NAVFACINST 11450.1; establishing policy regarding design, maintenance, testing, certification, and operation of WHE; establishing training and qualification requirements for personnel involved in this program; auditing activities who own or operate WHE; validating activity certifications for cranes in special programs; certifying WHE and related equipment for which accredited certification is required by OSHA standards; tracking equipment deficiency trends and issuing crane safety advisories and deficiency notices; collecting data on crane accidents, investigating significant accidents, and disseminating lessons learned; reviewing and approving crane alterations; maintaining configuration control of designated WHE; and providing in-service engineering support.

The SECNAV instruction requires systems commands and major claimants to develop and maintain WHE programs in accordance with the policies and directives issued by COMNAVFACENGCOM. Accordingly, this publication has been prepared to provide a uniform Navy program for maintenance, inspection, testing, certification, and operation of Navy owned WHE and related equipment at Navy shore installations. Deviation from these criteria shall not be made without prior approval of the NCC. Deviation requests shall be submitted with full justification.

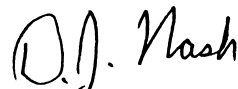This publication supersedes NAVFAC P-307 of October 1996. It is certified as an official publication of the Command, and has been reviewed and approved in accordance with SECNAVINST 5600.16. Changes are annotated on each applicable page and are explained in the Change Synopsis. Unless otherwise directed, Navy shore activities have one year to achieve full compliance with the changes identified.



D.J. NASH  
Rear Admiral, CEC, U.S. Navy  
Commander

## ACKNOWLEDGMENTS

Permission to reprint specific portions of the following documents has been granted by the American Society of Mechanical Engineers.

ASME B30.2-1990, Overhead and Gantry Cranes (Top Running Bridge, Single or Multiple Girder, Top Running Trolley Hoist)

ASME B30.4-1990, Portal, Tower and Pillar Cranes

ASME B30.5-1994, Mobile and Locomotive Cranes

ASME B30.6-1995, Derricks

## CHANGE RECORD

This page is provided for recording of future changes to this version of P-307.

Change No.	Date	Title or Brief Description	Entered By

## CHANGE SYNOPSIS

This change synopsis is provided for clarification of changes to the previous version of P-307.

Paragraph 1.1 Deleted references to various appendices. P-307 meets or exceeds OSHA requirements for maintenance, inspection, testing, certification, repair, alteration, and operation of applicable equipment.

Paragraph 1.2 The certifying official shall determine the practicality of testing components not identified in the specifications for inspection and test in the appendices.

Paragraph 1.3.1 Includes barge mounted cranes (category 1 through 4) within the scope of the manual. Commercial cranes, with capacities less than 2,000 pounds, mounted on trucks, trailers, etc., shall be treated as category 3 cranes.

Paragraph 1.4.b Diesel engines, generators, electrical power distribution, and electrical control circuitry, associated with the movement of the load are to be treated as load controlling parts.

Paragraphs 1.6 through 1.6.2 Include new OSHA requirements (effective 21 Jan 98) for third party certification of container spreaders and special rigging assemblies. Includes OSHA's new definition of longshoring. Includes requirement for wind indicators on portal and bridge cranes used in longshoring.

Paragraph 1.7.1 Revises requirements for cranes leased or rented for operation by Navy personnel.

Paragraph 1.7.2 Revises requirements for contractor owned and operated cranes on Navy property.

Paragraph 1.7.3 Addresses cranes owned by other military services and other Government agencies on Navy bases.

Paragraph 1.8 Excludes NAVSEA approved ordnance handling equipment from the requirements of this publication.

Paragraph 1.10 Requires an annual activity self-assessment of the program.

Paragraph 1.11 Requires activities to develop procedures for managing their weight handling programs that implement the requirements of this publication.

Paragraph 1.12 Adds a form (figure 1-1) for requesting clarifications, deviations, or revisions to this publication.

Paragraph 2.1 Relocates inspection and disassembly criteria to appendices C and D. Adds reference to OPNAVINST 4790.4 for maintenance of floating crane barges.

Paragraph 2.1.1 Revises weight handling deficiency reporting requirements.

Paragraph 2.2 Relocates inspection requirements to appendices C and D.

Paragraph 2.3 Requires review of SRO's by inspector or engineer prior to starting work. Requires annotation of SRO's when recertification is required.

Paragraph 2.3.3 Addresses requirements for deferral of work to load bearing and load controlling parts and operational safety devices.

Figure 2-1 Adds form for recording and reporting weight handling equipment deficiencies. (Previous figure 2-1 relocated to appendices C and D.)

Paragraph 3.3 Clarifies certification expiration date.

Paragraph 3.4.1 Requires a current material inspection report indicating the crane barge is fit for further service (per OPNAVINST 4780.6) as a condition of certification of floating cranes.

Paragraphs 3.4.2 and 3.4.3 Revises interim recertification requirements after repair, alteration, replacement, etc., of load bearing parts, load controlling parts, and operational safety devices.

Paragraph 3.5 Clarifies voiding of certifications based on changes made to paragraphs 3.4.2. and 3.4.3.

Paragraph 3.5.1 Adds requirement for concurrence by certifying official when extending a crane's certification.

Paragraph 3.6 Clarifies crane condition inspection requirements. Requires the condition inspection report to be submitted to the certifying official with the certification. Allows the maintenance inspection to serve as the "before" test condition inspection for certain cranes.

Paragraph 3.7.1 Clarifies mobile crane weight deductions.

Paragraph 3.7.1.1 Clarifies test weight marking requirements. Adds requirement for test weight list.

Paragraph 3.7.3 Revises requirements for cranes with hoist roll back.

Paragraph 3.7.4 Adds requirements for certification of mobile cranes temporarily mounted on barges.

Figure 3-1 Revises entries for crane capacity. If certified capacity is different from OEM capacity, an explanation is required. Adds block for biennial load test crane. Deletes crane condition inspection items (condition inspection report is now required to accompany the certification form when submitting to the certifying official).

Figure 3-3 Revises inspection attributes and requirements.

Paragraph 4.4.2 Allows replacement parts identified as industry consensus standard interchangeable equivalents without Navy Crane Center approval. Approval by the activity engineering organization is required.

Paragraph 4.4.3 Adds restoration of original fits.

Paragraph 4.4.4 Adds the words “if required” after “recertified.”

Paragraph 4.4.5.2 Adds the words “if required” after “recertified.”

Paragraph 4.4.7 Substitutes MIL-HDBK-1038 for DM 38.

Table 5-1

Item (8) Clarifies wire rope certification requirements. Adds note concerning cranes used in longshoring.

Item (9) Requires crane alteration documentation (not just approval).

Items (19 through (22) Add new data required by this revision to equipment history file.

Paragraph 6.3 Consolidates designation requirements.

Paragraphs 7.5 and 7.5.1 Deleted.

Paragraph 8.5.3.1 Requires written verification of crane operation to waive performance test for license renewal.

Paragraph 8.6.g Clarifies safety course record requirements.

Paragraph 9.1.1 Deletes requirement for ODCL's for each type of machine.

Paragraph 9.1.2.1.1.q Adds inspection requirement for load chain.

Paragraph 9.1.2.1.3.l Adds inspection item for level indicators on mobile cranes.

Paragraph 9.2.b Includes wording from advance change notice.



Paragraph 10.2.2.3 Adds requirement to train operators to approach limit switches only at slow speed. Adds requirement to post safety device bypass instructions in the operator's cab.

Paragraph 10.4.1.d Excludes lifts (i.e., 80 percent capacity) with jib cranes, pillar jib cranes, fixed overhead hoists, and monorails from complex lift requirements.

Paragraph 10.8 Includes applicable OSHA requirements (adapted from 29 CFR 1926.550(g)) for lifting of personnel.

Paragraph 10.9 Requires instructions for operating in adverse weather conditions to be posted in the operator's cab.

Paragraph 10.13 Adds requirement for in-plane loading of padeyes.

Paragraph 10.15 Requires supervisors to ensure operators and crane walkers are aware of crane travel restrictions.

Paragraph 10.18 Adds operating requirements for mobile cranes temporarily mounted on barges.

Paragraph 11.1 Revises crane identification requirements.

Paragraph 11.4.1 Adds resin socketed wire rope end connections.

Paragraph 12.3 Adds requirement to report (by letter) other unplanned events where lessons can be learned.

Paragraph 12.4.1 Revises requirements for immediate notification of certain serious accidents.

Figure 12-1 and Instructions Revises content of accident report.

Paragraph 14.1 Requires contractor owned rigging and miscellaneous gear used with Navy owned cranes to meet the requirements of section 14.

Paragraph 14.1.1 Adds container spreaders and personnel platforms. Excludes OEM installed integral lifting attachments.

Paragraph 14.2 Clarifies retention requirements for applicable gear.

Paragraph 14.3 Addresses marking methods. Addresses procurement requirements.

Paragraph 14.4.1 Adds precaution when load testing wire rope and synthetic rope slings. Revises test requirements for multiple leg slings. Addresses test and marking requirements for lashing. Addresses specially fabricated lifting attachments.

Table 14-1 Revises test loads to “minimum.” Adds container spreaders and personnel platforms. Revises test percentages for magnet devices. Adds note for common rigging gear used in longshoring.

Paragraph 14.4.1.1 Adds requirements for testing of common rigging gear, container spreaders, and special rigging assemblies used in longshoring.

Paragraph 14.5 Deletes “only by qualified personnel.” Adds OEM instructions for repairs and alterations.

Paragraph 14.6 Adds requirements for three point arrangements for sling bridles.

Paragraph 14.6.1.3 Revises temperature requirements for chain slings.

Paragraph 14.6.2.2.g Adds rejection criterion for broken wires at the end connection of wire rope slings.

Table 14-3 Adds note for multi-part braided slings.

Paragraph 14.6.2.3.1 Adds wire rope endless sling rated load criteria. Adds prohibition on using wire rope slings when load bearing area is within 10 rope diameters of splice.

Paragraph 14.6.4.3.4 Adds requirement to use shackles recommended by synthetic roundsling OEM. Adds requirement to mark slings with the minimum size pin diameter allowed for use. Deletes certain record keeping requirements.

Paragraph 14.7 Adds swivels and hooks.

Paragraph 14.7.1 Revises criteria for inspection and removal from service.

Paragraph 14.7.2 Revises repair requirements.

Paragraph 14.7.3 Adds side loading restrictions for round pin shackles.

Paragraph 14.7.6 Clarifies turnbuckle use with jam nuts.

Paragraph 14.7.7 Adds hook use criteria.

Paragraph 14.8 Adds criteria for tackle blocks.

Paragraph 14.9 Adds container spreaders.

Paragraph 14.11 Adds design factors for portable load indicating devices.

Appendix A Revises definition of hoist roll back.

Appendices C and D Completely revised. Specifications are now in checklist format. Instructional notes are included in the beginning of each appendix. Specification items have been relocated and edited for clarity and consistency.

Important changes for appendix C:

Item 17 (Clutch-Main Drive) Requires disassembly and inspection of internal components at every second “C” inspection.

Item 20 (Engine Alarm Safety Devices) For portal and floating cranes, verification of proper sensor function is required by testing with the sensors connected to the system.

Item 24 (Mechanical Brakes) Requires inspection of brake linings for glazing at “B” inspection (with disassembly as required).

Item 25 (Hydraulic Brake System) Requires inspection of brake linings for glazing at “B” inspection (with disassembly as required). Adds inspection of caliper brakes on wire rope drums.

Item 26 (Air Brake System) Requires inspection of brake linings for glazing at “B” inspection (with disassembly as required).

Item 27a (Shoe Type Electric Brakes) Requires inspection of brake linings for glazing at “B” inspection (with disassembly as required).

Item 27b (Disc Type Brakes) Requires inspection of hoist and rotate brake linings for glazing at “B” inspection (with disassembly as required). For travel brakes, disassembly is required for 50 percent of the brakes at every “C” inspection.

Item 28 (Shafts and Couplings) Requires coupling alignment verification for hoist and rotate drives (phased in over the next three years; then at every second “C” inspection).

Item 29b (Internal Gearing) For hoist and rotate drives, an oil or vibration analysis program is required. As an alternative, gear cases shall be disassembled as necessary to visually inspect internal gears (this alternative shall be phased in over the next three years, then at every third “C” inspection).

Item 37 Adds inspection item for mobile crane chassis, steering, and suspension.

Item 43 Adds inspection item for telescoping booms.

Item 52 (Wire Rope, Fastenings, and Terminal Hardware) Revises frequency from “A” to “B”. Adds detailed inspection and rejection criteria.

Item 57 Adds item for drum rotation indicators.

Item 63 Adds item for electronic drive control systems.

Item 68 Adds item for electric cable reels.

#### Important Changes for appendix D

Item 7 (Shafts and Couplings) Requires coupling alignment verification for hoist drive couplings (phased in over the next three years, then at every sixth annual certification).

Item 8b (Internal Gears) For hoist drives, an oil or vibration analysis program is required. As an alternative, gear cases shall be disassembled as necessary to visually inspect internal gears (this alternative shall be phased in over the next three years, then at every tenth annual inspection).

Item 9 (Mechanical Load Brakes) Requires disassembly for inspection of internal components (phased in over the next three years, then at every tenth annual inspection).

Item 13b (Disc Type Electric Brakes) Requires disassembly of hoist brakes (annually if hoist does not have a mechanical load brake; if hoist has mechanical load brake, phase in over the next three years , then at every sixth annual inspection).

Item 13c Adds inspection item for caliper brakes on wire rope drums.

Item 23 Adds item for cable reels.

Item 26 Adds item for electronic drive control systems.

Item 28 Adds item for resistors.

Item 30 Adds item for eddy current brakes.

#### Appendix E

Paragraph 1.1 Revises crawler crane test load.

Paragraph 1.4.1 Revises hook inspection criteria.

Paragraph 1.4.3 Revises references for magnetic particle inspection and liquid penetrant inspection of hooks and nuts. Revises NDT period from five to six annual certification periods.

Paragraph 1.5.4 Revises references for magnetic particle inspection of insulated links.

Paragraph 1.6.3 Clarifies requirements for crane rail certification.

Paragraphs 2.1.1.1, 2.1.2.1 Adds test requirements for emergency drum brake systems (shaft failure detection systems).

Paragraph 2.1.2.2 Revises test requirements for automatic boom brake.

Paragraphs 2.2.3.a Added "where each brake is designed to individually hold the load."

Paragraphs 2.2.3.k Clarifies requirements for test when the boom is over the side.

Paragraphs 2.2.3.l Clarifies requirements for test when the boom is over the front.

Paragraphs 2.2.3.1 For main and boom hoists, added static and dynamic tests for emergency brakes on wire rope drums.

Paragraphs 2.2.4.1 For auxiliary hoist, added static and dynamic tests for emergency brakes on wire rope drums.

Paragraphs 2.2.5.1 For whip hoist, added static and dynamic tests for emergency brakes on wire rope drums.

Paragraph 5.1 Revises the test load for crawler cranes.

Paragraph 5.2 Relocates certain requirements to sections 3 and 10.

Paragraph 5.5.1 Adds note addressing lifting limitations due to wire rope build up on the drum.

Paragraph 5.5.2 Clarifies notes. Deletes subparagraph c (hydraulic component slippage).

Paragraphs 6.1.1.1 Adds tests for emergency brakes on wire rope drums (shaft failure detection systems).

Paragraph 6.2.1.c Combines with hoist dynamic load brake test. Deletes requirement to lower test load to ground prior to resuming test.

Paragraph 6.2.1.d Adds note addressing holding brakes that can not be released by hand or otherwise defeated without disassembly.

Paragraphs 6.2.1.f Adds tests for emergency brakes on wire rope drums (shaft failure detection systems).

Paragraph 7.2.1.b Combines with hoist dynamic load brake test.

Paragraph 7.2.1.c Deletes requirement for disassembly of mechanical load brakes (now addressed in appendix D).

Appendix F Adds examples of load controlling electrical components and operational safety devices.

Appendix G Adds note emphasizing importance of providing sufficient instruction on mobile crane load charts.

Appendix M Adds derricks. Adds reference to OPNAVINST 4780.6. Adds instructions for certifying container spreaders and special rigging gear.

Appendix N Requires training and demonstration of proficiency for category 3 crane operators. Addresses knowledge requirements for ordnance handlers. Adds knowledge of section 10 and section 14 for riggers. Revises knowledge requirements for rigging supervisors.

Appendix P Adds certificate of compliance for contractors to post on crane. Adds checklist for surveillance of contractor crane operations.

Appendix Q References added and updated.

## CONTENTS

Foreword	i
Acknowledgments	ii
Change Record	iii
Change Synopsis	iv

### SECTIONS

1	General Overview	1-1
2	Maintenance	2-1
3	Certification	3-1
4	Crane Alterations	4-1
5	Equipment History File	5-1
6	Operator Licensing Program	6-1
7	Operator Qualification and Testing	7-1
8	Licensing Procedures and Documentation	8-1
9	Operator Inspections	9-1
10	Operation Safety	10-1
11	Additional Requirements	11-1
12	Investigation and Reporting of WHE Accidents	12-1
13	Line Handling Mechanisms (Capstans and Winches)	13-1
14	Crane Rigging Gear and Miscellaneous Equipment	14-1

### APPENDICES

A	Glossary	A-1
B	Types of Weight Handling Equipment and Line Handling Mechanisms	B-1
C	Maintenance Inspection Specification for Category 1 Cranes	C-1
D	Maintenance Inspection Specification for Category 2 and 3 Cranes	D-1
E	Crane Test Procedures	E-1
F	Examples of Load Bearing Parts, Load Controlling Parts, and Operational Safety Devices	F-1
G	General Crane Safety Course	G-1
H	Category 2 and Cab Operated Category 3 Crane Safety Course	H-1
I	Basic Questions for Category 1 and 4 Crane Operators Written Test	I-1
J	Basic Questions for Category 2 and Cab Operated Category 3 Crane Operators Written Test	J-1
K	Basic Performance Test for Weight Handling Equipment Operator License, Category 1 and 4 Cranes	K-1
L	Basic Performance Test for Weight Handling Equipment Operator License, Category 2 and Cab Operated Category 3 Cranes	L-1
M	Procedures for Third Party Certification by the Navy Crane Center	M-1
N	Personnel Qualifications	N-1
O	Navy Crane Center Policy and Guidance for Crane Alteration Requests	O-1

## CONTENTS (continued)

### APPENDICES (continued)

P	Contractor Crane Requirements	P-1
Q	References	Q-1
R	Related Documents	R-1

Index	Index-1
-------	---------

### FIGURES

1-1	Request for Clarification, Deviation, or Revision	1-10
2-1	Weight Handling Equipment Deficiency Report	2-7
3-1	Certification of Load Test and Condition Inspection	3-9
3-2	Certification of Load Test and Condition Inspection (Supplement for Mobile Cranes)	3-10
3-3	Crane Condition Inspection Record	3-11
4-1	Crane Alteration Request, Continuation Sheet	4-8
4-2	Mandatory Alteration	4-11
8-1	Application for Crane Operator License	8-5
8-2	Crane Operator License	8-7
8-3	Crane Operator License Record	8-8
9-1	Crane Operator's Daily Checklist	9-8
10-1	Standard Hand Signals for Controlling Crane Operations	10-13
10-2	Standard Hand Signals for Controlling Overhead and Gantry Cranes	10-16
10-3	Danger Zone for Cranes and Lifted Loads Operating Near Electrical Transmission Lines	10-17
11-1	Dead Ending Rope in a Socket	11-5
12-1	Weight Handling Equipment Accident Report	12-3
14-1	Choker Hitch Configurations	14-8
M-1	Certificate of Unit Test and/or Examination of Crane, Derrick, or Other Material Handling Device	M-3
M-2	Notice to Owner of Deficiencies Found on Certification Survey	M-4
P-1	Certificate of Compliance	P-1
P-2	Contractor Crane Operation Checklist	P-2

### TABLES

5-1	Equipment History File	5-1
11-1	Load Ratings for Various Types of Mountings	11-2
14-1	Test Load Percentages	14-3
14-2	Maximum Allowable Wear on Chain Sling Links	14-5
14-3	Efficiency Factors for Various Wire Rope Slings	14-7
14-4	Rated Loads for Wire Rope Slings in a Choker Hitch	14-8
14-5	Rated Loads for Synthetic Fiber Rope Slings in a Choker Hitch	14-11
14-6	Rated Loads for Synthetic Webbing Slings and Roundslings in a Choker Hitch	14-13
14-7	Eye Bolt Loading for Shoulder Eye Bolts	14-16



## SECTION 1 GENERAL OVERVIEW

1.1 Introduction. This publication provides requirements for the maintenance, inspection, test, certification, repair, alteration, operation, and/or use of weight handling equipment (WHE) and related equipment (see sections 13 and 14) under the technical cognizance of the Naval Facilities Engineering Command (NAVFAC). Activities covered include Navy shore activities, the Naval Construction Force (NCF), Naval Special Operating Units (SOU), and the Naval Construction Training Center (NCTC). These criteria are the minimum requirements for all applicable equipment. This publication meets or exceeds all applicable OSHA requirements for maintenance, inspection, testing, certification, repair, alteration, and operation of equipment covered herein.

1.1.1 Exceptions. Units of the NCF and SOU are exempt from compliance with those portions of this publication that would preclude the execution of their wartime tasking in a strictly military unique operation. This includes Elevated Causeway “Modular” (ELCAS “M”), Elevated Causeway “Navy Lighterage” (ELCAS “NL”), and contingency embarking operations and exercises. Commanders of these units shall make every effort to ensure these inherently dangerous operations are conducted in the safest possible manner. Ample training and standard operation procedures shall be established and reviewed annually.

1.2 Purpose. The purposes of this publication are:

- a. To maintain the level of safety and reliability built into each unit of applicable equipment by the original equipment manufacturer (OEM);
- b. To ensure optimum service life;
- c. To provide uniform standards for licensing of WHE operators;
- d. To ensure the safe lifting and controlling capability of WHE and promote safe operating practices through the inspection, test, certification, qualification, and operation requirements prescribed herein.

The inspection and test criteria for WHE address most of the features and components on typical cranes. If a crane is equipped with features or components not specifically covered by these requirements, those features and components shall be inspected and tested (where testing is practical, as determined by the certifying official) for proper condition and operation, e.g., emergency dynamic braking, motor overspeed sensors, travel and rotate limit switches, load indicating devices, and micro drives.

### 1.3 Applicable Equipment

1.3.1 Sections 1 through 12. Sections 1 through 12 apply to the following types of equipment. Included are barge mounted cranes (category 1 through 4) at shore activities.

#### Category 1 cranes

Portal cranes  
Hammerhead cranes  
Locomotive cranes  
Derricks  
Floating cranes (YD)  
Tower cranes  
Container cranes  
Mobile cranes (except those indicated as category 4) including truck, cruiser, crawler, warehouse/industrial cranes, and cranes used for dragline, pile driving, clamshell, magnet, and bucket work  
Aircraft crash cranes

Category 2 and 3 cranes (Cranes with rated capacities of 20,000 pounds or greater are category 2. Cranes with rated capacities less than 20,000 pounds are category 3.)

Overhead traveling cranes  
Gantry cranes (rail mounted)  
Wall cranes  
Jib cranes  
Pillar cranes  
Pillar jib cranes  
Monorails and associated hoists  
Fixed overhead hoists, including chainfalls that are designated for use at the same location on a continuing basis  
Pedestal mounted commercial boom assemblies (fixed length, telescoping, and articulating types) attached to trucks, trailers, flatbeds, or railcars, or stationary mounted to piers, etc., with rated capacities less than 2,000 pounds.

#### Category 4 cranes

Commercial truck mounted cranes  
Truck mounted articulating boom cranes  
Pedestal mounted commercial boom assemblies (fixed length, telescoping, and articulating types) attached to stake trucks, trailers, flatbeds, or railcars, or stationary mounted to piers, etc., with capacities 2,000 pounds and greater.

Sections 1 through 12 also apply to cranes installed ashore for training on shipboard operations unless such equipment is managed under an alternate Navy standard.

1.3.2 Section 13. Section 13 applies to line handling mechanisms (capstans, winches, windlasses, etc.), including line handling mechanisms on floating cranes. Unless noted, the requirements of sections 2 through 12 do not apply to line handling equipment.

1.3.3 Section 14. Section 14 applies to the following equipment used in weight handling operations:

- Rigging gear (slings, shackles, eyebolts, swivel hoist rings, links, rings, turnbuckles, etc.)

- Portable chainfalls and hoists (except chainfalls that are designated for use at the same location on a continuing basis)

- Portable load indicators (dynamometers, load cells, crane scales, etc.)

- Below the hook lifting devices as identified in ASME B30.20

- Portable A-frames, portable floor cranes, and portable gantries used for general lifting

- Cranes and hoists procured with, integral to, and used solely in support of larger machine systems (milling machines, press brakes, shore power booms, etc.).

Unless noted, the requirements of sections 2 through 11 do not apply to this equipment.

1.4 Special Definitions. A thorough understanding of the following definitions is essential to the use of this publication. Additional terms that are used in reference to WHE are included in appendix A.

- a. Load Bearing Parts. Those parts of WHE that support the load and upon failure could cause dropping, uncontrolled shifting, or uncontrolled movement of the load.

- b. Load Controlling Parts. Those parts of WHE that position, restrain, or control the movement of the load (e.g., rotate and travel brakes, clutches) a malfunction of which could cause dropping, uncontrolled shifting, or uncontrolled movement of the load. Crane mounted diesel engines, generators, electrical power distribution systems, and electrical control circuits, associated with the movement of the load, shall be treated as load controlling parts.

Note: Backup components to primary load bearing and load controlling parts, such as secondary brakes, shall also be considered as load bearing or load controlling parts.

- c. Safety Devices

- (1) Operational Safety Devices. Safety devices that affect the safe load lifting and handling capability of the equipment, such as interlocks, limit switches,

load/load moment and overload indicators with shutdown capability, emergency stop switches, radius indicating devices, and locking devices.

(2) General Safety Devices. Safety devices, such as bells, horns, warning lights, and bumpers, that provide protection for operation and maintenance personnel and equipment on, or in the operating path of, cranes.

Note: See appendix F for additional examples of load bearing and load controlling parts and operational safety devices.

d. Major Deficiency. A deficiency of a load bearing or load controlling part or operational safety device that hinders the safe operation or reduces the load bearing or load controlling capability of the equipment or component.

e. Alteration. An alteration constitutes any change in the OEM's WHE design configuration. This includes:

Replacement of parts and components with parts or components not identical with original (i.e., changes in material, dimensions, or design configuration), except as noted in section 4.

Addition of parts or components not previously a part of the equipment.

Removal of components that were previously a part of the equipment.

Rearrangement of parts or components.

Alteration of existing parts and materials.

f. Certifying Official. The individual(s), designated by the activity commanding officer, responsible for ensuring the activity's WHE is inspected and tested in accordance with the requirements herein, and that the WHE is safe to use for its intended purpose.

g. Third Party Certification. Certification of floating cranes used in shipbuilding, ship repair, or shipbreaking operations and all types of cranes and certain related gear used in longshoring operations by an OSHA approved certification agency. This certification is in addition to the certification requirements of section 3.

1.5 Qualifications of Personnel. Personnel involved in the maintenance, alteration, repair, inspection, testing, and operation of WHE, shall be technically competent to perform their assigned duties. Specific requirements for crane operator qualification and licensing are addressed in sections 6 and 7. For other personnel involved in the WHE program, see appendix N for qualification and/or training requirements. Records of training or other verification of competency shall be maintained.

1.6 Third Party Certification of Cranes, Derricks, and Other Devices used in Longshoring Operations, and Floating Cranes and Floating Derricks used in Shipbuilding, Ship Repair, and Shipbreaking. To satisfy OSHA requirements, to which

this publication has been approved as an alternate standard, cranes, derricks, and certain other devices (see paragraph 1.6.2) used in longshoring operations, and floating cranes and floating derricks used in shipbuilding, ship repair, and shipbreaking shall be certified by an OSHA recognized certification agency. The Navy Crane Center is recognized by OSHA as a third party certifier of Navy owned cranes per the requirements of this publication. Third party certification requirements apply to cranes and other devices at Navy activities in the United States and its territories.

Note: Non-floating cranes, derricks, and other devices used in shipbuilding, ship repair, and shipbreaking do not require third party certification. Lifting of components, materials, parts, etc. associated with shipbuilding, ship repair, or ship breaking, is not longshoring.

The term "longshoring operations" is defined in the Code of Federal Regulations (29 CFR 1918) as the loading, unloading, moving, or handling of cargo, ship's stores, gear, or any other materials, into, in, on, or out of any vessel. Included in the certification program are cranes that are placed aboard barges or other vessels and are used for longshoring operations.

In accordance with 29 CFR 1918.1, effective 21 January 1998, longshoring work performed with the use of shore-based cranes and derricks is governed by 29 CFR 1917. Mobile cranes placed aboard vessels for longshoring work will continue to be governed by 29 CFR 1918. The following is Navy policy for implementation of the certification requirements of these standards.

1.6.1 Cranes and Derricks. For Navy owned cranes and derricks, third party certification shall be performed by the Navy Crane Center. This third party certification is in addition to certification by the designated certifying official as addressed in section 3. For Navy owned cranes and derricks operated or maintained by contract (e.g., base operating services contracts), certifying officials shall ensure contracting officers include the requirement for Navy Crane Center third party certification of applicable cranes in contracts. See appendix M for certification procedures.

For all other cranes and derricks (including rented, leased, and contractor owned and operated cranes and derricks) used in the above noted operations, third party certification shall be by an OSHA accredited certification agency in accordance with OSHA regulations. A list of currently accredited agencies may be obtained from the area OSHA office.

Note: Cranes and derricks used in longshoring shall be fitted with a load indicating (or alternate) device meeting OSHA requirements. The load indicating device may be integral with the crane or may be hung from the hook provided a readout is located in the crane cab. A load indicating device is not required when the crane is used to handle cargo, stores, or material that is known (i.e., units hoisted are marked) to weigh less than 11,200 pounds and when 11,200 pounds is less than the rated capacity of the

crane at the maximum radius possible under the conditions of use at the time. Additionally, portal and bridge cranes used in longshoring operations shall be fitted with a wind indicating device meeting OSHA requirements.

**1.6.2 Container Spreaders and Below the Hook Lifting Devices.** (Examples of below the hook lifting devices requiring third party certification include spreader beams, lifting devices for unique cargo, and bar pallet bridles that have some components that are not off-the-shelf items.)

Container spreaders and below the hook lifting devices (i.e., does not include common rigging gear) with rated loads greater than 10,000 pounds purchased or manufactured after 21 January 1998 shall have a third party certification by an OSHA recognized agency prior to use. This is a one-time third party certification. For Navy owned devices, the certification shall be by the Navy Crane Center and shall include an inspection and load test at the test load percentages noted in table 14-1. Third party certifications shall be retained in the equipment's history file for the life of the gear. For contractor owned devices used in longshoring, the requirements of 29 CFR 1917.50(c) apply. Third party certification is not required for devices purchased or manufactured prior to 21 January 1998, or for devices with rated capacities of 10,000 pounds or less.

## **1.7 Non-Navy Owned Cranes at Naval Activities**

**1.7.1 Rented or Leased Cranes Operated by Navy Employees and Base Operating Service (BOS) Contractor Employees.** Rented or leased cranes shall be inspected, load tested, and certified to the requirements of section 3 prior to use. Where the contractor does not permit overload testing, the capacity of the crane shall be administratively reduced such that the resultant capacity plus 10 percent will not exceed the contractor's rating of the crane. The crane shall be tested accordingly. For long term leases (over 4 months), the maintenance and inspection requirements of section 2 shall also apply. These requirements shall be included in rental and lease contracts.

Crane operators shall be licensed in accordance with the requirements of sections 6 through 8 (or equivalent for BOS contractor personnel). Crane operations shall be in accordance with sections 9 through 12.

**1.7.2 Contractor Operated Cranes.** In addition to cranes rented or leased for operation by an activity, other non-Navy owned cranes are frequently utilized on activity property. These cranes can be from a variety of sources and are generally incidental to construction contracts, ship repair contracts, demolition contracts, maintenance and other service contracts, deliveries of supplies and equipment, etc. Numerous organizations, including tenant activities, ships, supply departments, ROICC's, etc., have contracting authority and very often the need for cranes is not anticipated when contract documents are written. The following requirements apply to any contracted work at a naval activity.

Activity (i.e., host activity) commanding officers shall promulgate the following minimum requirements to tenants and contracting officers for inclusion in contracts, statements of work, purchase orders, etc:

- a. Require the contractor to comply with specific activity regulations pertaining to crane safety and operation, and to notify the contracting officer, in advance, of any cranes entering the activity. Require the contractor to comply with ASME B30.5 for mobile cranes, and ASME B30.22 for articulating boom cranes.
- b. Require a certificate of compliance from the contractor (appendix P) that the crane and rigging gear meet applicable OSHA regulations (with the contractor citing which OSHA regulations are applicable, e.g., cranes used in longshoring shall comply with 29 CFR 1917; cranes used in construction, demolition, or maintenance shall comply with 29 CFR 1926; cranes used in ship repair shall comply with 29 CFR 1915). For cranes at naval activities in foreign countries, the contractor shall certify that the crane and rigging gear conform to the appropriate host country safety standards. The contractor shall also certify that all of its crane operators working on the naval activity have been trained not to bypass safety devices (e.g., anti-two block devices) during lifting operations. Require that the certifications be posted on the crane.
- c. Require the contractor to certify (appendix P) that the crane operator is qualified and trained for the operation of the crane to be used.
- d. Require a critical lift plan for each of the following lifts: lifts over 80 percent of the capacity of the crane or hoist (at any radius of lift); lifts involving more than one crane or hoist; lifts of personnel; and lifts involving non-routine rigging or operation, sensitive equipment, or unusual safety risks. The plan shall include the following as applicable:
  - (1) The size and weight of the load to be lifted, including crane and rigging components that add to the weight. The OEM's maximum load capacities for the entire range of the lift shall also be provided.
  - (2) The lift geometry, including the crane position, boom length and angle, height of lift, and radius for the entire range of the lift. Applies to both single and tandem crane lifts.
  - (3) A rigging plan, showing the lift points, rigging gear, and rigging procedures.
  - (4) The environmental conditions under which lift operations are to be stopped.
  - (5) For lifts of personnel, the plan shall demonstrate compliance with the requirements of 29 CFR 1926.550(g).

e. Require the contractor to provide the contracting officer within 30 days of any accident (see definition in section 12) a Weight Handling Equipment Accident Report using the form provided in section 12 consisting of a summary of circumstances, an explanation of causes(s), photographs, and corrective actions taken. Require the contractor to notify the contracting officer as soon as practical, but not later than four hours, after an accident involving a fatality, in-patient hospitalization, overturned crane, collapsed boom, or any other major damage to the crane or adjacent property. Require the contractor to secure the accident site and protect evidence until released by the contracting officer. Require the contractor to conduct an accident investigation to establish the root cause(s) of the accident. Crane operations shall not proceed until cause is determined and corrective actions have been implemented to the satisfaction of the contracting officer. These notifications and reporting requirements are in addition to those promulgated by OPNAVINST 5100.23 and related claimant instructions.

f. For NAVFAC construction contracts, the Corps of Engineers Manual EM 385-1-1 and NAVFAC Guide Specification NFGS-01525 apply and shall be cited. The requirements of subparagraphs a, b, and e above shall also be included. The requirements of subparagraphs c and d above are included in EM 385-1-1 and need not be cited.

The host activity shall ensure that contracts contain the above requirements, concur with the contracting officer's oversight plan (paragraph 1.7.2.1), ensure that the oversight plan is being carried out, and provide oversight of contractor accident investigations and corrective actions.

**1.7.2.1 Contracting Officer Responsibilities.** The contracting officer shall include the minimum requirements of paragraph 1.7.2 for contractor cranes in contracts, ensure compliance with contract requirements, provide oversight of contractor crane operations, and provide oversight of contractor accident investigations and corrective actions. The degree of oversight shall be based upon the risk to Government personnel and property. Appendix P provides a checklist that shall be used during oversight of contractor crane operations. The host activity shall concur with the oversight plan. Additionally, the contracting officer shall notify the Navy Crane Center and host activity of an accident involving a fatality, in-patient hospitalization, overturned crane, collapsed boom, or any other major damage to the crane or adjacent property as soon as possible, preferably within 24 hours of notification by the contractor. The contracting officer shall provide the Navy Crane Center and host activity a copy of the accident report upon receipt from the contractor. These requirements are in addition to any notification and reporting requirements promulgated in OPNAVINST 5100.23 and claimant instructions.

**1.7.3 Cranes Owned by Other Military Services and Other Government Agencies.** Where Navy personnel may be exposed to crane operations of tenant commands of other military services and agencies, the host activity commanding officer shall establish and promulgate a policy to ensure the safe operation of the equipment. The policy shall



include, as appropriate, requirements addressed in paragraph 1.7.2 for contractor operated cranes. For Navy personnel who operate cranes owned by other services and agencies, the training, licensing, and operational requirements of this publication apply.

1.8 Non-Applicable Equipment. This publication does not apply to WHE installed on naval vessels, including cranes on floating drydocks. Requirements for shipboard WHE are covered in applicable NAVSEA technical publications. Also excluded are specialized (non-weight handling) and personnel lifting equipment covered by NAVFAC P-300; vertical transportation equipment (stacker cranes, conveyors, automobile lifts, etc.) covered by NAVFAC MO-118; material handling equipment covered by applicable Naval Supply Systems Command criteria; ground support equipment covered by applicable Naval Air Systems Command criteria; equipment covered by Strategic Systems Program Ordnance Data (OD) criteria; and NAVSEA approved ordnance handling equipment.

1.9 Record Formats. Sample formats shown throughout this publication show the minimum information required to be maintained for record purposes. Activity generated forms may be substituted, provided they include the information required. Activities may delete items from the sample forms provided they are not applicable to the subject equipment. Local reproduction of the forms is authorized.

1.10 Audits and Self-Assessments. As directed by SECNAVINST 11260.2, audits of weight handling programs at Navy shore activities are periodically conducted by the Navy Crane Center in accordance with NAVFAC Instruction 11200.33. Activities shall perform a self-assessment and provide the results of the assessment to the Navy Crane Center approximately 30 days prior to the audit. Major claimants shall coordinate responses and corrective actions resulting from audits with their field activities. A copy of the responses shall be provided to the Navy Crane Center.

1.11 Implementing Procedures. Activities shall develop standard written procedures for managing their weight handling program that implement the applicable requirements of this publication.

1.12 Request for Clarification, Deviation, or Revision. Requests for clarification, deviation, or revision to this manual shall be documented using a "Request for Clarification, Deviation, or Revision," figure 1-1. The form is designed for fax transmission without a cover page. Appropriate references, enclosures, background, and reason for request shall be provided.

REQUEST FOR CLARIFICATION, DEVIATION, OR REVISION				
CHECK APPROPRIATE BOX:		CLARIFICATION		DEVIATION
ACTIVITY:		ACTIVITY REQUEST NUMBER:		
SUBJECT:				
PREPARED BY:	PHONE:		FAX:	DATE:
APPROVED BY:	PHONE:		FAX:	DATE:
REFERENCE(S):				
ENCLOSURE(S):				
PURPOSE:				
BACKGROUND:				
DISCUSSION:				
REQUEST:				
NCC RESPONSE:				
NCC CONTROL NUMBER:				
PREPARED BY:	PHONE: DSN 443-0505/(610) 595-0505		FAX: 0812	DATE:
APPROVED BY:	PHONE: DSN 443-0505/(610) 595-0505		FAX: 0812	DATE:

FIGURE 1-1 (1 of 2)

## REQUEST FOR CLARIFICATION, DEVIATION, OR REVISION INSTRUCTIONS

This form is designed for facsimile transmission without a cover page and, with enclosures and signatures, shall be the official document.

1. Clarification, Deviation, or Revision: Check appropriate block.
2. Activity: Enter the Standard Navy Distribution List (SNDL) plain language address (PLA) and unit identification code (UIC) for your activity.
3. Activity Request Number: Enter the request number from your activity in the following format: UIC-FY-OOOO i.e., your unit identification code, a dash, the current fiscal year, a dash, and the number of the request from your activity in sequence (use four digits).
4. Subject: Enter the paragraph or other part of the manual addressed.
5. Prepared by: Enter the name, code, phone, and fax extension of the person preparing the request.
6. Approved by: Enter the name, code, phone, and fax extension of the person approving the request.
7. Date: Enter the date the request was prepared.
8. Reference(s): Enter the applicable references.
9. Enclosure(s): List the applicable enclosures.
10. Purpose: State the purpose of the request in one or two short sentences.
11. Background: State the background or reason that prompted the request.
12. Discussion: State the rationale behind the request.
13. Request: State the specific request.
14. NCC Response, etc.: Reserved for NCC use.

FIGURE 1-1 (2 of 2)

(INTENTIONALLY LEFT BLANK)

## SECTION 2 MAINTENANCE

2.1 Maintenance Inspections. Maintenance inspections of WHE shall be performed at the frequencies and in the detail specified in this section. In general, inspections shall consist of observing the functioning of the specified components and parts before, during, and after operation. Examination shall be by sight, sound, touch, and, as necessary, instrumentation, nondestructive testing, and disassembly.

Primary emphasis during inspections shall be given to ensuring maximum safety by maintaining all load bearing and load controlling parts and operational safety devices in a safe and sound working condition. Inspectors shall not engage in calculated risks or depend on their judgement alone where there is a doubt in their mind regarding a questionable condition of such parts. Questionable conditions of load bearing and load controlling parts and operational safety devices shall be referred immediately to the activity engineering organization and, if necessary, to the certifying official for resolution.

Maintenance of the crane portion of floating cranes shall be in accordance with this publication. Maintenance of the barge shall be in accordance with OPNAVINST 4790.4.

2.1.1 WHE Deficiencies. Deficiencies (and corrective actions) to load bearing and load controlling parts and operational safety devices shall be documented and filed in the equipment history file. Deficiencies include failure or malfunction of components and discrepancies between design drawings and crane configuration. In those instances where a deficiency is detected that has applicability at other Navy activities, the Navy Crane Center shall be notified within five days of the discovery. A summary report of the deficiency, including corrective actions taken or recommended, shall be forwarded to the Navy Crane Center within 21 days. Figure 2-1 shall be used to report the deficiency to the Navy Crane Center.

2.2 Inspection Specifications. Maintenance inspection specifications are identified in appendices C and D for crane categories 1, 2, and 3. (See section 1 for categories of cranes.) These prescribe the type of inspection (A, B, C, or annual), the components and parts to be inspected, and the inspection action. The extent of disassembly shall be as noted. Each activity shall develop Maintenance Inspection Specification and Record forms in accordance with the sample formats shown in appendices C and D. For unique items not covered, additional inspection attributes shall be included. Inspection specifications for category 4 cranes shall be developed by the activity based on applicable portions of appendix C and as recommended by the OEM.

2.2.1 Specification Data Sheets. Each activity shall augment the specifications noted above with specification data sheets. These shall contain all guidance and technical

information needed by inspectors in checking for wear, adjustments, settings, and tolerances during inspections. This information shall be extracted from OEM's technical manuals, maintenance experience, and other authoritative technical sources. Measurement locations for verifying settings shall be clearly identified.

2.2.2 OEM's Supplemental Service Information. Manufacturers, particularly of mobile cranes, often issue information (e.g., "service bulletins") more current and supplemental to that in the maintenance manual furnished with a particular crane. Much of the information pertains to the maintenance of the crane. Activities shall contact the OEM or authorized distributor for supplemental service information applicable to their cranes, and, if practical, be added to the OEM's distribution list for such information.

2.3 Inspection and Corrective Action. Maintenance Inspection Specification and Record forms shall be used to record conditions at each inspection and shall be filed in the equipment history file. All inspection determinations shall be recorded as satisfactory, unsatisfactory, or not applicable. Where measurements are specified or required for acceptance, the actual readings shall be recorded.

Brake data measurements shall be recorded on the "Brake Data" sheet shown in appendices C and D. Measurement attributes and criteria shall be based on brake OEM recommendations. Where measurements are inaccessible without disassembly, those measurements need only be taken when disassembly takes place per appendix C or D.

Where an unsatisfactory condition is found, the item shall be identified on the "Unsatisfactory Items" sheet together with a statement of the condition observed. Corrective action in terms of adjustments, repairs, or replacements of items shall be detailed on a Shop Repair Order (SRO) or other appropriate document. (See NAVFAC P-300 for a sample SRO.) The repair document number shall also be recorded.

SRO's and other work documents involving repair, replacement, disassembly, alteration, or adjustment to load bearing parts, load controlling parts, and operational safety devices shall be reviewed by the inspector or engineer prior to starting the work. Work documents shall clearly describe the work to be done, including replacement parts to be installed. Components to be repaired or replaced shall be identified to specific subsystems (e.g., main hoist motor to gearbox coupling) or location (e.g., hydraulic return hose for left rear outrigger jack). When recertification will be required after accomplishment of the work, this requirement shall be noted on the work document.

Before repairs are made to cranes, the following precautions shall be taken as appropriate: (See section 11 for tagging and lockout requirements.)

- a. The crane to be repaired shall be run to a location where it will cause the least interference with other cranes and operations in the area.

- b. All controllers shall be in the “off” position.
- c. The main or emergency switch shall be open and locked in the open position.
- d. Warning or “out of order” signs shall be placed on the crane, and on the floor beneath or on the hook where visible from the floor.
- e. Where other cranes are in operation on the same runway, rail stops or other suitable means shall be provided to prevent interference with the idle crane.

After adjustments and repairs are made, the crane shall not be returned to service until all guards have been reinstalled, safety devices reactivated, and maintenance equipment removed.

2.3.1 Replacement Parts. Replacement load bearing and load controlling parts and safety devices shall be identical to those of the original design. Where circumstances require substitution of either material or design configuration, such matters shall be referred to the activity engineering organization for resolution.

2.3.2 Reinspection. Where the adjustment, repair, or replacement has been performed satisfactorily and the original unsatisfactory condition eliminated, the inspector shall sign the repair document to verify actions taken have corrected the reported deficiency. Reinspection shall include an operational test where appropriate.

2.3.3 Deferral of Work. Major deficiencies shall be corrected prior to certification. If it is not practical to complete other work (i.e., not affecting the safe operation of the crane) to load bearing and load controlling parts and operational safety devices, such work may be deferred upon approval by the certifying official. Engineering justification for deferral shall be provided. The work shall be completed prior to the next annual certification.

2.4 Maintenance Inspection Types and Frequency. Routine inspections shall be scheduled and performed for the various categories of WHE as follows. (Annual maintenance inspections and Type “B” maintenance inspections when performed on a calendar month basis shall be performed in conjunction with the annual certification.) (See section 1 for identification of crane categories.)

2.4.1 Category 1 Cranes. The activity has the option of basing maintenance inspections on engine operating hours as recorded on the hour meter on the main engine, or time intervals in calendar months (the scheduling basis may vary among cranes of the same type). The schedule shall establish either one or the other of these criteria (not whichever comes later). The scheduling basis (hour meter or calendar

month) shall be annotated in the equipment history file for the crane. A type "B" inspection shall be accomplished before the option to change is exercised.

#### 2.4.1.1 Type Designation and Frequency

- a. Type "Prior to Use". By operator, using the Crane Operator's Daily Checklist. (See section 9.)
- b. Type "A" Inspection (Appendix C). Calendar month basis - each 4 calendar months (plus 10 days) after certification. Hour meter basis - each 500 engine operating hours (plus 50 operating hours).
- c. Type "B" Inspection (Appendix C). Calendar month basis - at every third type "A" inspection. Hour meter basis - each 2,000 engine operating hours (plus 200 operating hours), except that a type "B" inspection shall be performed annually as a minimum.
- d. Type "C" Inspection (Appendix C). Calendar month basis - at every third type "B" inspection. Hour meter basis - each 8,000 engine operating hours (plus 800 operating hours).

Note: A type "B" inspection shall also include all items designated under type "A" inspection. A type "C" inspection shall also include all items designated under type "A" and "B" inspections.

#### 2.4.2 Category 2 Cranes and Cab Operated Category 3 Cranes

##### 2.4.2.1 Type Designation and Frequency

- a. Type "Prior to Use". By operator, using Crane Operator's Daily Checklist.
- b. Type "Annual" (Appendix D). An annual inspection of items specified in the Crane Maintenance Inspection Specification.

#### 2.4.3 Category 3 Cranes (Except Cab Operated)

##### 2.4.3.1 Type Designation and Frequency

- a. Type "Prior to Use". Operational check by user shop. (See section 9.)
- b. Type "Annual" (Appendix D). An annual inspection of items specified in the Maintenance Inspection Specification.

#### 2.4.4 Category 4 Cranes





#### 2.4.4.1 Type Designation and Frequency

- a. Type “Prior to Use”. By operator using Crane Operator’s Daily Checklist.
- b. Type “Annual”. An annual inspection of items specified in the locally developed Crane Maintenance Inspection Specification.

2.5 Lubrication and Servicing. In addition to the inspection specifications prescribed in paragraph 2.2, each activity shall develop local instructions, and schedule and perform lubrication and servicing. Activity and Navy experience and crane usage may be used as a basis for modifying OEM recommended programs. Modification of OEM recommended programs shall be approved by the activity engineering organization.

2.5.1 Lubrication. Lubrication instructions shall be developed using OEM manuals and instructions as a guide when available. Particular attention shall be given to the amount of lubrication to be added at a given interval and ensuring lubricant distribution, especially in areas subject to small rocker motion (i.e., gudgeon or horizontal equalizer pins) or larger diameter bearings (i.e., slewing ring bearings). Over-lubrication is often destructive and shall be avoided. New equipment, even though presumably lubricated by the OEM, shall be checked for sufficient lubricant before being placed in service. Lubrication points on new or repaired equipment shall be checked to verify lubricant acceptance and proper assembly. Lubrication instructions shall minimize the number of different lubricants employed. Maximum utilization of existing lubricant inventories shall be considered.

2.5.2 Servicing. Servicing specifications shall be developed using OEM manuals and instructions for all mechanical and electrical equipment requiring periodic adjustments, tune ups, repairs, or alignments, such as brakes, clutches, engines, electrical and electronic control systems and individual devices, and similar systems and components. Where OEM manuals and instructions are not available or are silent with respect to requirements and standards to be used, national industrial standards and consensus standards shall serve as minimum requirements.

2.5.3 Documentation. Lubrication and servicing actions shall be recorded on an SRO, Operator's Daily Checklist, or other document as appropriate. The documentation recording these actions shall be maintained in the equipment history file. Normally, these services shall be in the manner specified and in accordance with the operating or time intervals developed locally or recommended by the OEM.

2.5.4 Inspection Action. Inspectors shall perform a detailed review of maintenance records and equipment during prescribed inspections to ensure that lubrication and servicing are being properly performed as specified.

2.6 Extension of Inspection and Maintenance Schedules. Requests to extend or adjust a prescribed maintenance inspection or lubrication and servicing schedule, where adherence is in conflict with a work schedule, shall be submitted to the certifying official for approval. Each authorization shall be in writing and shall be filed in the equipment history file.



## **WEIGHT HANDLING EQUIPMENT DEFICIENCY REPORT INSTRUCTIONS**

This form is designed for facsimile transmission without a cover page and, with enclosures and signatures, shall be the official document.

1. Activity: Enter the Standard Navy Distribution List (SNDL) plain language address (PLA) and unit identification code (UIC) for your activity.
2. Deficiency Report Number: Enter the deficiency report number from your activity in the following format: UIC-FY-0000 i.e., your unit identification code, a dash, the current fiscal year, a dash, and the number of the deficiency report from your activity in sequence (use four digits).
3. Subject: Enter the equipment part/component as applicable.
4. Prepared by: Enter the name and code of the person preparing the report.
5. Phone: Enter the phone number (DSN and commercial) of the person preparing the report.
6. Fax: Enter the fax four-digit extension of the person preparing the report.
7. Date: Enter the date the report was prepared.
8. Approved by: Enter the name and code of the person approving the report.
9. Phone: Enter the phone number (DSN and commercial) of the person approving the report.
10. Fax: Enter the fax four-digit extension of the person approving the report.
11. Date: Enter the date the report was approved.
12. Crane Number: Enter the crane number from your activity numbering system.
13. Manufacturer/Year Manufactured: Enter the crane or other equipment manufacturer and the year made.
14. Model/Serial Number: Enter the model and serial number of the affected crane or other equipment.
15. Capacity/Type: Enter the capacity and type of crane or other equipment.
16. Resulted in Accident: Check appropriate box.
17. Type of Accident: List the type of accident if applicable (i.e., personal injury, load collision, crane collision, overload, two blocked, damaged load, derail, dropped load, damaged rigging gear, damaged crane, or other (be specific)).
18. This Report Generated Due to: Check appropriate box.
19. Description of Deficiency: Describe the deficiency. Attach photographs or drawings as necessary to convey the condition.
20. Probable Cause: State the probable cause as concluded from your investigation if applicable.
21. Corrective Action Taken/Recommendation: State corrective action(s) taken and your recommendation for NCC action.
22. For NCC Use: Reserved for NCC use.

FIGURE 2-1 (2 of 2)



## SECTION 3 CERTIFICATION

3.1 Certification Program. The Commanding Officer is responsible for ensuring safety within the activity. He/She shall designate the WHE certifying official(s) who shall ensure the activity's WHE is inspected, tested, and certified in accordance with this section. Certifications shall be based on the condition inspection and load test as prescribed herein. It is the purpose of the condition inspection to ensure that the overall structural, mechanical, and electrical components of the equipment have been maintained in a safe and serviceable condition and are functioning properly. It is the purpose of the load test to ensure by controlled operation with prescribed test loads that the equipment is capable of safely lifting and moving the rated load through all design motions. These inspections and tests shall be performed by technically competent inspection and test personnel under the direction of a designated test director. Upon successful completion of the condition inspection and load test, a Certification of Load Test and Condition Inspection shall be signed by the test director, inspection personnel, and the certifying official.

3.2 Designation of Certification Personnel. The certifying official(s), including alternates, shall be designated in writing by the commanding officer of the activity. The certifying official shall, in turn, designate in writing the authorized test directors and condition inspectors involved in the certification process.

3.3 Certification Action. The Certification of Load Test and Condition Inspection form shall be similar to that shown in figure 3-1. For mobile cranes, if sufficient space is unavailable to show all test loads and configurations, an attachment shall be provided similar to figure 3-2. A card or tag with the crane identification number, certified capacity, date of certification, and the certification expiration date, shall be posted in a conspicuous location on or near the crane. The certification expiration date shall be one day prior to the anniversary date of the annual certification. The crane may remain in service on the expiration date. For example, if the crane is certified 30 June, the expiration date shall be 29 June of the following year. The date of the certifying official's signature is the official certification date, from which the certification expiration date is determined. WHE shall not be returned to service prior to obtaining the certifying official's signature except as provided in paragraph 3.5.4. The certifying official shall withhold certification pending the correction of all inspection deficiencies existing after the load test that, in his/her judgment, could cause unsafe conditions.

### 3.4 Certification Requirements

3.4.1 Annual Certification. The certification (for all crane categories) is valid for one year from the date of signature of the certifying official. A crane shall not be used in service without a valid certification. Except as noted, the certification process shall include a load test. Category 3 cranes designated as jib, pillar, pillar jib, monorail, and

fixed hoist shall be inspected, operationally tested (without load), and certified at least once annually, however, a load test need only be performed at every second annual certification. The certification shall so indicate when a crane is in the biennial load test program. For floating cranes (including mobile cranes mounted on barges), as a condition for certification, the barge shall be determined fit for further service as evidenced by a current material inspection report and documentation of a current depot availability or an approved deferral of depot availability as required by OPNAVINST 4780.6.

**3.4.2 Interim Recertification.** When the adjustment, repair, disassembly, alteration, or replacement of a load bearing part, load controlling part, or operational safety device requires a load test for verification of satisfactory work performed, recertification is required. To determine if a load test is required, the component's impact on holding strength shall be assessed. If holding strength could be affected by the work performed (i.e., failure to make the proper adjustment, repair, etc., could result in dropping, uncontrolled shifting, or uncontrolled movement of the load), then a selective inspection, load test, and recertification shall be performed. This includes rotate and travel components when the rotate or travel function may operate on an inclined plane, such as the rotate function on floating and barge mounted cranes, and a trolley on a luffing boom. When load tests are performed, they shall include applicable portions of both the static and dynamic tests of appendix E. The extent of inspection and testing may be limited, where practical, to those parts and components of systems affected, but shall fully ensure that the adjustment, repair, disassembly, replacement, or alteration has been performed correctly, and that the crane operates properly. (See paragraph 3.5.7 for interim recertification requirements after inadvertently exceeding the certified capacity during operation.)

**3.4.3 Recertification Not Required.** When the adjustment, repair, etc., of a load bearing part, load controlling part, or operational safety device does not require a load test for verification of satisfactory work, recertification is not required. This includes work performed on rotate and travel brakes, friction clutches, and travel components where the load travels in a horizontal plane. However, work documents for all such work shall be approved by a designated inspector or the activity engineering organization prior to starting the work. Work documents shall include a requirement for an operational test. All completed work shall be inspected, and the operational test witnessed, by a designated inspector. After all work is completed and prior to returning the crane to service, the work document shall be signed by the chief engineer or the certifying official. These requirements do not apply to routine maintenance, servicing, or adjustments on diesel engines or generators recommended by the OEM, however, the reinspection requirements of section 2 apply.

For the following, the finished work document is not required to be signed by the chief engineer or certifying official prior to returning the crane to service:



- a. Adjustments, repairs, etc., to travel brakes and travel components on portal cranes due to redundancy.
- b. When any brake or friction clutch's setting is within established tolerance and is re-adjusted within this tolerance.

**3.5 Voiding of Certifications.** All certifications are automatically void after 1 year; after exceeding the certified capacity during operation; upon detection of a major deficiency; or after an adjustment, repair, disassembly, replacement, or alteration of a load bearing or load controlling part or operational safety device which requires a load test for verification of satisfactory work (see exceptions, below and paragraph 3.4.3). A deficiency, adjustment, alteration, etc., to one function (e.g., whip hoist) will not necessarily void the entire crane certification provided the affected function is prevented from operating. Exceeding the certified capacity in a load test of a sample crane during a Navy Crane Center WHE audit or during a third party certification of a longshoring crane will not void a current certification or validation.

**3.5.1 Exception for Extension of Certification for Emergent Conditions.** When an emergent or other contingent condition exists precluding the timely certification of a crane, the commanding officer of the activity using the crane, with concurrence by the certifying official, may approve in writing a temporary extension (not to exceed 45 calendar days) of the current annual certification. Authority to extend a certification shall not be delegated. Before extending the certification, the crane shall pass a complete condition inspection including functional testing through all motions at normal operating speed. Each authorization to extend a certification shall be filed in the crane's equipment history file.

**Note:** Navy Crane Center third party certifications will not be extended.

**3.5.2 Exception for Controlled Disassembly and Re-assembly.** Controlled disassembly and re-assembly of components for inspection will not void the certification under the following conditions:

- a. A written procedure is employed, prepared by the activity and approved by the certifying official and the Navy Crane Center. The procedure, in addition to step by step disassembly and re-assembly instructions, mandates in-process inspections and inspection point sign-offs and appropriate test requirements.
- b. Components shall be easily disassembled and reassembled involving only fasteners, such as pins, bolts, and cap screws. All parts of the component are visible for inspection personnel to insure re-assembly is proper.

c. All parts disassembled, including load bearing and load controlling fasteners, are reused. No parts are replaced, except for consumable items such as cotter pins, lock wires, non-load bearing and non-load controlling fasteners, and washers.

d. Inspection of the disassembled parts shall reveal they are still serviceable, i.e., they have experienced no detrimental deterioration.

**Note:** Controlled procedures, as detailed in this paragraph, are not required for the annual condition inspection of cranes addressed in paragraph 3.5.4.

**3.5.3 Exception for Ancillary Equipment on Mobile Cranes.** Mobile cranes are often equipped with ancillary equipment (jib, boom inserts and extensions, swing-away jib boom, power pinned fly section, multiple counterweights, multiple reeving arrangements, etc.). Changing the OEM's ancillary equipment configuration will not void the annual certification when the following conditions are met:

a. Prior to use, the OEM's ancillary equipment shall have been inspected and tested as part of the crane's annual certification. This applies to each annual certification thereafter.

b. The annual certification shall be valid.

c. A written procedure shall be developed by the activity to install and remove the ancillary equipment. This procedure shall be developed according to the OEM's instructions, this manual, and other applicable directives. The procedure shall define each configuration change, the exact sequencing for the installation and removal, and the selective inspection and operational test required after each assembly and disassembly of the ancillary system. The activity procedure and any changes shall be approved by the certifying official and the Navy Crane Center. There shall be sufficient sign-offs in the procedure to ensure critical evolutions are completed. The approved procedure shall be retained in the equipment history file and the crane operator's instructions. The procedure shall be used each time the OEM's ancillary equipment is changed out.

d. All components (pins, headache ball, hook, etc.) shall be clearly marked to designate their specific location in this system. Their use shall be restricted to the specific mobile crane. Components may not be interchanged unless approved by the OEM.

e. See section 11 for restrictions on the use of wedge sockets for wire rope end connections.

**3.5.4 Exception for Continuance for Productive Service.** The intent of this section is to optimize crane availability for productive service, provided no deficiencies that could

cause an unsafe condition are found during inspections or load test. Crane availability is greatly enhanced when the current annual certification remains in effect. Continuance of the annual certification is achievable by scheduling the inspections and tests for the ensuing annual certification sufficiently in advance of the expiration of the current certification. The following requirements shall apply:

- a. The current annual certification will not be voided by the subsequent annual pre-certification inspections (including adjustments and disassembly of load bearing and load controlling parts) and load test.
- b. No deficiencies that can cause an unsafe condition are found during the inspections or load (or operational) test.
- c. The current certification is still valid.
- d. When the test director has determined that the crane has successfully passed the inspections and load test, it may continue in productive service under the conditions of the current certification.
- e. The new certification shall be signed by the certifying official within 10 calendar days of the date of the completion of the new load (or operational) test. If not, the current certification is void and the crane shall be removed from service.

3.5.5 Exception for Recalibration of Load/Moment Indicating Devices, Radius Indicators, Boom Length Indicators, and Boom Angle Indicators. Recalibration of electronic load/moment indicating devices, radius indicators, boom length indicators, and boom angle indicators by comparing with certified test weights, measured distances, angles, etc., will not void the certification. Where such devices are found to be outside OEM tolerances (or OSHA tolerances if not specified by the OEM), the crane shall be recertified.

3.5.6 Interim Recertification Requirements for WHE in Relocatable Buildings. Certified WHE installed in relocatable buildings shall be recertified after a relocation of the building and prior to use, as follows:

- a. If the crane is installed and secured in the building during relocation, it shall be condition inspected, operationally tested, and certified.
- b. If the crane is removed from the building and reinstalled, it shall be condition inspected, load tested, and certified.

3.5.7 Loading in Excess of Certified Capacity. Except for load tests, WHE shall not be planned to be loaded in excess of its certified capacity without Navy Crane Center

approval. Requests shall verify that there are no other safer means available  
(including

leased equipment) to make the lift. If overloading occurs inadvertently and does not exceed 110 percent of the certified capacity (including appropriate allowance for impact, if any), the effects of the overloading shall be evaluated by the engineering organization and corrective action(s) taken as required. As a minimum, a condition inspection of the affected parts shall be accomplished and the crane shall be operationally tested and recertified. If an inadvertent overload exceeds 110 percent of the certified capacity, a load test is required (along with the condition inspection) for recertification. Where only distinct portions of the equipment are affected (e.g., overload of whip hoist), only those portions need to be inspected and tested.

**3.6 Condition Inspection.** A condition inspection shall be performed before, during, and after the load test. Additionally, for cranes idle for a period greater than six months, a condition inspection shall be performed prior to placing the crane in service. (This does not apply to category 3 jib cranes, pillar cranes, monorails or fixed overhead hoists.) A Crane Condition Inspection Record (CCIR) similar to that shown in figure 3-3 shall be used to record results of the inspection. The inspection shall, in general, be by sight, sound, and touch with the depth and detail limited to that necessary to verify the overall condition. It is not intended to be in the same detail as a maintenance inspection. Each item on the CCIR shall be marked as either satisfactory or unsatisfactory. Where an item or inspection is not applicable, the symbol "NA" shall be used or the appropriate block blanked out. A description of unsatisfactory conditions shall be noted in the "Remarks" portion of the form. The completed CCIR shall be included with the crane certification form submitted to the certifying official. Except for category 3 jib cranes, pillar cranes, monorails, and fixed overhead hoists, the condition inspection shall be a separate inspection from the maintenance inspection addressed in section 2. For category 3 jib cranes, pillar cranes, monorails, and fixed overhead hoists, if no major deficiencies are found in the maintenance inspection, and if no work is done between the maintenance inspection and the load test, the maintenance inspection may serve as the "before" portion of the condition inspection. Both inspection forms shall be fully completed.

In the event that major deficiencies are identified by these inspections, the deficiencies shall be corrected prior to starting or completing the load test. Corrective action shall be properly documented. If a major deficiency is found after the load test, it shall be corrected, and a selective load test shall be performed to test the component(s) corrected. When a selective load test is performed, a condition inspection shall be performed on all items in the Crane Condition Inspection Record that experienced greater than normal loading to ensure that the load test has not caused any damage. A record of this retest shall be recorded in the "Remarks" portion of the Crane Condition Inspection Record.

**3.7. Load Testing.** The load test shall be performed in accordance with the procedures set forth in appendix E and any special requirements specified for the particular crane by the OEM or the activity engineering organization. The actual test load(s), in pounds, together with a list of the applicable test paragraphs of appendix E shall be entered on

the Certification of Load Test and Condition Inspection. The following test load and speed criteria shall be used in all load tests:

**3.7.1 Test Loads.** The nominal test load shall be 125 percent of the rated capacity (110 percent for mobile cranes) unless otherwise limited by OEM specifications. The actual test load shall be within +5/-0 percent of the nominal test load. For mobile cranes, the actual test load shall be based on the combination of test weights, rigging, and specified crane component weights (i.e., hooks, blocks, ancillary devices, etc., and for some cranes the hoist wire rope not accounted for in the load charts). Follow OEM load chart instructions. For category 4 cranes, refer to OEM criteria for component weight requirements and values. For other types of cranes, the actual test load shall be the weight of the load, including rigging gear, suspended from the hook. Testing shall be done with the use of test weights. The use of dynamometers in lieu of lifting test weights is not permitted.

**3.7.1.1 Test Weights.** Test weights shall be marked with a unique identification number and the weight in pounds. The weight marked shall be the actual weight taken from the scale or other measuring device. Weights shall be measured using calibrated equipment traceable to the National Institute of Standards and Technology, with a minimum accuracy of +/- two percent. A list of test weights, with identification numbers and weights, shall be retained. The list shall include the type and serial number (or other identifier) of the weighing device(s) used to weigh the test weights.

**3.7.2 Test Speeds.** During tests, normal operating speeds shall be employed. Rated speeds in accordance with specifications need not be attained. Emphasis shall be placed on the ability to safely control loads through all motions at normal speeds.

**3.7.3 Hoist Roll Back.** When cranes exhibit hoist roll back, as defined in appendix A, the using activity shall ensure:

- a. That the roll back condition is determined to be an inherent condition of the crane. If not, appropriate corrective action shall be taken.
- b. That the roll back characteristic does not preclude continued use of the equipment in the current application.
- c. That the minimum load where roll back occurs be determined for each speed point. This is a one-time test. The loads where roll back occurs shall be clearly posted on the crane and recorded in the crane's equipment history file.
- d. That crane rigging and operational personnel are trained specifically on the crane's characteristics.

- e. That procedures are established for handling loads at or near roll back conditions that require special attention in handling or landing loads in close proximity.

3.7.4 Mobile Cranes Temporarily Mounted on Barges. Mobile cranes certified for use on shore may be mounted on barges. The OEM's load chart and certification based on load testing on shore are invalid when mounting mobile cranes on barges. Barge stability calculations shall be performed and reduced load charts, based on maximum list and trim, shall be established by the activity engineering organization and approved by the certifying official. Prior to use, the crane shall be load tested on the barge (to verify list and trim) and recertified. Test loads shall be 110 (+5, -0) percent of the reduced load chart capacities. List and trim shall not exceed 3 degrees during the load test. Mobile cranes mounted on barges for ship repair or longshoring work (at naval activities in the U. S. and its territories) also require a third party certification per appendix M by the Navy Crane Center. Recertification is not required when returning the crane to shore service at full load capacities.

## CERTIFICATION OF LOAD TEST AND CONDITION INSPECTION

Activity				Building/Location																																																															
Crane No.	Type	OEM's Rated Capacity				Certified Capacity (If different from OEM's rated capacity, explain in "Remarks")																																																													
		Main	_____ lbs.	_____ feet	Main	_____ lbs.	_____ feet																																																												
		Aux	_____ lbs.	_____ feet	Aux	_____ lbs.	_____ feet																																																												
		Whip	_____ lbs.	_____ feet	Whip	_____ lbs.	_____ feet																																																												
<input type="checkbox"/> Annual Certification <input type="checkbox"/> Biennial Load Test Crane <input type="checkbox"/> Interim Recertification (Reason: _____)				Appendix "E" Applicable Crane Test Procedure Paragraphs																																																															
<div style="text-align: center;">Category 1 Cranes *</div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th rowspan="2">Boom Length</th> <th rowspan="2">Test Load %</th> <th colspan="2">Minimum Radius</th> <th colspan="2">Maximum Radius</th> </tr> <tr> <th>Pounds</th> <th>Feet</th> <th>Pounds</th> <th>Feet</th> </tr> <tr><td>Hoist</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Main</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Aux</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Whip</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Other</td><td></td><td></td><td></td><td></td><td></td></tr> </table> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>Hook Tram Measurements</th> <th>Base Meas.</th> <th>Before Test</th> <th>After Test</th> </tr> <tr><td>Main Hook</td><td></td><td></td><td></td></tr> <tr><td>Aux Hook</td><td></td><td></td><td></td></tr> <tr><td>Whip Hook</td><td></td><td></td><td></td></tr> <tr><td>Other</td><td></td><td></td><td></td></tr> </table>								Boom Length	Test Load %	Minimum Radius		Maximum Radius		Pounds	Feet	Pounds	Feet	Hoist						Main						Aux						Whip						Other						Hook Tram Measurements	Base Meas.	Before Test	After Test	Main Hook				Aux Hook				Whip Hook				Other			
Boom Length	Test Load %	Minimum Radius		Maximum Radius																																																															
		Pounds	Feet	Pounds	Feet																																																														
Hoist																																																																			
Main																																																																			
Aux																																																																			
Whip																																																																			
Other																																																																			
Hook Tram Measurements	Base Meas.	Before Test	After Test																																																																
Main Hook																																																																			
Aux Hook																																																																			
Whip Hook																																																																			
Other																																																																			
<div style="text-align: center;">Category 2 Cranes</div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th rowspan="2">Hoist</th> <th rowspan="2">Test Load %</th> <th rowspan="2">Pounds</th> <th colspan="3">Hook Tram Measurements</th> </tr> <tr> <th>Base Meas.</th> <th>Before Test</th> <th>After Test</th> </tr> <tr><td>Main</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Aux</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Other</td><td></td><td></td><td></td><td></td><td></td></tr> </table>								Hoist	Test Load %	Pounds	Hook Tram Measurements			Base Meas.	Before Test	After Test	Main						Aux						Other																																						
Hoist	Test Load %	Pounds	Hook Tram Measurements																																																																
			Base Meas.	Before Test	After Test																																																														
Main																																																																			
Aux																																																																			
Other																																																																			
<div style="text-align: center;">Category 3 Cranes</div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th rowspan="2">Hoist</th> <th rowspan="2">Test Load %</th> <th rowspan="2">Pounds</th> <th colspan="3">Hook Tram Measurements</th> </tr> <tr> <th>Base Meas.</th> <th>Before Test</th> <th>After Test</th> </tr> <tr><td>Main</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Aux</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Other</td><td></td><td></td><td></td><td></td><td></td></tr> </table>								Hoist	Test Load %	Pounds	Hook Tram Measurements			Base Meas.	Before Test	After Test	Main						Aux						Other																																						
Hoist	Test Load %	Pounds	Hook Tram Measurements																																																																
			Base Meas.	Before Test	After Test																																																														
Main																																																																			
Aux																																																																			
Other																																																																			
Annual Certifications Since Hook NDT				Test Director (Signature)		Date																																																													
				Inspector (Signature)		Date																																																													
				Inspector (Signature)		Date																																																													
				Certifying Official (Signature)		Date																																																													
				Expiration Date																																																															
Remarks																																																																			
<small>* For mobile cranes, list all test loads and configurations (e.g., over side/over rear, boom extended/retracted, lifts on tires, travelling, etc.). If necessary, use figure 3-2.</small>																																																																			

FIGURE 3-1



# **CERTIFICATION OF LOAD TEST AND CONDITION INSPECTION (SUPPLEMENT FOR MOBILE CRANE TESTS)**

Complete as applicable for the type of crane certified. Indicate "NA" for configurations that do not apply.

Crane No.

Lattice Boom Crane

Boom Length (Feet)

On Outriggers	Test Load	Radius
Min. Radius		
Max Radius		

On Tires (Stationary)	Test Load	Radius
Min. Radius		
Max. Radius		

On Tires (Pick and Carry)

(Describe configurations and list test loads/radii)

Telescoping Boom Crane

On Outriggers	Test Load	Radius
Min. Radius Boom Retracted		
Min. Radius Boom Extended		

On Tires (Stationary)	Test Load	Radius
Min. Radius		
Max. Radius		

On Tires (Pick and Carry)

(Describe configurations and list test loads/radii)

Other Configurations, including ancillary equipment if applicable.

(Describe and list test loads/radii)

FIGURE 3-2

## CRANE CONDITION INSPECTION RECORD

Note: Inspect components which are reasonably accessible without disassembly.

Crane No.:	Type:	Location:	Operator's Name:		Operator's License No.	
Purpose of Inspection:		Legend: B = Before    A = After D = During		Date Started:	Date Completed:	
Item No.	Item Description			B	D	A
				Insp/	Init.	
1	Inspect structural components for damaged or deteriorated members, and for evidence of loose and missing fasteners and cracked welds.					
2	Inspect wire rope for wear, broken wires, corrosion, kinks, damaged strands, crushed or flattened sections, condition of sockets, dead end connections, and for proper lubrication.					
3	Verify each grooved drum has minimum of two complete wraps of wire rope at lowest working level. For smooth (ungrooved) drums, three complete wraps are required.					
4	Inspect hooks for cracks, sharp edges, gouges, distortion, and freedom of rotation.					
5	Inspect brakes and clutches for condition and proper operation. Spot check components for proper adjustment and acceptable wear.					
6	Inspect controls and control components for condition and proper operation.					
7	Inspect motors for condition and proper operation.					
8	Inspect limit switches for condition and proper operation.					
9	Inspect load indicators for condition and working accuracy.					
10	Inspect mechanical equipment for condition and proper operation.					
11	Inspect sheaves for condition and evidence of loose bearings and misalignment.					
12	Inspect wheels, tires, rollers and roller paths or rails for condition and evidence of loose bearings and misalignment.					
13	Inspect for chains and sprockets for condition and proper operation.					
14	Verify capacity chart or hook load rating data is in view of operator and/or rigging personnel.					
15	Inspect operator's cab for cleanliness and operation of equipment.					
16	Inspect machinery house for cleanliness, proper safety guards, warning signs, and storage of tools and equipment.					

FIGURE 3-3 (1 of 2)

Item No.	Item Description	B	D	A	Insp/ Init.
17	Verify proper operation of indicators, warning devices, and lights.				
18	Verify current inspection of fire protection equipment.				
19	Verify that pressure vessel inspection certificates are posted and current. (See NAVFAC MO-324 or appropriate document for test procedures.)				
20	Inspect outriggers, pads, boxes, wedges, cylinder mountings and level indicators for condition and proper operation.				
21	Inspect travel, steering, braking, and locking devices for condition and proper operation.				
22	Verify accuracy of radius and/or boom angle indicator. See appendix C for verification procedures.				
23	Inspect pawls, ratchets, and rotate locks for proper engagement and operation of interlocks.				
24	Inspect tanks, lines, valves, drains, filters, and other components of air systems for leakage and proper operation.				
25	Inspect reservoirs, pumps, motors, valves, lines, cylinders, and other components of hydraulic systems for leakage and proper operation.				
26	Inspect engines and engine-generator sets for condition and proper operation.				
27	Inspect counterweights and ballast for condition and evidence of loose and missing fasteners.				
28	Inspect barge compartments (voids) for standing water.				
29	Verify accuracy of list and trim indicators against design data or previous test data.				
Remarks:					
Inspector Signature/Date:			Test Director Signature/Date:		

FIGURE 3-3 (2 of 2)



## SECTION 4 CRANE ALTERATIONS

4.1 Crane Alteration Request Form. Alterations to WHE shall be documented using the Navy Crane Center "Crane Alteration Request" form. (See figure 4-1.) The form is designed for facsimile transmission without a cover page and, with enclosures and signatures, shall be the official document.

4.2 Navy Crane Center Approved Alterations. Except as noted, crane alterations to load bearing parts, load controlling parts, or operational safety devices shall be approved by the Navy Crane Center. For definitions of load bearing parts, load controlling parts, or operational safety devices, see section 1. Alteration requests shall be fully developed by the activity engineering organization. Where practicable, concurrence shall be obtained from the crane or component OEM. Requests for approval shall fully describe the proposed alteration and shall include, as appropriate, specifications, design computations, drawings, and bills of material. Alterations approved by the Navy Crane Center may be revised, for reasons such as machining details or other minor changes, with local engineering approval. Alterations conditionally approved by the Navy Crane Center need not be resubmitted for approval if the activity accepts and incorporates all Navy Crane Center comments. Acceptance and incorporation of the Navy Crane Center comments will be documented on all shop work documents. See appendix O for additional guidance on crane alteration requests and Navy Crane Center review policy.

Note: The Navy Crane Center maintains records of all approved crane alterations. These can be made available to activities planning alterations.

4.2.1 Mandatory Crane Alterations. Alterations identified as mandatory are those that shall be accomplished on all cranes specified. They are classified as follows:

- a. Class A (Mandatory-Now): Crane(s) shall be removed from service until alteration is completed.
- b. Class B (Mandatory-Delayed): The time to accomplish will be specified, e.g., within 90 days. Until that time, the crane may remain in service.
- c. Class C (Mandatory-When Needed): This type of alteration previously corrected a deficiency on a particular crane or component. The same alteration shall be made should a similar deficiency occur on an identical crane or component.
- d. Class D (Mandatory-Site Specific): Approved as a unique alteration for an activity or a particular crane. These can be due to environmental concerns or specific working conditions.



Figure 4-2 will be used by the Navy Crane Center to issue mandatory alterations. Activities shall provide notification of completion of the alteration to the Navy Crane Center upon accomplishment. Facsimile transmission is acceptable.

4.2.2 Standing Crane Alterations. Standing alterations issued by the Navy Crane Center are broad in scope, voluntary, and pertain to all cranes where applicable. Examples are fastener substitutions, wire rope substitutions, and replacement of hydraulic hose assemblies. For a current list of standing alterations, contact the Navy Crane Center.

4.3 Locally Approved Crane Alterations. Changes to WHE not involving load bearing parts, load controlling parts, or operational safety devices and not subject to further restrictions listed below, may be approved locally. Locally approved alterations shall be developed by the appropriate engineering organization, fully describing the proposed change, and shall be accompanied as necessary by specifications, design computations, drawings, and bills of material. Locally approved alterations may be in the form of shop work documents but shall have a Navy Crane Center "Crane Alteration Request" cover sheet. Locally approved alterations shall be forwarded to the Navy Crane Center within 14 days after approval.

4.3.1 Alterations Based on Prior Navy Crane Center Approval. Alterations to load bearing parts, load controlling parts, and operational safety devices previously approved by the Navy Crane Center for a particular crane at an activity may be approved locally for the same alteration on identical cranes at the activity.

#### 4.4 Additional Requirements and Exemptions

4.4.1 Changes to OEM's Rated Capacity of WHE. A change to the OEM's published or posted rated capacity of WHE constitutes an alteration as follows:

4.4.1.1 Equipment Related Changes. A change to the OEM's rated capacity due to deterioration or deficiencies of load bearing parts, load controlling parts, or safety devices is prohibited. Down rating due to discovered errors in the original design will be considered by the Navy Crane Center on a case-by-case basis.

4.4.1.2 Environmental, Administrative, and Operational Related Changes. A reduction to the OEM's rated capacity based on adverse operating conditions, such as limits in foundations or supports, track or soil conditions, or operational hazards, such as mobile cranes on barges, may be locally approved. Also, administrative down rating for operational efficiency (e.g., the crane's full lifting capacity is not required) may be locally approved. However, there shall be documentation on file that the crane had previously been tested and certified to the OEM's rated capacity for its current reeving and configuration. Re-rating a crane, down rated per this paragraph, up to its OEM rated capacity may be locally approved.

4.4.2 Replacement parts. The following criteria are provided to determine if the use of a replacement part constitutes an alteration.

a. Interchangeability. Any replacement part identified by the OEM's part number to a single national stock number (NSN) in the current Defense Logistics Agency publication entitled Master Cross Reference List (MCRL) [CRL-1 (OEM number to NSN) and CRL-2 (NSN to OEM number)] is approved as interchangeable with any other manufacturer's part number listed under the same NSN.

b. Industry Consensus Standard Equivalents. Replacement parts and hardware identified as industry consensus standard interchangeable equivalents shall be approved by the activity engineering organization. Examples are AISE brakes and mill motors, SAE grading of bolts, NEMA standard size contactors, AGMA standard geared couplings, and AFBMA standard size bearings. Examples of organizations with consensus standards are National Electrical Manufacturers' Association (NEMA), Association of Iron and Steel Engineers (AISE), Society of Automotive Engineers (SAE), Anti Friction Bearing Manufacturers' Association (AFBMA), American Gear Manufacturers' Association (AGMA), International Standards Organization (ISO), Industrial Fasteners Institute (IFI), and American National Standards Institute (ANSI).

c. Technical Bulletin. Navy Crane Center approval is not required when the crane or component OEM has issued a technical or parts bulletin or other official written notification approving the use of a specific superseding part or component in lieu of the original. The activity engineering organization shall approve the use of the superseding part.

Note: Replacement parts described above do not constitute alterations. However, these changes shall be documented either in the equipment history file, on drawings, or in the crane technical manual.

d. Fabrication to Original Specifications. When the activity holds the original crane or component OEM drawing, specification, and bill of material, they may fabricate the part or have the part fabricated to these standards. This does not constitute an alteration.

e. OEM Changes. OEM changes to load bearing parts, load controlling parts, or operational safety devices are considered alterations and require Navy Crane Center approval. OEM changes are defined as changes made by the OEM or OEM authorized agent while under contract for repair, overhaul, or remanufacture of a crane or component.



f. Approved Wire Rope End Connections. Navy Crane Center approval is not required when changing to an approved end connection as noted in section 11.

4.4.3 Repairs. Restoring a crane component or assembly to its original or virtually original condition, dimension, or mechanical property by technically recognized and accepted procedures is a repair and not an alteration. Examples are:

- a. Weld repairs to other than crane booms, when performed in accordance with American Welding Society procedures or Navy equivalents. Weld repairs to hooks are not permitted.
- b. Electroplating for restoring surface finish and fit.
- c. Refinishing of electrical contacts.
- d. Substitution of Navy Crane Center approved modern materials for obsolete materials.
- e. Substitution of Navy Crane Center approved bolts/nuts for rivets and bolts of equal size.
- f. Minor changes that do not effectively reduce the strength or change the function of the part, such as:
  - (1) Machining or grinding to remove surface defects.
  - (2) Machining for oversize bushings.
  - (3) Drilling small holes in structural shapes, other than boom chord members.
  - (4) Removal of material for leveling of foundations.
  - (5) Minor repositioning of components for alignment.
- g. Restoration of original interference or low clearance fits between cylindrical components (hubs and shafts) and key/keyseat assemblies using anaerobic compounds. These compounds are acceptable for restoring fits of torque transmitting assemblies only when the torque is transmitted by other means, such as a key.

Note: For a list of currently approved substitute materials, contact the Navy Crane Center (Code 09W4).



4.4.4 Crane Component Setting Adjustments. Adjusting component settings, such as brakes, within the OEM prescribed limits does not constitute an alteration. Adjustments using the OEM permitted replacement parts, such as stiffer brake springs, is a locally approvable alteration. Setting adjustments outside the OEM limits or the use of non-standard options or components other than what is permitted by the OEM constitutes an alteration requiring Navy Crane Center approval. Following setting adjustments, the work shall be inspected and the crane tested (and recertified if required) in accordance with section 3.

4.4.5 Alteration to Microprocessor-Controlled Cranes. An alteration request for approval shall be submitted to the Navy Crane Center for any of the following revisions to the applications program of a microprocessor-controlled crane:

- a. Changing the OEM's settings that establish new high or low limits for variables outside the OEM's recommended limits.
- b. Adding or deleting a function or device. (Navy Crane Center approval is not required when a function is temporarily deleted for testing or for an emergency situation, provided the function is restored to its original purpose and all changes are fully documented.)
- c. Installing a new function block or device.
- d. Changes affecting the firing circuits of thyristors. (Such changes shall only be made by the controller OEM.)

4.4.5.1 Exceptions. An alteration as described in paragraph 4.4.5 may be approved locally if the revisions were made by, or approved by, the controller OEM.

4.4.5.2 Testing and Recertification. Microprocessor controlled cranes shall be tested (and recertified if required) in accordance with section 3, when making a revision:

- a. As stated in the above,
- b. Affecting brake settings,
- c. Affecting torque proving, or
- d. Affecting current limit.

4.4.6 Damaged Crane Booms

4.4.6.1 Main Chord Damage. Any category 1 or category 4 crane having a lattice type

boom that has sustained structural damage to the main chords, whether tubular or

structural steel shape, shall be immediately removed from service. Lattice booms of the newer truck, cruiser, and crawler cranes are manufactured of lightweight, thin wall, high strength low alloy tubular structural members. When the main chords of these booms are damaged in any manner, including slight dents, they are severely weakened and have failed at loads significantly below rated capacity. Except as noted below for ASTM A36 steel open section members, weld repairs shall be performed by the OEM or OEM designated repair facility in accordance with OEM specifications. Alternatively, repairs may be performed by the activity if the OEM provides procedures and specifications.

If the OEM does not provide repair procedures, the repairs may be made if the requesting activity prepares a weld repair procedure with the approval of a qualified welding engineer and provides confirmation that the welding will be performed by a certified welder for that procedure. Weld repair procedures developed by the activity shall be submitted as an alteration request requiring Navy Crane Center approval. Weld repairs of boom chord members made of open section ASTM A36 steel (and similar weldable mild steels) may be performed as locally approved alterations using locally approved welding procedures.

4.4.6.2 Boom Lacing Damage. Booms with lacing damage shall be removed from service until a structural inspection can be made to determine the extent of the damage. Upon inspection, the activity engineering organization shall make the determination whether to place the crane back in operation or require an immediate repair before the crane can be operated. Repairs to lacing members shall be in accordance with OEM's instructions. When OEM instructions are not available, repair procedures shall be developed by the activity engineering organization and submitted as an alteration request for Navy Crane Center approval. Weld repairs of lacing members made of open section ASTM A36 steel (and similar weldable mild steels) may be performed as locally approved alterations using locally approved welding procedures.

4.4.6.3 Telescoping and Articulating Boom Damage. Structural repairs to telescoping and articulating booms require Navy Crane Center approval.

4.4.6.4 Testing and Recertification. Following repairs to a boom, the work shall be inspected and the crane tested and recertified in accordance with section 3.

#### 4.4.7 Crane Components and Features versus Current Design Standards

- a. Crane components and features that pre-date and do not comply with DOD Handbook MIL-HDBK-1038 may be retained provided they continue to operate satisfactorily and there is no evidence of distress. Non-compliances that violate sound engineering principles shall be corrected within practical limits. Replacement with a part or component different from the original shall be treated in accordance with this section.



b. If an alteration request proposes a replacement component that is clearly an improved design and/or material, it may be submitted without calculations.

c. If a proposed replacement shaft does not provide a 1.5 design factor for infinite life, then its service life (based on a conservative duty cycle) for a 1.5 design factor shall be calculated.

4.5 Alteration Records. Full documentation of alterations with local or Navy Crane Center approval, installation, and certification actions shall be filed in the crane equipment history file. The appropriate engineering drawings shall be revised as necessary.

<b>CRANE ALTERATION REQUEST</b>				PAGE 1 OF
ACTIVITY			ACTIVITY WORK ORDER NUMBER	
CRANE ALTERATION TITLE			CRANE ALTERATION REQUEST NUMBER	
			NCC INFORMATION ( ) APPROVAL ( )	
<b>CRANE DESCRIPTION</b>				
CAPACITY/ TYPE	NUMBER	MFR	SPS ( )	
			GPS ( )	
<b>CRANE ALTERATION DESCRIPTION</b>				
ASSEMBLY	SUB-ASSEMBLY	COMPONENT	PART	
REFERENCE DRAWINGS				
NARRATIVE				
<b>ACTIVITY APPROVAL/REQUEST</b>				
PREPARER	DATE	PHONE	FAX	
REVIEWER	DATE	PHONE	FAX	
CHIEF CRANE ENGINEER	DATE	PHONE	FAX	
DATE NCC APROVAL NEEDED		NAVY WIDE APPLICATION YES ( ) NO ( )		
<b>NAVY CRANE CENTER APPROVAL</b>				
REVIEWER	DATE	PHONE	FAX	
		DSN 443-0505, (610) 595-0505	(610) 595-0749	
CHIEF ENGINEER	DATE	PHONE	FAX	
		DSN 443-0505, (610) 595-0505	(610) 595-0749	
APPROVED ( )	CONDITIONALLY APPROVED ( )	DISAPPROVED ( )		
COMMENTS ON ATTACHED CONTINUATION PAGE(S) YES ( ) NO ( )				

NAVY CRANE CENTER FORM 92-001 (REV 9-96)

FIGURE 4-1 (1 of 3)





## CRANE ALTERATION REQUEST FORM INSTRUCTIONS

This form is designed for facsimile transmission without a cover page and, with enclosures and signatures, shall be the official document.

1. CRANE ALTERATION REQUEST Block - Enter total number of pages.
2. ACTIVITY Block - A uniform name and address for activity shall be used. Reference: Plain Language Address Directory (USN PLAD 1) used for messages. Example: NAVSHIPYD PORTSMOUTH NH.
3. ACTIVITY WORK ORDER NUMBER Block - Work authorization document number.
4. CRANE ALTERATION TITLE Block - A uniform system for titles shall be used. An example is: REPLACEMENT OF MAIN HOIST ELECTRIC BRAKE LININGS. First Word - Use "REPLACEMENT," "ADDITION," "REMOVAL," "REARRANGEMENT," "ALTERATION," "RETENTION" (TEMPORARY), "DOCUMENTATION (AS-BUILD VARIANCE)," or "DOCUMENTATION" (MIL-HDBK 1038 VARIANCE). Second Word - Use "OF" or "TO". Third Word/Phrase - Affected assembly, sub-assembly, component, or part. Fourth Word/Phrase - Affected component or part.
5. CRANE ALTERATION REQUEST NUMBER Block - All alteration requests, whether for NCC or local approval, shall be numbered in sequence. In the example N00102-96-001, N00102 is the activity six digit alpha-numeric Unit Identification Code (UIC) per Defense Federal Acquisition Regulation (DFAR) Supplement, 96 indicates fiscal year 1996, and 001 means the first alteration request of FY96 for this activity. Navy Crane Center issued crane alterations will use the UIC of N62472.
  - a. Indicate if ALT is for NCC information or approval.
6. CRANE DESCRIPTION Block - CAPACITY/TYPE, NUMBER, MFR, SPS, GPS - Self - explanatory.
7. CRANE ALTERATION DESCRIPTION Block - An example, consistent with the example title above, is: ASSEMBLY - Main Hoist, SUB-ASSEMBLY - NA, COMPONENT - Electric Brake, PART - Linings.
  - a. REFERENCE DRAWINGS - Drawings affected by the alteration.
  - b. NARRATIVE - Contains fully developed alteration request and any references or enclosures.
8. ACTIVITY APPROVAL/REQUEST Block - For locally approved alterations, line out "REQUEST." For NCC approval, line out "APPROVAL."
  - a. PREPARER, DATE, PHONE, FAX - Self-explanatory.
  - b. REVIEWER, DATE, PHONE, FAX - Self-explanatory.
  - c. CHIEF CRANE ENGINEER, DATE, PHONE, FAX - Self-explanatory.
  - d. DATE NCC APPROVAL NEEDED - Self-explanatory.
  - e. NAVY-WIDE APPLICATION - Indicate if this alteration may have applicability to cranes at other activities.
9. NAVY CRANE CENTER APPROVAL Block
  - a. REVIEWER, DATE, PHONE, FAX - Self-explanatory.
  - b. CHIEF ENGINEER, DATE, PHONE, FAX - Self-explanatory.
  - c. APPROVED - Self-explanatory.
  - d. CONDITIONALLY APPROVED - "Approved subject to incorporation of comments:".
  - e. DISAPPROVED - "Disapproved for the following reasons:".
  - f. COMMENTS ON ATTACHED CONTINUATION PAGE(S) - Self-explanatory.
10. Continuation page - Follow instruction #5 and number the page.

FIGURE 4-1 (3 of 3)

<h2 style="margin: 0;">MANDATORY ALTERATION</h2>			
<p>The alteration identified below, and attached, has been classified as:</p> <p>_____ Class A - Mandatory - Now: Cranes are to be removed from service until alteration is complete.</p> <p>_____ Class B - Mandatory - Delayed: Alteration will be accomplished within _____ days, or during the next annual maintenance period.</p> <p>_____ Class C - Mandatory - When Needed: Alteration will correct a deficiency when the deficiency occurs.</p> <p>_____ Class D - Mandatory - Site Specific: Approved as a unique alteration for an activity or a particular crane.</p>			
ALTERATION IDENTIFICATION			
ACTIVITY		ALTERATION REQUEST NUMBER	
ALTERATION TITLE		ALTERATION ORIGINALLY: LOCALLY APPROVED (    ) SUBMITTED FOR NCC APPROVAL (    )	
CRANE DESCRIPTION			
CAPACITY/ TYPE		MANUFACTURER	SPS (    ) GPS (    )
ALTERATION DESCRIPTION			
ASSEMBLY	SUB-ASSEMBLY	COMPONENT	PART
NARRATIVE			
NAVY CRANE CENTER APPROVAL			
CONFIGURATION MANAGER	DATE	PHONE	FAX
		DSN 443-0505, (610) 595-0505	(610) 595-0749
CHIEF ENGINEER	DATE	PHONE	FAX
		DSN 443-0505, (610) 595-0505	(610) 595-0749
NOTIFICATION OF COMPLETION			
WHEN THE ALTERATION IS COMPLETED, A COPY OF THIS FORM SHOULD BE RETURNED TO THE CRANE CENTER WITH THE FOLLOWING INFORMATION: CRANE IDENTIFICATION _____ COMPLETION DATE _____			
DISTRIBUTION:			

NAVY CRANE CENTER FORM 96-0030E (REV 3-96)

FIGURE 4-2

(INTENTIONALLY LEFT BLANK)

## SECTION 5 EQUIPMENT HISTORY FILE

5.1 Equipment History File. Each activity shall establish and maintain an individual equipment history file on each unit of WHE. The equipment history file shall contain the documentation shown in table 5-1 for the time period indicated. The files shall be made available to Government oversight agencies (e.g., OSHA, Navy Crane Center) upon request.

---

TABLE 5-1  
Equipment History File

<u>Documentation</u>	<u>Minimum Retention Time</u>
(1) Maintenance Inspection Specification and Record (Indicate the scheduling basis, either hour meter or calendar month)	
(a) Type "A" inspection	Latest plus previous three (if on calendar basis) or previous two years (if on engine hour operating basis)
(b) Type "B" inspection	Latest plus previous one
(c) Type "C" inspection	Latest plus previous one
(d) Type "Annual"	Latest plus previous one
(2) Crane Operator's Daily Checklist (Monthly checklist for non-cab operated category 3 bridge, gantry, and wall cranes)	Current month plus previous month
(3) Shop Repair Orders or Other Repair Documents	
(a) Load Bearing/Load Controlling Parts and Operational Safety Devices	Seven years
(b) All others	One year
(4) Non-Destructive Test Reports	Latest (for component)
(5) Crane Condition Inspection Record	Current (including interim's) plus one previous annual record
(6) Certification of Load Test and Extensions	Current (including interim's and extensions) plus one previous annual certification
(7) Third Party Certifications (for applicable cranes)	Current plus one previous certification

TABLE 5-1 (continued)

<u>Documentation</u>	<u>Minimum Retention Time</u>
(8) Wire Rope Breaking Strength Certification for New Cranes and for Replacement Wire Rope on Existing Cranes (rope manufacturer's certification that the rope meets the published breaking strength, or the actual breaking strength of a sample taken from the reel and tested)	Latest
(Note: For cranes used in longshoring, certification of actual breaking strength is required)	
(9) Crane Alterations	Life of crane
(10) Deficiency Reports (i.e., load bearing or load controlling parts or operational safety devices)	Seven years
(11) Purchase Contracts (If available)	Life of crane
(12) Accident Reports	Seven years
(13) Hook Tram Point Base Measurement	Life of hook
(14) Operational Lifts Exceeding the Certified Capacity	Life of crane
(15) Specification Data Sheets	Life of crane
(16) Crane Acceptance Test (If available)	Life of crane
(17) Mobile Crane Operating Procedures for Ancillary Equipment	Life of crane
(18) Crane Roller Clearance Data Standard of Acceptance	Life of crane
(19) Slewing bearing clearance readings	Life of bearing
(20) Oil analysis/vibration analysis data  (Alternate. Internal gear inspection report)	Life of component  (Latest)
(21) Material Inspection Report for Floating cranes (per OPNAVINST 4780.6)	Latest, including waivers of depot availability
(22) Coupling alignment data per appendices C and D	Latest

## SECTION 6 OPERATOR LICENSING PROGRAM

6.1 Applicability. All personnel, except contractor personnel, who are assigned duties involving the operation of Navy shore based category 1, category 2, cab operated category 3, or category 4 WHE shall be qualified and licensed in accordance with these provisions. The licensing requirements of OPNAVINST 4790.2 shall be followed for operators of aircraft and helicopter crash cranes covered by that document.

Contractor personnel who operate Navy owned WHE shall be certified by the contractor, at the contractor's expense, as fully qualified. Operator qualifications shall be, as a minimum, equivalent to the requirements of this publication. The contractor shall provide documentation on operator qualifications to the contracting officer prior to an operator engaging in any mode of equipment operation. Documentation shall be retained by the contracting officer in the contract files.

Licensing is not required for operators of non-cab operated category 3 WHE. However, all operators of non-cab operated category 3 WHE shall be trained in and demonstrate adequate knowledge of the areas identified in appendix N, including demonstration of operation of each specific type of equipment they are authorized to operate.

### 6.2 Use and Limitations of Licenses

6.2.1 Significance. A Crane Operator License is official evidence that the person named therein has been officially accepted as qualified to operate the types of cranes specified on the license.

6.2.2 Authorized Operation. Possession of a license does not of itself constitute authorization to operate cranes. Such authorization shall be specifically obtained from the supervisor charged with responsibility for crane operations.

6.2.3 Possession of Licenses. Operators shall have such licenses on their person when operating cranes.

6.2.4 Equipment Familiarity Checkouts. The Navy's WHE inventory consists of a wide variety of equipment types, makes, and models with variations in control mechanisms and operational characteristics. For this reason, it is not feasible to devise and administer examinations and issue licenses to cover each equipment variation. The objective of the licensing program is to ensure that operators are qualified to operate cranes having the same essential basic functional characteristics. Possession of a license means that the person holding such license is qualified to operate any crane with the characteristics of the types authorized on the license, provided the operator has been checked out by the operations supervisor on the specific unit to be operated.

6.2.5 Incidental Licenses for Operation by Maintenance and Inspection Personnel. Maintenance and inspection personnel who operate WHE incidental to maintenance of the equipment shall be tested and licensed in accordance with these requirements with the following exceptions:

- a. The licensing performance test may be modified to suit appropriate conditions that the maintenance and inspection personnel may experience.
- b. The General Crane Safety Course and Overhead Traveling Crane Safety Course in appendices G and H may be modified as appropriate to suit conditions.
- c. Lifting of loads is not permitted.
- d. The license shall indicate "NO LIFTING OF LOADS ALLOWED."

6.3 Designation of License Program Personnel. The activity commanding officer shall designate in writing the official and organization responsible for the management and administration of the program for instructing, testing, and licensing of WHE operators. The official responsible for the license program shall designate in writing instructors and performance examiners. The instructors and examiners shall be qualified to effectively instruct, examine, and test license applicants. This includes the capability to develop and conduct formal courses of classroom instruction on the various aspects of equipment operation and safety. The performance examiner shall be selected from the best-qualified licensed equipment operators. The performance examiner shall hold a license for the specific equipment for which he/she is conducting operator testing and shall be completely familiar with all aspects of its safe and effective operation.



## SECTION 7 OPERATOR QUALIFICATION AND TESTING

### 7.1 Personal and Physical Qualifications

7.1.1 Physical Faculties and Fitness. A physical examination by a licensed health care professional is required. The examination shall be in accordance with the criteria established in U.S. Department of Transportation, Federal Highway Administration, Motor Carrier Safety Regulation, 49 CFR 391, Sections 41-43. (Where the term “motor vehicle” is referenced in 49 CFR 391, it shall mean “crane.”) Conformance to or deviation from these requirements shall be noted by the examining health care professional and forwarded to the crane operator licensing office for inclusion in the applicant's file.

7.1.1.1 Deviations from Physical Qualification Requirements. For an operator who has previously established qualifications to operate, deviations from the physical requirements are not necessarily totally disqualifying. However, where such deviations exist, competent medical and management authorities shall give special consideration to each individual case and may recommend waivers. Waivers may be approved by the activity Commanding Officer. Normally, waivers shall not be granted for applicants who have never before established operator qualifications. Any limitations imposed by reason of physical defects shall be noted on the operator's license and license record.

7.1.1.2 Department of the Navy Drug Free Workplace Program (DFWP). Activity commanders shall ensure the DFWP policies and procedures of OCPM Instruction 12792.3 are carried out at the activity level.

7.1.1.3 Other Qualification. Commanding Officers may require the applicant to meet additional personal and physical qualifications for operating specific items of equipment. Specialized tests, such as speed of reaction time, may be administered by the license examiner. Persons administering tests shall be qualified in the administration of the tests and shall follow the test equipment OEM's operating procedures and recommendations.

7.1.1.4 Grounds for Disqualification. Notwithstanding the required physical examination, evidence of poor attitude or emotional instability that would render applicants a hazard to themselves and others, or that in the opinion of the license examiner would interfere with an applicant's safe or efficient performance of duties, is sufficient cause to disqualify an applicant. Justification for disqualification of the applicant on the grounds of emotional instability may be derived by the examiner from interviews, reference to the applicant's medical and personnel records, analysis of accident reports involving the applicant, or the results of specialized tests.

7.2 Language Ability. Applicants shall be able to write and speak English or the prevailing language and shall be able to read and understand signs and orders applicable to the operation of the equipment.

7.3 Test Reports. The format of the physical examination and the medical examiner's certificate may be determined by the medical office making the examination, with due consideration for the provisions of paragraph 7.1.1. Medical and specialized test results may be presented in narrative form or graphically as devised locally.

7.4 Required Safety Instruction, Written Examinations, and Performance Tests. The following paragraphs describe the minimum requirements for obtaining a license. Prior to taking any performance test, the license candidate shall be thoroughly trained on the operation of the type of crane for which a license is to be issued. The candidate shall demonstrate operation proficiency under the supervision of a licensed operator. Prior to obtaining a license for a particular type of crane, a candidate shall operate that type of crane only under the supervision of a licensed operator.

7.4.1 Crane Safety Course and Written Examination. Applicants for initial license shall be given a formal course of instruction in crane safety covering the topics set forth in appendices G or H, as applicable for the cranes to be operated. Applicants shall be given training covering the topics in appendix G, except that applicants for operation solely of category 2 or cab operated category 3 cranes shall receive training covering the topics in appendix H. Applicants for license renewal shall be given a refresher training course of a minimum of eight hours (four hours for category 2 and cab operated category 3 crane license applicants) on crane operator safety. A written examination shall be given to ensure that applicants are and continue to be thoroughly familiar with crane safety regulations.

7.4.2 Specific Crane Written Examinations. Applicants shall pass a written test for each type of crane for which a license is to be issued. The tests shall include those questions that are provided in appendices I (category 1 and 4 cranes) and J (category 2 and cab operated category 3 cranes), as applicable. These questions shall be supplemented for the particular operating characteristics and features of the activity's cranes, and its unique mission requirements.

7.4.2.1 Evaluating and Scoring Written Examination. Answers shall not be marked wrong if the response is substantially correct, but not well stated. Although the answers contained in this publication have been screened and approved, equipment operation is not an exact science. Some answers, however, are matters of fact and are not subject to interpretation. In cases of dispute, the judgment of the examiner will be final.

7.4.2.2 Grading of Examination. Incorrect answers shall be annotated. The minimum required percentage of correct answers is 70 percent. The latest graded examination shall be filed in the operator license jacket and shall not be returned to the applicant,

however, the applicant shall be notified of the grade attained and all incorrect answers shall be critiqued.

**7.4.3 Performance Tests.** Applicants shall demonstrate operating proficiency by passing a performance qualification test for each type of crane for which a license is to be issued. The basic requirements for these tests are set forth in appendices K (category 1 and 4 cranes) and L (category 2 and cab operated category 3 cranes). Additional test requirements shall be developed for the particular operating characteristics and features of the cranes as well as the unique mission requirements of that activity. It is assumed that the applicant, because of experience and training, is sufficiently capable of performing the various tasks called for by the problem situations described in the tests.

**7.4.3.1 Evaluating and Grading Performance Tests.** Performance qualification tests shall be graded as satisfactory or unsatisfactory. If subsequent make-up tests are authorized, only those items that were checked as incorrect need be tested again. The examiner shall initial and date each group on the performance qualification test to denote completion of that group. In evaluating these tests, examiners shall be guided by the applicant's performance rather than experience, background, and history. The latest graded performance test shall be filed in the operator's license jacket.

**7.4.3.2 Notation on Test Forms.** A short line is provided before each item on the performance qualification test form. The examiner shall make a check mark to indicate that the applicant has correctly performed or answered the question. The examiner shall indicate by zero or circle where applicant fails to perform or answer correctly. The examiner shall provide a short written explanation of all failures. Items that are not applicable shall be marked "NA."

**7.4.3.3 Test Facilities.** Test facilities shall include course sites, flags, barricades, and other devices to simulate actual working conditions. However, tests shall not be conducted in actual working conditions and environments where operator error could result in damage to equipment or personnel not part of the test.

**7.4.3.4 Test Equipment.** Test equipment refers to units of equipment in use for testing purposes. Ordinarily these units are used for other work and assigned for test purposes as required. Caution shall be exercised to ensure that the test equipment is in a safe operating condition when furnished to an applicant for operation. The WHE used by the applicant for the test shall conform to the same basic functional characteristics, attachments, types of control, and similar details as the equipment noted in the application for license.

(INTENTIONALLY LEFT BLANK)

## SECTION 8 LICENSING PROCEDURES AND DOCUMENTATION

### 8.1 Application for Crane Operator License

8.1.1 Purpose of Application Form. A sample format is shown in figure 8-1. This form provides a progressive presentation of facts and developments pertinent to applying for and issuing or denying licenses to applicants.

8.1.2 Use of the Application Form. Part I of the application shall be prepared by the applicant and sponsor. Part II shall be endorsed by the applicant's supervisor. Parts III and IV shall be prepared by the license office. The use of appropriate spaces in parts III and IV, and the preparation and proper routing of copies needed, simplifies and reduces paperwork.

8.2 Control of Applications for Tests and Licenses. Use of a status control sheet will facilitate processing of individual applications by means of brief entries for each step in the application, test, and license process. Its use enables follow-through action and facilitates scheduling tests and examinations. The following are some of the items that might be included on a status control sheet:

- a. Applicant's name.
- b. Description of equipment license requested.
- c. Date of supervisor's request for test and license.
- d. Date and status of action notice to supervisor.
- e. Date and results of physical examination and any specialized tests.
- f. Date and results of written tests and prerequisite information if required.
- g. Date and results of performance qualification test.
- h. Date and status of license issuance or denial.

### 8.3 Form and Content of Licenses

8.3.1 Essential Elements of Licenses. The essential elements of a Crane Operator License (figure 8-2) are identification, qualification, limitation, authorization, and validity.

8.3.1.1 Identification. The principal identifying entries are the name of the operator and the license number.

8.3.1.1.1 Name. The operator's name, as contained in official personnel records, shall be noted in this space. Use of permanent personnel identification numbers is optional.

8.3.1.1.2 License Number. The entry in this space calls for a sequential number not likely to be duplicated and one that can be issued by any naval activity. It incorporates a two-part figure. The initial part is the activity unit identification number or identification number of the original license issuing activity. The second part is the appropriate sequential number in order of issue.

8.3.1.2 Qualified to Operate. These entries include descriptions of the functional characteristics of the types of cranes that the operator is licensed to operate.

8.3.1.2.1 Crane Type. Include each type of crane the operator is qualified to operate (portal crane, floating crane, bridge crane, mobile crane, etc.).

8.3.1.2.2 Capacity. Indicate the maximum capacity for each crane type.

8.3.1.2.3 Attachment. The basic qualification will be for hook work. Indicate attachments, aside from hooks, (clamshell, bucket, etc.) that the operator is qualified to operate.

8.3.1.2.4 Type of Control. Typical entries are electric (E), hydraulic (H), or mechanical (M).

8.3.1.2.5 Examiner. The examiner shall verify, by his/her initials, that the operator successfully passed the performance requirements for each applicable type of crane.

8.3.1.3 Restrictions. Entries in this category are physical or medical restrictions (corrective lenses, daytime operation only, etc.).

8.3.1.4 Authorization. Evidence of official authorization, as a duly licensed crane operator, is the signature of the issuing official on the license.

8.3.1.4.1 Date Issued. This date shall be the date the license was initially issued, unless additional equipment is added at a later date. In this case, indicate the date of license for the additional equipment.

8.3.1.5 Validity. Unless suspended or otherwise revoked, the license is valid until the stated expiration date, which shall be not more than two years from the date of initial issuance. If portions of the license are revoked for particular equipment types, the license remains valid for the other equipment types noted. If the license is totally revoked, the operator shall turn in the license to the licensing activity.

8.4 Crane Operator License Record. The Crane Operator License Record (figure 8-3) is a detailed record of the operator's current license qualifications that shall be included in the operator's license file. It includes dates of issuance and expiration, types of cranes, the date of physical examination, the dates of revocation, medical restrictions, and the operator's birth date. As explained below, a system for staggering renewal dates utilizes the operator's birth date as the key.

## 8.5 License Issuance, Renewal, Suspension, and Revocation

8.5.1 License Issuance. The license examiner shall issue an operator license only after all the requirements for the specific license are met.

8.5.2 Expiration of Licenses. The expiration date for the license shall not exceed two years from the date of initial issuance. Expiration dates shall be noted on the operator license and the license record. This could be the operator's birth date in odd or even years, consistent with the operator's year of birth whether odd or even. For example, if the birth date of a licensed operator is 20 June 1950, the expiration date of his license could be 20 June 1992 and so on every two years on even years.

8.5.3 Procedure for Renewal. The activity shall use a tickler file to flag renewal action approximately 90 days before the expiration date. Arrangements for renewal examinations and tests shall be made early enough to enable all items to be cleared before the expiration date.

8.5.3.1 Requirements for Renewal. The following are required for license renewal:

- a. Physical examination.
- b. Specialized tests.
- c. Operators shall attend and pass required refresher course of safety instruction (see section 7).
- d. The activity has the discretion to determine if performance tests are required. If an operator has not operated a particular type of crane during the licensing period, a performance retest is mandatory. Written documentation, verifying operation, shall be provided to waive the performance test.

8.5.4 Suspension. Licenses may be suspended for cause at any time by the licensing office. Licenses shall be automatically suspended when the operator is charged with an accident. The requirements for renewal shall consist of those elements described in paragraph 8.5.3.1 (and any additional requirements) considered necessary by management after investigation and consideration of the circumstances relating to the accident or other occurrence warranting the suspension. When written or practical

tests are required for renewal, the tests shall be given not later than 15 days after suspension where practical. Documentation of suspension, justification, and renewal actions, including test results if applicable, shall be included in the operator's license file.

8.5.5 Revocation. Where circumstances require revocation of all or a portion of the operator's license, supporting justification shall be included in the operator's license file. Additionally, the date of revocation shall be annotated on the Crane Operator License Record.

8.6 Operator License Files. All relevant forms and supporting data shall be kept in the operator's license jacket. There shall be an individual jacket kept for each applicant and operator. Each operator's license jacket shall contain the following as a minimum:

- a. Application for Crane Operator License.
- b. Crane Operator License Record.
- c. Copy of current operator license or incidental (no load) operator license.
- d. Current certificate of medical examination and results of any specialized tests.
- e. Specific crane written examinations (graded and signed by examiner and dated).
- f. Performance tests, initial and requalification (graded and signed by examiner and dated).
- g. Initial and refresher safety course records (i.e, graded and signed examination or certificate of completion with test score).
- h. License suspension and renewal records.
- i. Revocation justification.



<b>Read the <i>PRIVACY ACT STATEMENT</i> on reverse before completing this application.</b> <b>APPLICATION FOR CRANE OPERATOR LICENSE.</b>			
<b>PART I - APPLICATION</b>			
1. NAVAL ACTIVITY		2. APPLICANT'S NAME	
4. DEPARTMENT, DIVISION AND/OR SHOP ASSIGNED TO		3. RANK, RATE OR CIVILIAN GRADE	
5. APPLICANT'S JOB TITLE			
6. DESCRIPTION OF EQUIPMENT LICENSE REQUESTED			
(a) TYPE OF CRANE	(b) CAPACITY	(c) TYPE OF CONTROL	(d) TYPE OF ATTACHMENT
7. STATEMENT OF QUALIFYING EXPERIENCE			
8. DESCRIPTION OF CRANES APPLICANT IS CURRENTLY LICENSED TO OPERATE			
9. SPONSOR'S STATEMENT OF APPLICANT'S READINESS AND/OR PREPARATORY TRAINING FOR TEST			
(NOTE: The sponsor can be either a qualified instructor or licensed operator.)			
Signature _____			
Sponsor			
<b>PART II - REQUEST FOR ADMINISTERING TESTS AND EXAMINATIONS AND ISSUING LICENSE</b>			
FROM:			
TO:			
It is requested that the license for type of crane described in item 6 above be issued to this applicant upon his/her successful completion of the required examinations and tests.			
Signature _____			
Title _____			
Department, Division or Shop Supervisor			
(OVER)			

FIGURE 8-1 (1 of 2)

PART III - ACTION ON SUBJECT APPLICATION	
FROM: TO:	DATE
<div style="margin-bottom: 10px;"> <input type="checkbox"/> Arrangements will be made to proceed with examinations and tests as requested.         </div> <div> <input type="checkbox"/> No action will be taken on this application for the following reason:         </div>	
Signature _____ Title _____	
PART IV - LICENSE ACTION	
FROM: TO:	DATE
<div style="margin-bottom: 10px;"> <input type="checkbox"/> The subject license has been issued/annotated for the requested type of crane.         </div> <div style="margin-bottom: 10px;"> <input type="checkbox"/> The applicant has failed his/her physical examination.         </div> <div style="margin-bottom: 10px;"> <input type="checkbox"/> The applicant has failed to qualify for the subject license.         </div> <div>           ____ number of days (the established waiting period) must elapse before a new application may be made for this license.         </div>	
Signature _____ Title _____	
PRIVACY ACT STATEMENT	
<p>This statement is provided in compliance with the provisions of the Privacy Act of 1974 (PL 93-579) (N00011 CO2) which require that Federal agencies must inform individuals who are requested to furnish information about themselves as to the following facts concerning the information.</p> <ol style="list-style-type: none"> <li>1. AUTHORITY: 5 U.S.C. 301 Departmental Regulations</li> <li>2. PRINCIPAL PURPOSE: To apply for a license to operate Navy cranes.</li> <li>3. ROUTINE USES: To be used by agency officials to determine the employee's eligibility to operate Navy cranes. May be used by safety and security officials to verify individual's qualifying experience.</li> <li>4. MANDATORY OR VOLUNTARY DISCLOSURE: The disclosure of information requested is voluntary. However, failure to complete the form will result in nonissuance of license.</li> </ol>	

FIGURE 8-1 (2 of 2)

CRANE OPERATOR LICENSE						QUALIFIED TO OPERATE				
NAME OF OPERATOR			DATE ISSUED			CRANE TYPE	CAPACITY	ATTACHMENT	TYPE CONTROLS	EXAMINER
LICENSE NO.			DATE EXPIRES							
DATE OF BIRTH	COLOR OF HAIR	COLOR OF EYES	HEIGHT	WEIGHT						
THE HOLDER OF THIS CARD IS QUALIFIED TO OPERATE U.S. NAVY CRANES AS SPECIFIED ON REVERSE OF THIS CARD.										
SIGNATURE OF ISSUING OFFICIAL										
SIGNATURE OF OPERATOR										
Card must be carried at all times when operating Navy cranes. Not transferable to other personnel. NOTE: INFORMATION ON THIS LICENSE IS SUBJECT TO SAFEGUARD AND DISCLOSURE CONDITIONS OF THE PRIVACY ACT OF 1974.						RESTRICTIONS (Vision, Hearing, Other)				

FRONT

BACK

FIGURE 8-2

[illegible]

FIGURE 8-3

## SECTION 9 OPERATOR INSPECTIONS

9.1 Pre-Use Check (Category 1, 2, and 4 Cranes and Cab Operated Category 3 Cranes). The operator shall perform an inspection of his/her assigned crane each shift prior to the operation of the crane. The only exception to completion of the inspection prior to making a lift is when a load is suspended from the hook for a period that spans more than one shift and the lift cannot be practically or safely interrupted. In those instances, the inspection shall be performed immediately upon completion of the lift, unless the equipment will not be operated again that shift.

9.1.1 Documentation. A Crane Operator's Daily Checklist (ODCL, figure 9-1) shall be used for this purpose. Figure 9-1 identifies attributes applicable to most types of cranes. If a crane is equipped with load bearing or load controlling parts or safety devices not shown in figure 9-1, they shall be included in the activity's ODCL. Shortened forms, customized to particular categories of cranes, may be used provided they include all inspection attributes applicable to the particular cranes covered.

9.1.2 Inspection. The operator shall visually inspect and check the items prescribed on the checklist. The extent of inspection shall be limited to that which the operator can feasibly perform without additional assistance. It is not the intent of this paragraph to require inspection and test of those items that would require additional personnel (such as electricians) or additional equipment (such as man lifts). The operator shall perform an "on the crane" walk-around inspection on those cranes equipped with a safe access means. The operator's inspection shall also include operating the machine without load through all motions, using all controls, and ensuring the proper operation and functioning of such controls, safety devices, gauges, meters, warning signals, limit switches, and other devices. Testing of limit switches shall include upper hoist and upper and lower boom limit switches. Lower hoist limit switches need only be tested where operationally possible. However, the lower hoist limit switch shall be tested prior to any lift operation that could result in its activation.

9.1.2.1 Specific Inspection Instructions. The inspection is in four parts and is designed to group the items to be inspected in their normal sequence of location or area as they would normally be observed. All items and attributes are keyed to the ODCL. The condition observed shall be indicated on the form.

9.1.2.1.1 Walk Around Inspection. The operator shall first ensure the crane is currently certified before proceeding. Enter the certification date on the ODCL. If the crane is not currently certified, this condition shall be reported to the supervisor. Begin inspection by walking around and/or over the exterior of the crane observing anything that is out of order or place. As a minimum, the operator shall observe and report the condition of the following:

- a. Safety Guards and Plates. Inspect for missing safety guards and plates.
- b. Carrier Frame and Rotate Base. Check carrier frame and rotate base thoroughly for obvious physical damage, such as cracking, bending, or deformation of plates or welds. Inspect carefully for cracking or flaking of paint that may indicate a crack or damage in the structure beneath. Check hook rollers, bull gear, and rotate pinion.
- c. General Hardware. Inspect for missing and loose hardware (bolts, nuts, brackets, etc.).
- d. Wire Rope. Visually inspect wire rope for unusual wear, fraying, birdcaging, corrosion, and kinking. During the operating inspection, observe sections of wire rope that may not be visible during the walk around inspection, such as lower layers on the hoist drum that can only be seen when the hook or boom is lowered.
- e. Reeving. Check for condition of wire rope reeving. Ensure wire rope fleet angle has not caused overriding of drum flange. Check to ensure wire rope is running true in hook block and boom point sheaves. Check to ensure wire rope is laying correctly on the drum.
- f. Block. Inspect condition of block and ensure all swivels rotate freely.
- g. Hook. Check condition of hook for cracks, excessive throat opening, or twist.
- h. Sheaves. Inspect, where practical, condition of sheaves to determine that they are free and are not cracked or chipped.
- i. Boom and Jib. Inspect condition of boom and jib for straightness and any evidence of physical damage, such as cracking, bending, or other deformation of the steel elements or welds. When checking lattice booms, be especially watchful for bent lattices and dents in the main chords. Bent lattices can distort main chords and thus weaken the boom. Dents in the main chords of a boom of tubular construction can cause them to buckle.
- j. Gantry, Pendants, and Boom Stops. Inspect condition of gantry, pendants, and boom stops. Check to ensure gantry extends fully and is not distorted. Visually check boom pendants to ensure they are equal lengths and that the anchor pins are firmly set. Visually check boom stops to ensure they are not damaged and telescoping struts are not jammed. Unequal length boom stops will indicate jamming or bent members.



k. Walkways, Ladders, and Handrails. Check condition of walkways, ladders, and handrails. Look for loose mountings, cracks, excessive rust, loose rungs, or any other signs of unsafe conditions.

l. Windlocks, Chocks, and Stops. Check for free action of windlocks. Inspect chocks for adequate guidance of lines and freedom from burrs and nicks. Check stops and bumpers to ensure they are firm and have not worked loose.

m. Tires, Wheels, and Tracks. Inspect condition of tires, wheels, and tracks. Make visual inspection of tires for inflation, serious cuts, or excessive wear. If lifts on rubber are planned, check tire with gage for proper inflation pressure per OEM load chart. Check wheels to ensure they are not loose or damaged. On track machines, look for excessive slack, broken or loose pads, or any other obvious defects.

n. Leaks. Inspect for evidence on machine frame and on ground beneath machine, of any leakage of fuel, lubricating oil, hydraulic fluid, or engine coolant.

o. Radius Indicator. Check boom radius indicator. Ensure it is present and functioning freely.

p. Outriggers/Stabilizers and Locking Devices. Check outriggers and stabilizers to ensure they function freely and that floats or pads are free. If floats or pads are not permanently installed on the outrigger, be sure they are on the carrier and that they are not damaged. Inspect track clamps and ensure they are functional.

q. Load Chain. Inspect for damaged or deteriorated links.

9.1.2.1.2 Machinery House Inspection. Enter machinery house and/or remove machinery inspection panels or covers observing the following:

a. Housekeeping. Check to ensure the machinery house and accesses thereto are clean. Oil, grease, or mud on floors or landings can cause serious falls and fires. Ensure tools and authorized materials are properly stored and that waste and rags are removed.

b. Engines and Compressor. Check lube oil level, radiator coolant level, hydraulic oil level, and fuel level. Check fan and drive belts for condition and tension.

c. Leaks. Check for leaks within the machinery house of lubricating oil, fuel, grease, hydraulic oil, or coolant that may not have been evident in the walk-around inspection. If deposits detected appear greater than normal seepage, report condition to supervisor.

- d. Lubrication. Check gear cases for lubricant level and lubrication fittings for indication of recent service. If fittings appear dry, ensure they are lubricated before starting operation.
- e. Battery. Check batteries to ensure fluid level is adequate. If excessive corrosion is present, report condition to supervisor.
- f. Lights. Check all machinery house lights and report those not working.
- g. Glass. Check for broken or missing glass in machinery house doors or windows.
- h. Clutches and Brakes. Visually inspect all clutches and brakes for evidence of excess heat, wear, or grease and oil on the linings. Check for loose fasteners and missing or broken parts. If a brake is equipped with a manual release mechanism, check to ensure the mechanism is not in the released position.
- i. Electric Motors. Visually check all motors for evidence of loose fasteners, oil or grease splashes, and any indications of overheating.
- j. Warning Tags. If warning tags are posted on any component within the machinery house or on any part of the equipment, investigate the reason for the tag before proceeding or operating.
- k. Fire Extinguishers. Ensure fire extinguishers are in place, are in proper working condition, and seals are unbroken. Make sure that the inspection tag on the extinguisher is up to date.

9.1.2.1.3 Operator Cab Inspection. Enter cab and ensure all controls are in neutral or off position before starting engine. Start engine and inspect the following:  
(Note: Specific sequence will vary with type of crane.)

- a. Gauges. Inspect all gauges to ensure none are broken or missing and are operating normally.
- b. Indicator and Warning Lights. Check all indicator and warning lights to ensure none are broken or missing and are operating normally.
- c. Controls and Brakes. Check all controls to ensure that they operate freely and that the corresponding component actuates properly when controls are manipulated. Check action of foot brakes to ensure they are working freely and are not binding.

d. Visibility. Check visibility to ensure that all windows and mirrors are clean, unbroken, and that any vandal guards have been removed from windows. The operator shall have unrestricted visibility of the load and boom points in all normal working positions. Visibility shall be clear to either side and to the job site to the greatest extent possible. If sight is affected, do not operate crane until the condition is corrected.

e. Load Rating Charts. Ensure that load rating charts are posted in the operator's cab and that they are legible. Do not apply any load that is greater than that shown on the load rating chart.

f. Operational Safety Devices. Check all operational safety devices and ensure they are in place and functioning.

g. General Safety Devices. Check all general safety devices and ensure they are in place and functioning.

h. Emergency Stops. Check emergency stops. Know their location and ensure they are working properly.

i. List and Trim Indicator (Floating Cranes). Check list and trim indicator to ensure crane is level within tolerances. Ensure both list and trim bubble tubes are present, in their respective holders, and not broken.

j. Boom Angle and Radius Indicator. Where boom angle or radius indicators are located within the operator's cab, inspect to be sure they are not damaged and linkages are not disconnected. When electronic indicators are used, ensure power is properly supplied and the unit is calibrated.

k. Fire Extinguisher. Ensure fire extinguisher is in place and in proper working condition. Ensure seal is unbroken and that inspection tag is up to date.

l. Level Indicator (Mobile Cranes). Ensure level indicators are not damaged. Check level indicators to ensure crane is level.

9.1.2.1.4 Operating Inspection. Warm up engine. When ready to make operating inspection, alert rigger and perform the following:

a. Area Safety. Check your work area and be sure that exact locations of obstacles or hazards are known. Ensure ground conditions are sufficiently firm to support a loaded crane.

b. Unusual Noises. After starting engine, be alert for unusual noises, fluid leaks, improper functioning, incorrect readings of gauges, and loss of power or bad response to control of the engines or motors.

c. Control Action. Check for positive and proper actions of all controls and controllers.

d. Brakes. Check all brake actions and ensure brakes are functioning normally and that there is no slippage, excessive play, or binding. Exercise brakes to ensure they are dry.

e. Crane Stability. Ensure crane is positioned in the most level position possible. If lift is to be made on rubber, be sure transmission is positioned in neutral, brakes are applied and wheels are chocked. Check load rating chart. When using outriggers ensure all outriggers are fully extended, the floats or pads are firmly set, and tires are off the ground.

f. No Load Test. Ensuring that all safety precautions have been taken, operate the machine through its full range. Remain alert for possible malfunctions. Elevate the boom to full height up to, but not through, upper limit switches. Raise and lower hoist into, but not through, limit switches. Release swing lock and rotate machine slowly through full rotation. Lower boom to lowest point into, but not through, limit switches. While performing these exercises, observe the function of all controls and safety devices. Pay particular attention to condition of clutches and brakes. Any evidence of slippage or chatter is unsatisfactory and shall be reported to the supervisor.

g. Fleeting Sheave. Check operation of fleeting sheaves to ensure they travel freely on the shaft.

h. Limit Switches. Indicate condition of all limit switches as result of actuation in unloaded operational test. Test lower limit switches where operationally possible. Also, test hoist lower limit switches when lifting operations could result in their activation.

9.1.3 Submission of Reports. The checklist elements shall be signed off by the operator after the pre-operation check. The operator shall turn in the card to his/her supervisor after each shift.

## 9.2 Pre-Use Check (Non-Cab Operated Category 3 Cranes)

a. For all cranes, the user shop shall have the responsibility for pre-use inspection and the safe and proper operation of assigned cranes and for reporting problems to the crane inspection organization.

b. For bridge, wall, and gantry cranes, a documented inspection shall be performed at least once each calendar month the crane is in use. Inspection shall be in accordance with paragraph 9.1.2 and shall include all applicable attributes noted. The inspection checklist shall be signed by the operator (or inspector) upon completion of the inspection. The operator (or inspector) shall forward the card to his/her supervisor for review at the end of the shift. The current and previous month's inspection reports shall be retained. (Note: For cranes idle for more than 6 months, a condition inspection is required prior to use. See section 3.)

9.3 Operator-Detected Deficiencies. When an operator, during the daily check of equipment or during operation, observes a deficiency of a load bearing part, load controlling part, or operational safety device; or an operating condition that could result in uncontrolled movement, failure to move as expected from a control input, or otherwise render the crane unsafe, he/she shall immediately secure the crane from further operation and notify the supervisor of the deficiency observed. The supervisor shall immediately report the crane deficiency to the crane inspection organization for diagnosis of the deficiency and initiation of corrective repair action, including engineering resolution as necessary. The crane (or affected hoist on cranes with multiple hoists) shall not be returned to service until such deficiencies are either evaluated as satisfactory or corrected and the corrective repair is approved by the crane inspector (see section 3 for inspection and certification requirements after repairs).

In addition, the operator shall note all other deficiencies on the ODCL. For non-cab operated category 3 cranes, the activity shall prescribe procedures for notifying the supervisor of other deficiencies. Procedures shall be prescribed for the crane operator's supervisor to advise the crane inspection organization of all other deficiencies.

# **CRANE OPERATOR'S DAILY CHECKLIST**

CRANE NO.	TYP/CAPACITY	LOCATION	CERTIFICATION DATE	SHIFT			HOUR METER	HRS OPERATED	DATE
OPERATOR'S NAME		OILER'S NAME		LEGEND			U = UNSATISFACTORY NA = NOT APPLICABLE		
1 WALK AROUND INSPECTION		2 MACHINERY HOUSE INSPECTION		3 OPERATOR CAB INSPECTION			4 OPERATION INSPECTION		
a	Safety guards & plates	a	Housekeeping	a	Gauges	a	Area safety	*	
b	Carrier frame/rotate base	b	Engine/compressor	b	Warning/indicator lights	b	Unusual noises		
c	General hardware	c	Leaks	c	Controls/brakes	c	Control action	*	
d	Wire rope	d	Lubrication	d	Visibility	d	Brakes	*	
e	Reeving	e	Battery	e	Load rating charts	e	Crane stability	*	
f	Block	f	Lights	f	Operational safety devices	f	No load test	*	
g	Hook	g	Glass	g	General safety devices	g	Feeling sheave		
h	Sheaves	h	Clutches/brakes	h	Emergency stops	h	Limit switches	*	
i	Boom/jib	i	Electric motors	i	Lish/rim indicators				
j	Gantry/pendant/boom stops	j	Warning tags	j	Boom angle/radius indicator				
k	Walls/ladders/handrails	k	Fire extinguishers	k	Fire extinguisher				
l	Windlocks/chocks/stops			l	Level indicators				
m	Tires/wheels/tracks								
n	Leaks								
o	Radius indicator								
p	Outrigger/locking device								
q	Load chain								
<p><b>INSTRUCTIONS</b> - Inspect all applicable items indicated, each shift. Suspend all operations immediately when observing an unsatisfactory condition of any item indicated with an asterisk (*). In addition, suspend operation when any unsafe condition is observed and immediately notify supervisor. Other conditions not affecting safety shall be noted under "Remarks" and reported to supervisor.</p>									
OPERATOR'S SIGNATURE							DATE		
SUPERVISOR'S SIGNATURE							DATE		

FIGURE 9-1

## SECTION 10 OPERATION SAFETY

10.1 Crane Operation Safety Procedures. Crane accidents take a heavy and tragic toll each year in lives, serious injury, and/or property damage. The vast majority of crane accidents are the result of personnel error and can be avoided. Crane operation safety is the result of effective teamwork among operators, riggers, and crane walkers. In most accidents, a team member either performs an unsafe action or fails to perform a required safe action. In a vast majority of cases where team personnel are at fault, it is due to inattention, poor judgment, overconfidence, or haste to get the job done. The sections below prescribe basic crane safety procedures that every crane team member shall thoroughly understand and constantly practice to avoid accidents.

10.2 Crane Team. The crane team consists of the crane operator, rigger-in-charge, crane riggers, and crane walkers, as required. The rigging supervisor shall designate the rigger-in-charge (team leader), crane riggers, and crane walkers. The size of the team will vary to suit the job as determined by the rigger supervisor.

The concept of effective teamwork shall be stressed by management. Team members shall work together to ensure the safety of crane operations. While each member of the team has defined responsibilities, everyone is responsible for recognizing potential problems and making all team members aware of them. Any crane team member shall stop the job any time unsafe conditions are found and report to supervision problems that cannot be resolved by the team.

### 10.2.1 Responsibilities

10.2.1.1 Rigger-in-Charge. The rigger-in-charge has overall control of the operation including: planning all aspects of the lift; determining the weight of the load to be lifted; establishing the appropriate method of communication with the operator; ensuring the load is properly rigged; ensuring the crane operating envelope remains clear of all obstructions; providing signals to the operator; and conducting the operation in a safe manner. The rigger-in-charge shall coordinate the activities of other crane team members.

10.2.1.2 Crane Rigger. The crane rigger is responsible for carrying out the assignments from the rigger-in-charge or the rigging supervisor, including: assisting the crane operator in performing his pre-use inspection of the crane; proper gear selection and inspection prior to use; safe rigging of the load; and keeping the rigger-in-charge informed of questionable conditions associated with the operation.

10.2.1.3 Crane Walker. Crane walker responsibilities include: assisting the rigger and operator in the pre-use inspection of the crane; and ensuring the safe travel of the crane by observing for potential obstructions, properly aligning crane rail switches, and

being in a position to immediately notify the operator to stop operations should a potential problem arise.

10.2.2 Operator Responsibilities. The primary responsibility of the operator is the safe operation of the crane. Operator responsibilities include: performing a pre-use inspection of the crane at the start of the shift; fully understanding the lift prior to starting, including participating in pre-lift briefings; maintaining communication with the rigger-in-charge or designated rigger throughout the operation; making movements only when given the signal to do so; and refusing to operate the crane when there are concerns about the safety of the operation.

10.2.2.1 Operator Condition. First and perhaps most important, the operator shall, by self-examination, determine whether he/she is physically, mentally, and emotionally fit to operate the machine. The lives of many may be dependent on the operator's actions. If the operator is on medication, he/she shall consult a physician regarding adverse effects. The operator shall ask him/herself daily: Do I feel well? Can I handle the physical tasks of operating? Do I have a clear head and am I thinking and remembering properly? Am I alert? Is my attitude good today? Am I calm, cool, and collected? If an operator cannot honestly answer yes to these questions, operating a crane could be an accident hazard and he/she shall not operate the crane.

10.2.2.2 Understanding the Crane. Generally, crane operators at naval activities are required to operate various types, makes, and models of cranes. The operator shall be thoroughly familiar with the operating characteristics of each type, make, and model of crane that may be operated. An operator shall not operate a type of crane that he/she has not operated previously until he/she has been thoroughly checked out by a qualified person who is completely familiar with and has operated the crane.

10.2.2.3 Safety Devices. There are many varieties of cranes and safety devices on them. Many safety systems are complex and require thorough training on their operations. This is particularly so on mobile cranes that are often leased or rented for short term use. Activities shall ensure, through training, pre-briefs, spot checks, or performance examination, operators and supervisors are fully knowledgeable of the operation of safety systems on cranes. It can not be presumed that knowledge of a system on one crane indicates adequate knowledge on other cranes. Operators shall fully understand that safety devices such as interlocks and limit switches shall not be used as operational controls. They are not a substitute for full attention by the operator to potential hazards. Operators shall be trained to approach limit switches (hoist, rotate, and travel) only at slow speed.

Additionally, each activity shall develop procedures for controlling the bypassing of safety devices. Supervisors shall control the usage of keys for safety device bypassing. Keys shall be removed from crane where practical. Where this is not practical or where safety devices may be bypassed by other means, permission for bypassing/defeating



safety devices (except for performance of the operator's pre-operation inspection) shall be obtained from the operator supervisor. This requirement shall be posted in the operator's cab. For mobile cranes that do not provide protection against two-blocking, activities shall develop crane specific procedures designed to minimize the possibility of two-blocking (e.g., prohibiting hoisting when hook block is within 10 feet of contacting the boom; providing a rigger to watch the hook block when the hook approaches the boom; prohibiting any simultaneous crane movement while hoisting, etc.). Supervisors shall brief operators on the procedures prior to assignment on such cranes.

10.3 OEM's Operation Manual. Crane operators shall read, thoroughly understand, and comply with all procedures, safety instructions, and precautions in the OEM's operation manual. The above also applies to instructors and supervisors in initial checkout of new cranes. Where instructions provided by the OEM are in conflict with local safety instructions or safety procedures provided in this document, the operator shall refer such conflicts to his supervisor for resolution.

10.3.1 OEM's Supplemental Safety Information. Manufacturers, particularly of mobile cranes, often issue information more current and supplemental to that in the operation manual furnished with a particular crane. Much of the information (although sometimes addressed in service bulletins) pertains to the safe operation of the crane. Activities shall contact the OEM or authorized distributor for supplemental information applicable to their cranes, and, if practical, be added to the OEM's distribution list for such information.

10.4 Lifting Operations. Lifting operations shall be classified into two basic categories, complex lifts and routine lifts.

10.4.1 Complex Lifts. These are lifts with a moderate to high level of risk involving:

- a. Hazardous materials, e.g., explosives, highly volatile substances, etc. This does not include materials such as oxygen, acetylene, propane, or gasoline in bottles, cans, or tanks that are properly secured in racks or standards designed for lifting and transporting by crane.
- b. Large and complex geometric shapes.
- c. Lifts of personnel.
- d. Lifts exceeding 80 percent of the capacity of the crane's hoist (e.g., main hoist, whip hoist) planned for use. For variable rated cranes, this shall be at the maximum anticipated radius planned for use. (Lifts with jib cranes, pillar jib cranes, fixed overhead hoists, and monorails are excluded.)
- e. Lifts of submerged or partially submerged objects.

f. Multiple crane or multiple hook lifts.

g. Other lifts involving non-routine operations, difficult operations, sensitive equipment, or unusual safety risks.

10.4.1.1 Identification and Procedures. Activities shall identify complex lifts and prepare procedures (including rigging sketches where required) for conducting these lifts. Procedures may be standard written instructions or detailed procedures specific to a lift. A rigging supervisor shall review on-site conditions for complex lifts and shall perform a pre-job briefing before each complex lift to ensure all crane team personnel understand the required procedures for the lift. A rigging supervisor or operator supervisor shall personally supervise lifts exceeding 80 percent of the certified capacity of the crane's hoist used for the lift. If the lifts are repetitive in nature, the supervisor shall be present during the first evolution of the lift with each rigging crew. Subsequent identical lifts by the same crew may be done under the guidance of the rigger-in-charge.

10.4.2 Routine Lifts. These lifts are ordinary in nature and do not require supervisory oversight. They may be made at the discretion of a qualified rigger.

10.5 Pre-lift Preparation. Operators and riggers shall understand and comply with the load rating chart posted on the crane. The rigger-in-charge shall know or have a reasonable estimate of the weight to be lifted and the maximum radii at which the load will be picked and positioned. If the weight is estimated to exceed 50 percent of the capacity of the hoist at the maximum anticipated radius, the weight shall be verified by weighing with calibrated equipment, performing an engineering evaluation/calculation, or using a local procedure approved by the WHE manager or engineer.

The rigger giving the signals shall be identified and the type(s) of communication to be used shall be established.

For mobile cranes, the following also applies. The operator shall know the boom and jib length and crane configuration, and thoroughly understand and comply with the crane's load rating charts and accompanying notes. When determining the safe maximum working radius for the load to be handled, the crane team shall consider whether the lift will be made over the side, front, or rear (or any combination), and whether operation will be on tires or outriggers/stabilizers. For lifts exceeding 50 percent of the crane's capacity at the maximum anticipated radius planned for use, verify by actual measurement or by operating the crane with an empty hook through the lift evolution and verifying the radii from the radius indicator. For lifts exceeding 80 percent, verify by actual measurement where possible (i.e., do not rely solely on the crane radius indicator). Ideally, the crane should be positioned equidistant between the pickup and set down points. This will limit the need for changing boom positions. Verify that the load to be lifted is within the crane's allowable loading (including appropriate deductions for hook, block, ancillary equipment,

etc.) for all measured radii. Do not exceed these distances during the actual lift. If a load can not be placed where originally intended, verify the radius (and allowable load) of the new set down location prior to landing the load. Periodically, the operator shall compare known weights and measured radii against load and radius indicating devices on the crane to verify the accuracy of the devices. If accuracy is questionable, notify the supervisor.

10.5.1 Equipment Weights and Marking. Activity equipment such as man lifts, aerial platform vehicles, forklifts, and mobile cranes that may be lifted by crane shall be weighed and stenciled with the weight in pounds. OEM marked weights are acceptable. Lifting points and/or lifting configurations shall be identified.

Sand hoppers, tubes, containers, and the like that may contain material shall be marked with empty and full weights. Full weights shall be established by the OEM or the activity engineering organization. If the container's weight is not marked, or if the container can not be physically verified as empty, its weight shall be verified by the use of a load indicating device or dynamometer. The load indicating device, dynamometer, rigging gear, and crane shall be sized to pick up the maximum possible weight of the unmarked load. Alternatively, containers with full weights marked on them shall be considered full for lifting purposes.

10.6 Communications. Operators and riggers shall understand and use the Standard Hand Signals shown in figures 10-1 and 10-2 for controlling crane operations. Additional signals (if required) shall be approved by operator and rigger supervisors and shall be included in operator and rigger training programs. All hand signals shall be posted in the crane cab in view of the operator. If pickup and lay down areas are not readily accessible by a single rigger, additional riggers shall be assigned as necessary. A positive means of transferring control of the load between riggers shall be used. Direct voice and radio communications are also acceptable. The crane operator shall not engage in any movement of the crane without receiving an approved hand or voice signal from the rigger.

When making complex lifts or "blind" lifts (where the operator can not see the load), the rigger shall remain in constant communication with the operator, conveying all pertinent information as it happens, describing how the lift is situated (e.g., when the load comes off the ground, if the operator should keep hoisting, etc.). It shall be understood that if the communication ceases, the operator shall stop operation until communication is reestablished.

Note: The operator shall stop the machine at any time and in any situation judged to be unsafe. In addition, the operator shall immediately respond to a direction from any person to stop his machine.

10.7 General Operating Precautions. In all operations, the crane operator shall remain alert because the person directing the operation may not see all hazards. The operator shall remain alert to obstructions, people, and the behavior and feel of the machine. The operator shall remain at the crane controls at all times while a load is suspended from the crane. Never allow unauthorized personnel in, on, or around the machine when in operation. Dress appropriately, wearing prescribed safety gear. Do not expose any parts of the body to moving machinery, wire rope, parts, or components.

Execute all crane operations slowly and smoothly. Eliminate rapid acceleration and braking. These actions put dangerous impact loads on the machine and its components. Speed may be hazardous and it reduces the chance to take corrective action. Watch for boom "kickback." With a loaded wire rope suspended boom or jib close to boom stops, never rapidly relieve boom of load. Wire ropes stretch when loaded and spring back when load is suddenly removed. This can cause boom to kick back into boom stops and damage the boom. In this situation, both the boom hoist and the hook hoist shall be used in setting down the load. Use power lowering whenever possible.

10.7.1 Electromagnetic Interference Susceptibility. Electronic equipment on cranes, including control systems and load indicating devices, may be susceptible to electromagnetic interference (EMI), especially when operating near ships' radar or other radio transmitting sources. Activities need to be aware of the EMI environment in the vicinity of crane operations and assess the impact of such environment on potentially susceptible equipment.

10.8 Lifting of Personnel. The lifting of personnel by crane shall only be accomplished when no safer method is available. When lifting personnel, the following requirements apply: (For naval shipyards, refer to the NAVSEA Crane Quality Manual.)

- a. This is a complex lift as defined above. Each activity shall have written procedures that conform to these requirements. The activity safety office shall approve these procedures.
- b. Cranes, rigging gear, and personnel platforms shall conform to OSHA (29 CFR 1926.550g) requirements.
- c. A body harness and shock absorbing lanyard shall be worn and attached to the lower load block or to a structural member within the personnel platform capable of supporting the impact from a fall. The harness and anchorage system shall conform to OSHA requirements.

10.8.1 Personnel Platform Loading. The personnel platform shall not be loaded in excess of its rated load capacity. The number of persons occupying the personnel

platform shall not exceed the number required for the work being performed.  
Personnel

platforms shall be used only for personnel, their tools, and the materials necessary to do their work and shall not be used to hoist materials or tools when not hoisting personnel. Materials and tools for use during a personnel lift shall be secured to prevent displacement and shall be evenly distributed within the confines of the platform while the platform is suspended.

10.8.2 Operation. Hoisting of the personnel platform shall be performed in a slow, controlled, cautious manner with no sudden movements of the crane or derrick. Load and boom hoist drum brakes, swing brakes, and locking devices such as pawls or dogs shall be engaged when the occupied personnel platform is in a stationary position. The crane shall be uniformly level within one percent of level grade and located on firm footing. Cranes equipped with outriggers shall have them all fully deployed following OEM's specifications, insofar as applicable, when hoisting personnel. The total weight of the loaded personnel platform and related rigging shall not exceed 50 percent of the rated capacity for the radius and configuration of the crane or derrick. Lift and lowering speeds shall not exceed 100 feet per minute.

10.8.2.1 Trial Lift. A trial lift with the unoccupied personnel platform loaded to the anticipated weight to be lifted shall be made from ground level, or any other location where personnel will enter the platform to each location at which the personnel platform is to be hoisted and positioned. This trial lift shall be performed immediately prior to placing personnel on the platform. The operator shall determine that all systems, controls and safety devices are activated and functioning properly; that no interference exists; and that all configurations necessary to reach those work locations will allow the operator to remain under the 50 percent limit of the hoist's rated capacity. A single trial lift may be performed at one time for all locations that are to be reached from a single set up position. For mobile cranes, the trial lift shall be repeated prior to hoisting personnel whenever the crane is moved and set up in a new location or returned to a previously used location. Additionally, the trial lift shall be repeated when the lift route is changed unless the operator determines that the route change is not significant (i.e., the route change would not affect the safety of hoisted personnel). After the trial lift, and just prior to hoisting personnel, the platform shall be hoisted a few inches and inspected to ensure that it is secure and properly balanced. Personnel shall not be hoisted unless the following conditions exist: Hoist ropes shall be free of kinks, multiple part lines shall not be twisted around each other, the primary attachment shall be centered over the platform, and the hoisting system shall be inspected if the load rope is slack to ensure all ropes are properly seated on drums and in sheaves.

A visual inspection of the crane, rigging, personnel platform, and the crane base support or ground shall be conducted immediately after the trial lift to determine whether the testing has exposed any defect or produced any adverse effect upon any component or structure. Defects found during inspections that create a safety hazard, shall be corrected before hoisting personnel.

10.8.2.2 Lift Safety. A meeting attended by the crane team, personnel to be lifted, and the person responsible for the task to be performed shall be held to review the appropriate procedures to be followed. This meeting shall be conducted prior to the trial lift at each new work location, and shall be repeated for any personnel newly assigned to the operation.

Before personnel exit or enter a hoisted platform that is not landed, the platform shall be secured to the structure where the work is to be performed, unless securing to the structure creates an unsafe situation. Personnel shall keep all parts of the body inside the platform during raising, lowering, and positioning. This provision does not apply to an occupant of the platform performing the duties of a signal person. Tag lines shall be used unless their use creates an unsafe condition. The crane operator shall remain at the controls at all times while the platform is occupied. Hoisting of personnel shall be promptly discontinued upon indication of any dangerous weather conditions or other impending danger. Personnel being hoisted shall remain in continuous sight of and in direct communication with the operator or signal person. In those situations where direct visual contact with the operator is not possible, and the use of a signal person would create a greater hazard for the person, direct communication alone such as by radio may be used. No lifts shall be made on another of the crane's load lines while personnel are suspended on a platform. Traveling the crane while personnel are hoisted is prohibited, except for portal and bridge cranes. A complete trial run shall be performed to test the route of travel before personnel are allowed to occupy the platform. This trial run can be performed at the same time as the trial lift.

10.9 Adverse Operating Conditions. When an operator observes an adverse operating condition, he/she shall suspend operations and notify the supervisor for resolution. An adverse operating condition may result from climatic conditions (snow, ice, wind, rain, lightning, etc.), inadequate support conditions (loose soil, outrigger/stabilizer bearing on manhole, etc.), congestion or obstructions; improper or inadequate rigging procedures, or any other situation that the operator feels could result in uncontrolled movement or otherwise render the operation unsafe. Activities shall develop instructions for suspending operations and securing WHE in adverse weather conditions, including high winds. Operating instructions for adverse weather conditions shall be posted in the operator's cab. Specified wind speeds for reducing allowable loads and for curtailing operations shall be based on control of the load and OEM recommendations for stability of the equipment during high winds. Activities shall have adequate means for monitoring local weather conditions.

10.10 Positioning the Crane for Stability. Overturning mobile cranes is one of the most frequently occurring accidents. Mobile crane operators are responsible for positioning their machines and outriggers/stabilizers on foundations or supports that are capable of safely supporting the crane, and for complying with any machine capacity down rating due to limits of the foundation or support. The activity facilities engineering organization is responsible for identifying limitations and restrictions for operating mobile cranes on

piers, wharves, or other structures. When the crane is so equipped, the operator shall set the outriggers/stabilizers unless there is specific authorization to operate on-rubber. Such authorization shall be posted in the cab with special down rating instructions or load charts. (See section 11.) Ensure compliance with all on-rubber-lifting requirements of the OEM. Whenever practical and as permitted by the OEM, when lifting on-rubber, extend outriggers and maintain minimal clearance (3 to 4 inches) above ground as recommended by the OEM. When lifting on outriggers, the operator shall ensure the outriggers are properly extended, support the entire weight of the crane, and the crane is level. For cranes with stabilizers, the operator shall set the stabilizers in accordance with the OEM's requirements. The operator shall check the outrigger/stabilizer pads to ensure they have satisfactory ground bearing. When operating at radii where stability is the controlling factor, the operator shall be especially alert. The weight of the load to be lifted and the operating radius shall be accurately determined and shall not exceed those safe capacities posted on the rating chart. See paragraph 10.5 for verifying the radii of the lift. Use of the load chart is required instead of waiting for the crane to feel light. Do not lift in front quadrants (over the carrier cab) between the front two outriggers unless OEM's instruction manual or load chart authorizes such lifts. When lifting a capacity load at maximum allowable radius, ensure load does not swing out of allowable radius.

**10.11 Proper Clearance.** The crane shall be so positioned at the job site as to provide adequate clearance from all obstructions to any part of the crane in any position that it will operate. No part of the crane rotate structure shall be closer than two feet from an obstruction that could trap a workman. Particular attention to counterweight clearance is required. Accessible areas within the swing radius of the rotating superstructure of a crane shall be barricaded to prevent personnel from being struck or crushed by the crane.

**10.11.1 Overhead Electrical Transmission Lines.** When operating in the vicinity of overhead transmission lines, operators and riggers shall be alert to this special hazard. If any part of the crane (including the fully extended boom of a telescoping boom crane) or load could approach the distances noted in figure 10-3 during a proposed operation, the following steps shall be taken. The preferred alternative is to have the power line de-energized and visibly grounded. Even when the power is shut off, the minimum clearance distances of figure 10-3 shall be maintained. If it is not possible to have the power line de-energized, the following apply:

- a. An operator supervisor or rigger supervisor shall visit the site, assess potential hazards, and establish procedures to safely complete the operation.
- b. The clearance distances noted in figure 10-3 shall be maintained. For long span lines, lateral movement due to wind shall be considered in assessing whether the minimum clearance should be increased.



- c. A rigger whose sole responsibility is to verify that the established minimum clearances are maintained shall be in constant contact with the operator.
- d. No one shall be permitted to touch the crane or the load unless the above noted rigger indicates it is safe to do so. Personnel permitted to touch the crane shall use protective equipment rated for the voltage.
- e. Tag lines for load control, when required, shall be of a non-conductive type.

These rules shall be followed even when the crane is equipped with insulators or sensors for detecting high voltage. Do not depend on these devices.

10.12 Positioning the Boom. Disengage boom hoist pawl (boom dog). The boom tip and hook shall always be centered over the load prior to rigger hookup. Ensure there is no side loading on the boom or swinging of the load on lift-off. Never side-load the boom by dragging loads. Use the shortest boom radius practical for maximum stability and strength. When not using the boom hoist, the operator shall reengage the boom hoist pawl. If the crane is equipped with automatic engaging pawl, it shall be checked daily during the ODCL inspection. The boom hoist pawl shall always be engaged when making capacity lifts. Use caution when lowering the boom and the load line at the same time with a load suspended. This may cause the load to swing out of control or out of stable radius.

10.13 Hoisting and Lowering the Load. Loads shall be lifted vertically only. Side-loads shall not be applied to the hook. Check the load chart for safe load and radius. Upon signal to lift the load, the operator, after slight lift-off, shall stop hoisting to ensure the load is properly balanced and the brake is functioning properly. Operators shall follow this procedure each time they hoist a load. If load is not centered correctly or the brakes are not functioning correctly, the operator shall set the load down and cease operations until the deficiency is corrected. If correct, proceed to the height directed by the rigger and await the signal for the next motion. Cranes shall never be used to drag the load. When lowering the load or empty hook, always maintain at least two wraps of wire rope on grooved drums and three wraps on ungrooved drums. The operator shall never leave the controls with a load suspended. Special precautions shall be taken when making lifts out of water. When the load comes out of water, buoyancy is lost and load increases. Also, just as the load leaves the water, the suction can increase the load momentarily. For loads with padeyes attached, loading shall be in the plane of the padeye only.

10.14 Rotating the Load. Disengage the swing lock. After hoisting to the height directed by the rigger and upon receiving the signal to rotate, the operator shall begin the rotate very slowly. If the swing brake is found not to be functioning correctly, the operator shall notify the rigger-in-charge who shall direct the operator to land the load at a safe location. If necessary to rotate to a safe location, rotation shall be slow and

carefully controlled. After landing the load, secure the crane until the swing brake deficiency is corrected.

10.15 Traveling the Crane. Supervisors shall ensure operators and crane walkers are aware of crane rail travel restrictions for the crane(s) to which they are assigned. Traveling a crane with a suspended load is a hazardous operation. When traveling, always have the boom in the position providing adequate stability in case the load should swing out of radius.

For mobile cranes, the following also apply: Only when permitted by the OEM shall a mobile crane be permitted to travel with a suspended load. On mobile cranes, whenever possible, travel with the boom and load over the rear and parallel with the axis of the crane carrier and with the direction of travel either forward or reverse, with the swing lock/brake engaged. Also, whenever practical and as permitted by the OEM, extend the outriggers and maintain minimal clearance (3 to 4 inches) above the ground. Do not travel truck or cruiser cranes with the load over the side unless specifically permitted by the OEM and authorized by the certifying official. Exceptions and authorizations, with special load limiting and other instructions, shall be posted in the crane. (See section 11.) When traveling, keep loads close to the ground. Avoid sudden starts and stops. Always travel at the slowest possible speed. When traveling with the boom over the side, the travel motion shall be started slowly and smoothly to prevent excessive side loading of the boom. Be sure the ground over which the crane shall travel can support the machine.

10.16 Load Control. Sufficient tag lines shall be used to minimize load swing and rotation. Properly sized and inspected chainfalls, turnbuckles, or similar equipment may be used to aid in load control where clearances are limited or where precise load control is required.

10.17 Securing the Crane. The procedure for shutdown will vary with different cranes. Consult the OEM's instruction manual. On truck cranes, set the boom in the carrier cradle, where provided. Set the crane carrier brake and chock wheels if the crane is on an incline. On crawler cranes lower the boom to the lowest possible angle. Hang the blocks near boom point. Set the boom pawl and the swing lock. Disengage the master clutch and put all other controls in neutral. Shut down the engine and lock the machine, cab, and machinery house. When moving a truck, cruiser, or crawler crane to and from job sites, secure the hook and block to the carrier frame to prevent them from swinging into the boom. When securing the hook block, raise it just enough to take up the slack. Do not over tighten. A weak link (e.g., nylon rope) connection shall be used to secure the hook block to the crane. Ensure there are adequate clearances. Complete the ODCL and turn it in to the supervisor.

10.18 Mobile Cranes Temporarily Mounted on Barges. A marine list and trim indicator shall be installed in the operator's cab. Operating list and trim shall not exceed three

degrees. The reduced capacity load chart (see section 3) shall be posted in the operator's cab. Specific operating precautions (list and trim limitations, operating wind velocity limitations, set-up location, etc.) shall also be posted. On cranes equipped with outriggers, operation shall be on outriggers only. Outrigger pads shall rest on wood blocking. Crane set-up location, movement restrictions, and tie-down types and locations shall be established by the activity engineering organization. The crane carrier shall be secured to barge deck padeyes or connectors with tie-downs. Tie-downs shall have some slack when the crane is fully raised on outriggers. Operations shall cease whenever weather or wave conditions result in unsafe operation.

# STANDARD HAND SIGNALS FOR CONTROLLING CRANE OPERATIONS.

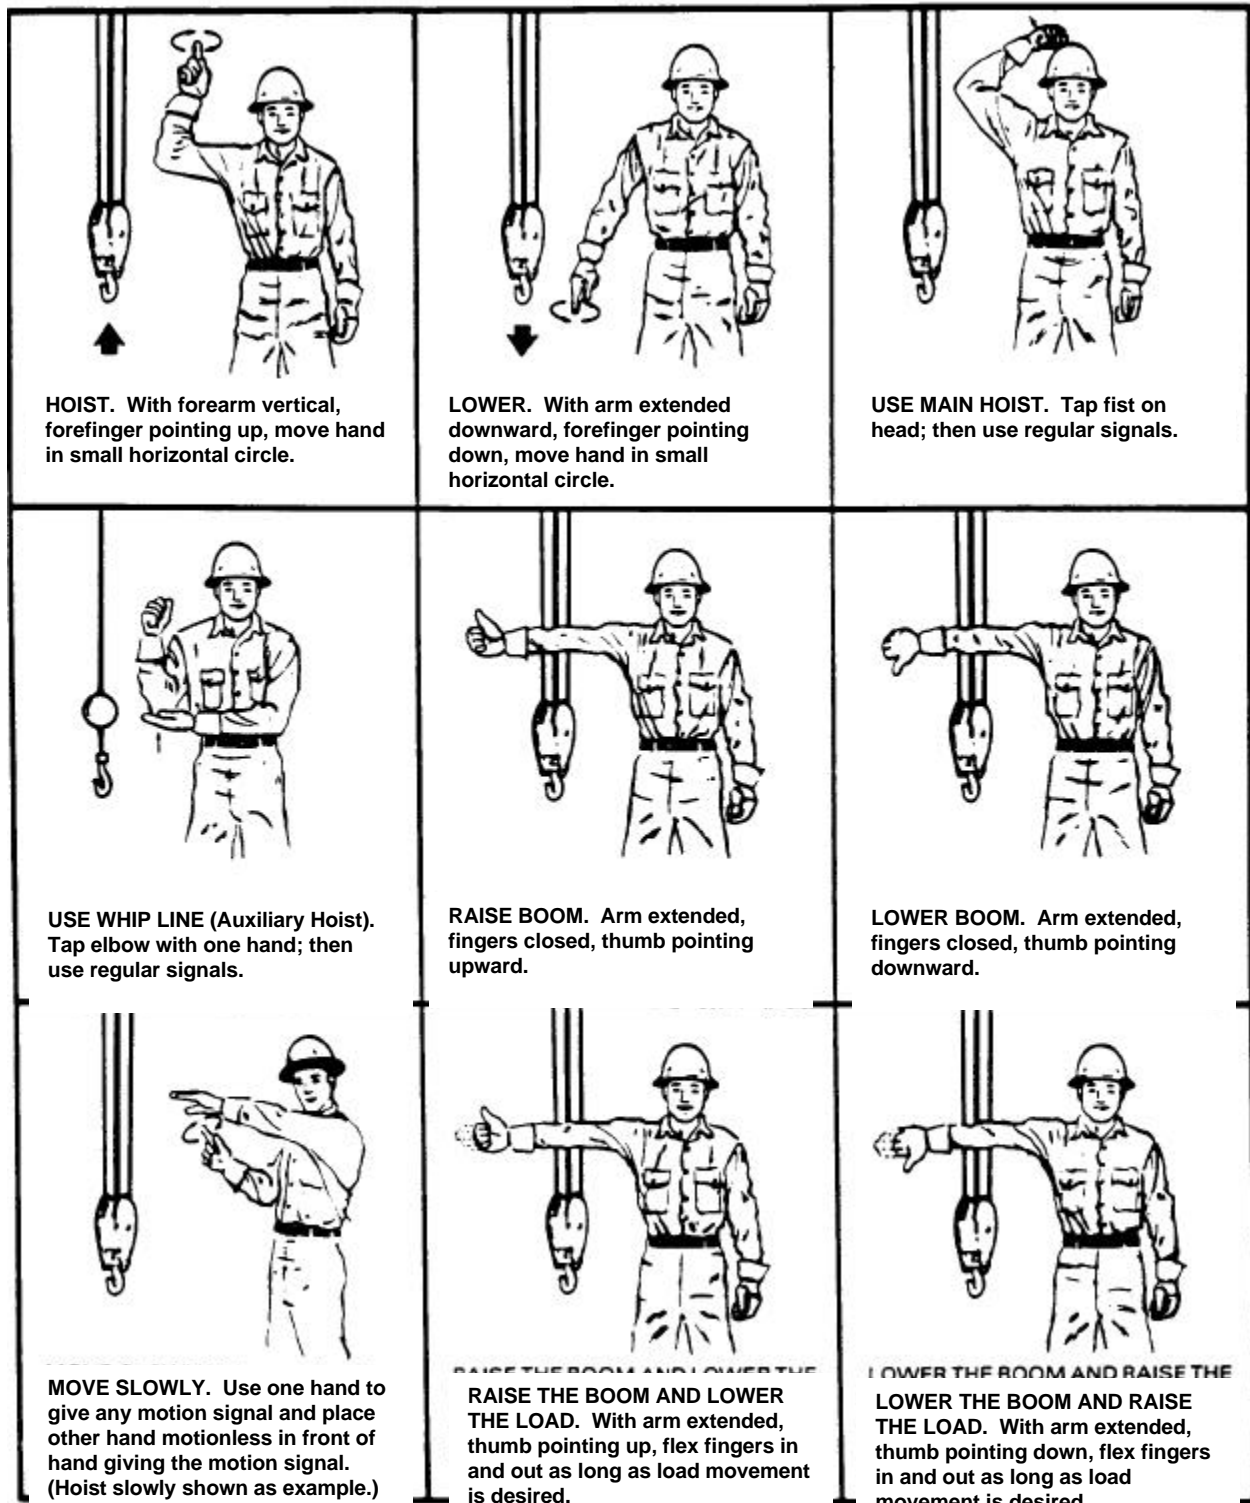


FIGURE 10-1 (1 of 3)

STANDARD HAND SIGNALS FOR CONTROLLING CRANE OPERATIONS (cont'd).










 <p><b>SWING.</b> Arm extended, point with finger in direction of swing of boom.</p>	 <p><b>STOP.</b> Arm extended, palm down, move arm back and forth horizontally.</p>	 <p><b>EMERGENCY STOP.</b> Both arms extended, palms down, move arms back and forth horizontally.</p>
 <p><b>TRAVEL.</b> Arm extended forward, hand open and slightly raised, make pushing motion in direction of travel.</p>	 <p><b>DOG EVERYTHING.</b> Clasp hands in front of body.</p>	 <p><b>TRAVEL (Both Tracks).</b> Use both fists in front of body, making a circular motion about each other, indicating direction of travel, forward or backward. (For land cranes only.)</p>
 <p><b>TRAVEL (One Track)</b> Lock the track on side indicated by raised fist. Travel opposite track in direction indicated by circular motion of other fist, rotated vertically in front of body. *For land cranes only.)</p>	 <p><b>EXTEND BOOM.</b> (Telescoping Booms). Both fists in front of body with thumbs pointing outward.</p>	 <p><b>RETRACT BOOM (Telescoping Booms).</b> Both fists in front of body with thumbs pointing toward each other.</p>

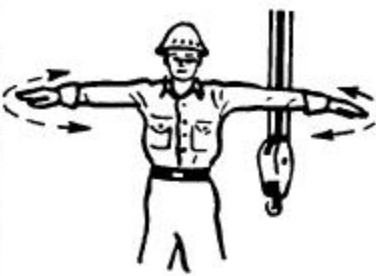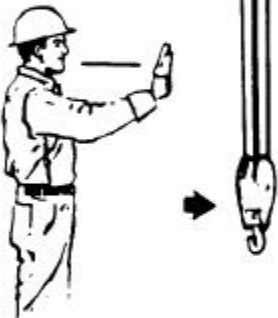FIGURE 10-1 (2 of 3)

STANDARD HAND SIGNALS FOR CONTROLLING CRANE OPERATIONS (cont'd).

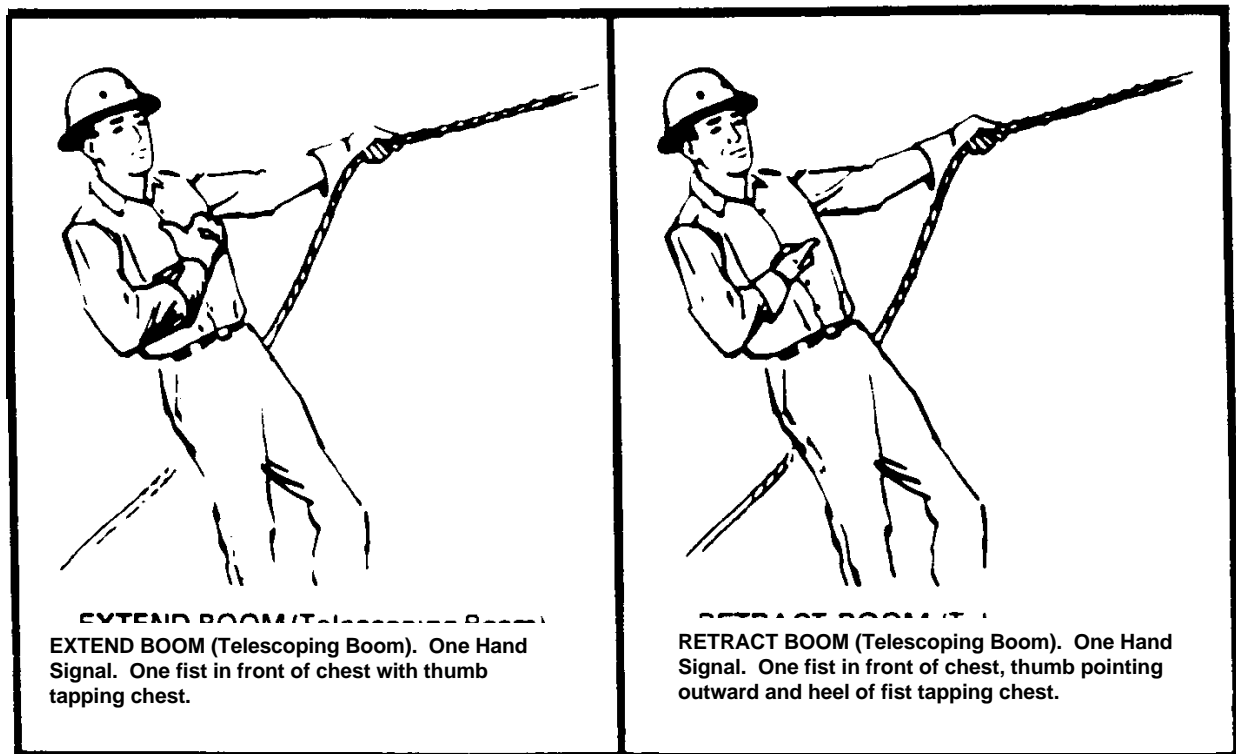


FIGURE 10-1 (3 of 3)

# STANDARD HAND SIGNALS FOR CONTROLLING OVERHEAD AND GANTRY CRANES.



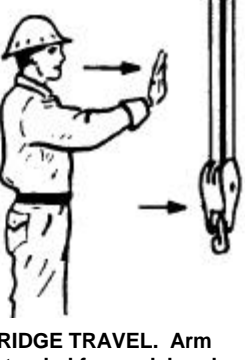

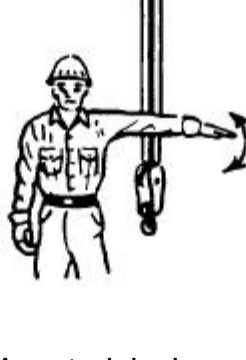
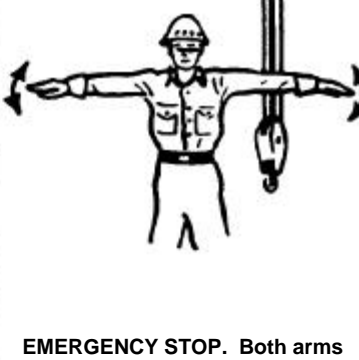
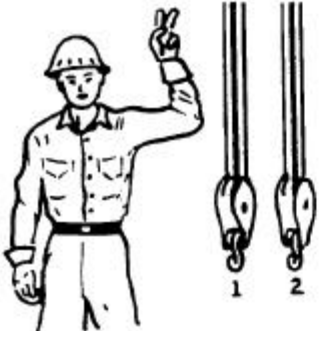


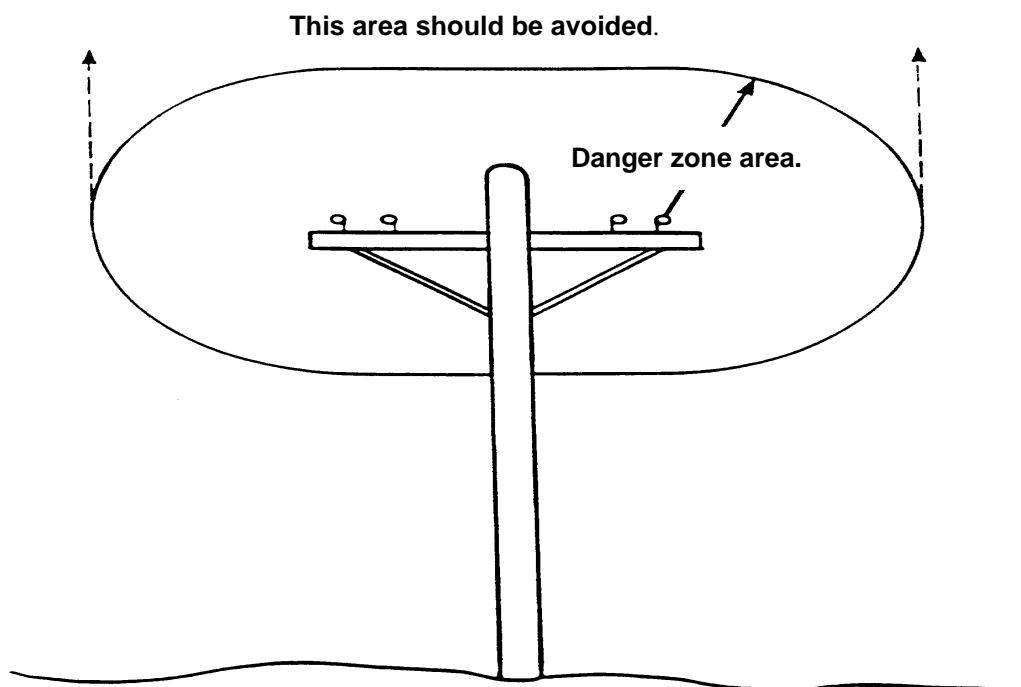
 <p><b>HOIST.</b> With forearm vertical, forefinger pointing up, move hand in small horizontal circles.</p>	 <p><b>LOWER.</b> With arm extended downward, forefinger pointing down, move hand in small horizontal circles.</p>	 <p><b>BRIDGE TRAVEL.</b> Arm extended forward, hand open and slightly raised, make pushing motion in direction of travel.</p>
 <p><b>TROLLEY TRAVEL.</b> Palm up, fingers closed, thumb pointing in direction of motion, jerk horizontally.</p>	 <p><b>STOP.</b> Arm extended, palm down, move arm back and forth horizontally.</p>	 <p><b>EMERGENCY STOP.</b> Both arms extended, palms down, move arms back and forth horizontally.</p>
 <p><b>MULTIPLE TROLLEYS.</b> Hold up one finger for block marked "1" and two fingers for block marked "2." Regular signals follow.</p>	 <p><b>MOVE SLOWLY.</b> Use one hand to give any motion signal and place other hand motionless in front of hand giving the motion signal. (Hoist slowly shown as example.)</p>	 <p><b>MAGNET IS MAGNET IS DISCONNECTED.</b> Crane operator spreads both hands apart – palms up.</p>

FIGURE 10-2

# **DANGER ZONE FOR CRANES AND LIFTED LOADS OPERATING NEAR ELECTRICAL TRANSMISSION LINES.**



Required clearance for normal voltage in operation near high voltage power lines and operation in transit with no load and boom or mast lowered.

NORMAL VOLTAGE, KV (PHASE TO PHASE)	MINIMUM REQUIRED CLEARANCE, FT (M)
--	---------------------------------------

## Operation Near High Voltage Power Lines

0 to 50	10 ( 3.05)
Over 50 to 200	15 ( 4.60)
Over 200 to 350	20 ( 6.10)
Over 350 to 500	25 ( 7.62)
Over 500 to 750	35 (10.67)
Over 750 to 1000	45 (13.72)

## Operation in Transit with No Load and Boom or Mast Lowered

0 to 0.75	4 (1.22)
Over 0.75 to 50	6 (1.83)
Over 50 to 345	10 (3.05)
Over 345 to 750	16 (4.87)
Over 750 to 1000	20 (6.10)

FIGURE 10-3



(INTENTIONALLY LEFT BLANK)



## SECTION 11 ADDITIONAL REQUIREMENTS

11.1 Capacity Ratings and Crane Identification. Each crane shall be marked with its capacity rating(s), in pounds, visible to the operator. The capacity ratings and test loads recorded on the Certification of Load Test and Condition Inspection shall be expressed in pounds. For multiple cranes in a building, each crane shall have a unique identification marked on it, which shall be visible from the floor. For multiple trolleys on a bridge structure or track system, the bridge structure or track system shall be marked with its maximum capacity in pounds.

11.2 Stability Testing and Calibration (Used and Altered Cranes). All newly acquired used locomotive, truck, cruiser, crash, commercial truck mounted, articulating boom, and crawler cranes shall be initially tested for stability in those cases where the OEM's load and stability data are not available or where the acquiring activity suspects that previously performed alterations may affect stability. In addition, a crane shall be tested for stability after alterations that significantly affect the stability of the crane. The activity engineering organization shall determine if a stability test is required after a crane alteration. The stability test and rating shall be conducted as follows.

11.2.1 Margin of Stability. The margin of stability for determination of load ratings, with booms of stipulated lengths at stipulated working radii for the various types of crane mountings, is established by taking a percentage of the load that will produce a condition of balance with the boom in the least stable direction relative to the mounting. Crane load ratings shall not exceed the percentages in table 11-1 under the conditions stipulated in paragraphs 11.2.2 and 11.2.3.

11.2.2 For Locomotive Cranes. The following stipulations shall govern the application of the values in table 11-1.

11.2.2.1 Tipping. Tipping with or without the use of outriggers occurs when half of the wheels farthest from the load leave the rail.

Note: As a precaution while testing for free ratings, outriggers shall be loosely applied. Rail clamps shall not be used.

11.2.2.2 Level Ground. The crane shall be standing on track that is level within one percent grade.

11.2.3 For Truck, Cruiser, And Crawler Cranes. Determination of balance point loads shall be in accordance with SAE J765, Crane Load Stability Test Code.

Note: See "LIMITATIONS" in SAE J765 prior to performing the stability test.



---

TABLE 11-1  
Load Ratings for Various Types of Mountings  
(Used and Altered Cranes)

<u>Type of Crane Mounting</u>	<u>Maximum Load Ratings (% of Balance Point Load)</u>
Locomotive, without outriggers/stabilizers	
Booms 60 feet or less	85
Booms over 60 feet	85 <sup>(1)</sup>
Locomotive, using outriggers/stabilizers fully extended	80
Crawler, without outriggers	75
Crawler, using outriggers fully extended	85
Truck and wheel mounted without outriggers/stabilizers	75
Truck and wheel mounted, using outriggers/stabilizers fully extended	85
Truck and wheel mounted with outriggers, outriggers not extended	
Over the front or rear <sup>(2)</sup>	75
Over the side <sup>(3)</sup>	50

<sup>(1)</sup>Unless this results in less than 30,000 pound-feet net stabilizing moment about the rail, which shall be the minimum with such booms.

<sup>(2)</sup>On those cranes where the OEM specifies a free rated over the front or rear capacity.

<sup>(3)</sup>On those cranes where the OEM specifies a free rated over the side capacity.

---

**11.2.4 Balance Point Loads.** Balance point loads from which ratings are determined shall be established under static conditions only, i.e., without dynamic effect of hoisting, lowering, or swinging. The OEM's criteria for determination of the "balance point" shall be used. When OEM criteria are not available, the balance point for cranes with outriggers or stabilizers extended shall be the point where the outrigger or stabilizer arm floats within the ground pad connection or, with a permanently attached ground pad,

when the pad lifts off the ground surface; or in the case of horizontal extending outrigger beams, when the fixed outrigger housing lifts off the top surface of the extendable outrigger beam.

11.2.5 Rated Capacity. For mobile cranes, the rated capacity includes the weight of (or deduction values for) the hook, block, slings, and ancillary lifting devices (and for some cranes hoist wire rope not accounted for in load charts). Follow OEM load chart instructions for weight deduction values.

11.2.6 Other Stability Factors. The effectiveness of these preceding stability factors will be influenced by such additional factors as freely suspended loads, track, wind or ground conditions, condition and inflation of rubber tires, boom lengths, proper operating speeds for existing conditions, and, in general, careful and competent operation. The user shall take all of these into account.

11.3 Free-Rated Capacities. The maximum free-rated capacities of truck, cruiser, crash, crawler, and locomotive cranes when lifting or traveling with a load shall be as follows:

11.3.1 Cranes Equipped with Outriggers and Outriggers not Deployed

11.3.1.1 Over the Rear and Over the Front. For all cranes, use OEM's rated capacity.

11.3.1.2 Over the Side. For cranes where the OEM permits free-rated lifts over the side, the certifying official shall approve the capacity. Capacity shall not exceed 60 percent of the OEM's published load chart values or, if a stability test is performed in accordance with SAE J765, 50 percent of the balance point loads.

11.3.2 Cranes not Equipped with Outriggers. This applies to most crawler cranes and warehouse cranes (USN prefix no. 12) and some cruiser and locomotive cranes. Use the OEM's rated capacity over the rear and/or front and over the side.

11.3.3 Aircraft and Helicopter Crash Cranes. Use OEM's rated capacity.

11.3.4 Commercial Truck Mounted and Articulating Boom Cranes. Follow OEM's guidelines and restrictions.

11.4 Wire Rope End Connections. End connections on wire rope used on WHE shall be limited to the following and subject to the further limitations prescribed herein.

11.4.1 Poured Socket End Connections. Poured spelter (i.e., molten zinc) and resin end connections using forged and cast steel sockets are approved for all WHE. Speltered socket end connections shall be fabricated in accordance with Naval Ships'

Technical Manual S9086-UU-STM-010 Chapter 613, Wire and Fiber Rope and Rigging.

Resin socket end connections shall be fabricated in accordance with resin OEM's instructions. Resin sockets shall not be used at operating temperatures that exceed OEM's recommendations. Contact NCC (Code 09W5) for a list of approved resins. The installed socket connection shall be inspected and load tested. The proof test for the installed socket shall be the appendix E load test for the crane.

11.4.2 Swaged Connections. Swaged end connections are approved for use as wire rope terminal end connections for WHE. Swaged connections shall be fabricated on a swage press designed for such purposes, using procedures and parts approved by the swage press OEM. The installed swaged connections shall be inspected and load tested.

11.4.3 Wedge Sockets. Except as noted and subject to the approval of the certifying official, wedge socket end connections may be used on mobile and locomotive cranes when terminal end connections are subject to frequent change-out due to conversions in boom length, reeving, or ancillary equipment, or installation of excavating attachments. Wedge socket end connections shall not be used on the following:

- a. WHE used for lifting and handling ammunition, or hazardous or explosive material as prescribed in NAVSEA OP-5, Ammunition and Explosives Ashore: Safety Regulations for Handling, Storing, Production, Renovation and Shipping.
- b. WHE used for lifting personnel.
- c. Non-mobile WHE (portal, gantry, bridge, hammerhead, floating cranes, etc.). See exception, paragraph 11.4.4.

#### 11.4.3.1 Special Precautions Pertaining To The Use of Wedge Socket Connections

- a. Wedge sockets develop only 70 percent of the breaking strength of the wire rope due to the crushing action of the wedge. Extreme caution shall be exercised when wedge socket connections are used in making rated capacity lifts.
- b. Wedge sockets are particularly subject to wear, faulty component fit, and damage from frequent change outs. They are also highly vulnerable to inadvertent wedge release and disassembly in two-blocking situations. When wedge sockets are used, care shall be taken to avoid accidental slackening of the wire rope releasing the wedge inside the socket.
- c. Single saddle wire rope clips that clamp both the dead end and live rope shall not be used in conjunction with a wedge socket. Such connectors are hazardous in that they restrain the wedge from seating properly in the socket and may damage the rope. Approved double saddle clips specifically designed for wedge sockets may be used.





d. Wedge sockets shall be installed in accordance with the following procedures:

- (1) Because the section of the wire rope used in the prior socket has been subject to sharp bending and crushing, it shall be cut and removed prior to re-socketing.
- (2) Caution shall be exercised in installing the wedge socket properly to ensure that the wire rope carrying the load is in direct alignment with eye of the socket clevis pin so the load pull is direct. (See figure 11-1.)
- (3) Place socket in upright position and bring the rope around in a large, easy to handle hoop. Extend the dead end of the wire rope from the socket a sufficient distance to secure the dead end in either of the ways shown in figure 11-1. Insert wedge into the socket permitting the rope to adjust around the wedge.
- (4) Secure the socket to a support and carefully take a strain on the live side of the rope to ensure proper initial seating of wedge. Increase load gradually until wedge is fully seated. Avoid applying any sudden shock loads.
- (5) Secure the dead end as shown in figure 11-1. Alternatively, approved double saddle clips specifically designed for wedge sockets may be used.

#### DEAD ENDING ROPE IN A SOCKET

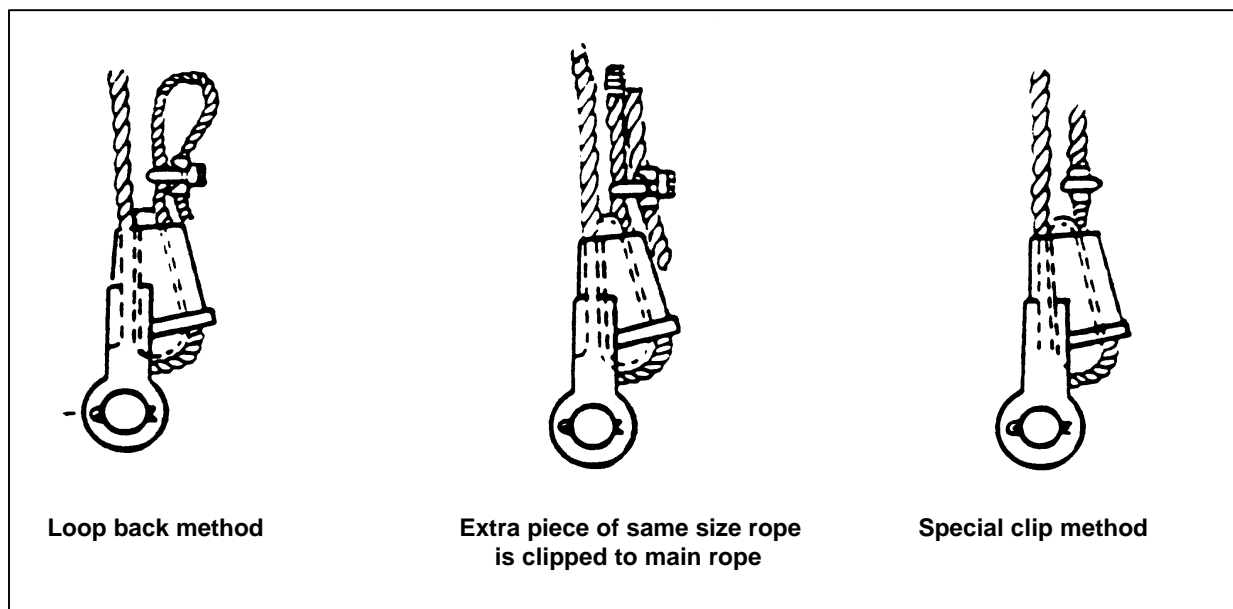


FIGURE 11-1

11.4.4 Other End Connections and Exceptions. The OEM's design configuration for dead end connection devices at the hoist drums are acceptable as originally installed and for replacement. The OEM's design configuration for dead end connections on the hoist block and frame of category 3 cranes (air, electric, hydraulic) are acceptable as originally installed and for replacement.

11.5 Boom Length Indicator (Telescoping Boom Cranes). If a crane does not have a boom length indicator in the cab, mark the boom to indicate lengths associated with the OEM's load chart.

11.6 Crane Lockout/Tagout Procedures. Activities shall develop written crane lockout/tagout procedures to ensure cranes or crane components with known deficiencies that may adversely affect their safe operation can not be operated (energized), and to ensure the control of energy during servicing and maintenance of the equipment. Crane tagout and lockout procedures shall conform to OPNAVINST 5100.23 and shall have the concurrence of the activity safety office.

11.7 Crane Safety Advisories and Equipment Deficiency Memoranda. The Navy Crane Center receives reports of equipment deficiencies, component failures, crane accidents, and other potentially unsafe conditions and practices. When applicable to activities other than the reporting activity, the Navy Crane Center will issue a Crane Safety Advisory (CSA) or an Equipment Deficiency Memorandum (EDM). Generally, a CSA is directive and often requires feedback from the activities receiving the advisory. An EDM is provided for information and can include deficiencies to non-load bearing/load controlling parts.

For each applicable CSA issued by the Navy Crane Center, activities shall perform the corrective actions, tests, inspections, measurements, etc., and report to the Navy Crane Center as directed. Addressees who receive fax copies of CSA's shall sign and date the cover sheet and fax it to the Navy Crane Center within five working days to confirm receipt, and are requested to provide amplifying comments. Activities shall track corrective actions associated with CSA's.



## SECTION 12 INVESTIGATION AND REPORTING OF WHE ACCIDENTS

12.1 General. In addition to the investigation and reporting requirements of OPNAV Instructions 5102.1 and 5100.23, activities shall investigate and report WHE accidents, as defined below, in accordance with this section. The term “accident” is synonymous with “mishap” as used in the OPNAV instructions.

12.2 Discussion. For the purposes of this section, it is assumed there is an "operating envelope" around any crane, and inside the envelope are the following six elements:

- a. The crane.
- b. The operator.
- c. The riggers and crane walker.
- d. The rigging gear between the hook and the load.
- e. The load.
- f. The crane’s supporting structure (ground, rail, etc.)

The potential for an accident exists when any of the six elements fails to perform correctly.

12.3 Definition. An accident occurs when any one or more of the six elements in the operating envelope fails to perform correctly during operation, including operation during maintenance or testing resulting in the following:

- a. Personnel injury or death.
- b. Material or equipment damage.
- c. Dropped load.
- d. Derailment.
- e. Two-blocking.
- f. Overload.
- g. Collision, including unplanned contact between the load, crane, and/or other objects.

Items c, d, e, f, and g are considered accidents even though no material damage or injury occurs. A component failure (e.g., motor burnout, gear tooth failure, bearing failure) is not considered an accident solely due to material or equipment damage unless the component failure results in damage to other components (e.g., dropped boom, dropped load, roll over, etc.).

Other unplanned occurrences with lessons to be learned that do not fall under the WHE accident definition, including near misses, shall be reported via letter with appropriate detail and lessons learned to NCC for information.

**12.4 Action.** Upon having an accident or having seen evidence of damage (suspected accident), the crane team shall stop all operations, secure power, ensure the crane is safely secured from operation, and notify immediate supervisor(s). If there is impending danger to the equipment or personnel, place the crane and load in a safe position prior to notifying supervision. Ensure the accident scene is secured and undisturbed so as to facilitate the investigation. The supervisor shall review the situation and take any further emergency action, including stopping production work or other operations that could aggravate the situation. The supervisor shall notify management personnel as well as the activity safety office.

**12.4.1 Initial Notification.** Notify the Navy Crane Center (Code 09W6) by fax (610) 595-0747 or phone (610) 595-0505 as soon as practical but not later than 24 hours after an accident involving a fatality, in-patient hospitalization, overturned crane, collapsed boom, or any other major damage to the crane or adjacent property. If notification is by fax, provide a point of contact for additional information.

**12.4.2 Investigation and Reporting.** For each suspected accident, activities shall immediately perform a comprehensive investigation. Activities shall prepare a Weight Handling Equipment Accident Report, figure 12-1, and forward a copy to the Navy Crane Center (Code 09W6) by mail or by fax within 30 days of the accident. The activity that is responsible for the weight handling operation at the time of the accident shall initiate and submit the accident report. If the WHE is owned by another activity, the accident report shall be concurred in by the activity that owns the equipment prior to submitting to the NCC. Photographs of the accident scene and material/property damage shall be taken, if possible, and attached to the report. The Navy Crane Center will review crane accident reports and issue crane safety advisories and lessons learned as appropriate.

WEIGHT HANDLING EQUIPMENT ACCIDENT REPORT				Report Date:	
From:		To: Navy Crane Center, NORTHNAVFACENGCOM 10 Industrial Hwy; MS #82 Lester, PA 19113-2090 FAX (610) 595-0748			
UIC:					
Activity:				Report No:	
Crane No:		Cat:		Accident Date: Time: hrs	
SPS: GPS:		Crane Type:		Crane Manufacturer:	
Location:				Weather:	
Crane Capacity:		Hook Capacity:		Weight of Load on Hook:	
Fatality/Permanent Total Disability? YES NO				Material/Property Cost Estimate:	
Loss of Work Time Beyond the Day or Shift on Which it Occured? YES NO					
<b>Accident Type:</b> <input type="checkbox"/> Personal Injury <input type="checkbox"/> Overload <input type="checkbox"/> Derail <input type="checkbox"/> Damaged Rigging Gear <input type="checkbox"/> Load Collision <input type="checkbox"/> Two Blocked <input type="checkbox"/> Dropped Load <input type="checkbox"/> Damaged Crane <input type="checkbox"/> Crane Collision <input type="checkbox"/> Damaged Load <input type="checkbox"/> Other Specify _____					
<b>Cause of Accident:</b> <input type="checkbox"/> Improper Operation <input type="checkbox"/> Equipment Failure <input type="checkbox"/> Inadequate Visibility <input type="checkbox"/> Improper Rigging <input type="checkbox"/> Switch Alignment <input type="checkbox"/> Inadequate Communication <input type="checkbox"/> Track Condition <input type="checkbox"/> Procedural Failure <input type="checkbox"/> Other Specify _____					
<b>Chargeable to:</b> <input type="checkbox"/> Track Walker <input type="checkbox"/> Rigger <input type="checkbox"/> Operator <input type="checkbox"/> Maintenance <input type="checkbox"/> Management/Supervision <input type="checkbox"/> Other Specify _____					
<b>Crane Function:</b> <input type="checkbox"/> Travel <input type="checkbox"/> Hoist <input type="checkbox"/> Rotate <input type="checkbox"/> Luffing <input type="checkbox"/> Lower <input type="checkbox"/> Telescoping					
Is this accident indicative of a recurring problem? <input type="checkbox"/> Yes <input type="checkbox"/> No If Yes, list Accident Report Nos.: _____					
<b>ATTACH COMPLETE AND CONCISE SITUATION DESCRIPTION AND CORRECTIVE/PREVENTIVE ACTIONS TAKEN AS ENCLOSURE (1).</b> Include probable cause and contributing factors. Assess damages and define responsibility. For equipment malfunction or failure include specific description of the component and the resulting effect or problem caused by the malfunction or failure. List Corrective/Preventive Actions assigned and responsible codes.					
Preparer's Signature			Code		Date
<b>CONCURRENCES (Include Signature, Code, and Date)</b> <div style="border: 1px solid black; height: 40px; width: 100%;"></div>					

FIGURE 12-1 (1 of 2)

## WEIGHT HANDLING EQUIPMENT ACCIDENT REPORT INSTRUCTIONS

1. Report Date: The date the accident report is completed.
2. From: The naval activity that owns the crane and UIC number.
3. Activity: The naval activity where the accident took place.
4. Report No.: The activity assigned accident number (e.g., 95-001).
5. Crane No.: The activity assigned crane number (e.g., PC-5).
6. Category: Identify category of crane (i.e., 1, 2, 3, or 4).
7. Accident Date: The date the accident occurred.
8. Time: The time (24 hour clock) the accident occurred (e.g., 1300).
9. Category of Service: Special purpose service (SPS) or general purpose service (GPS).
10. Crane Type: The type of crane involved in the accident (e.g., mobile, bridge).
11. Crane Manufacturer: The manufacturer of the crane (e.g., Dravo, Grove, P&H).
12. Location: The detailed location where the accident took place (e.g., building 213, dry dock 5).
13. Weather: The weather conditions at time of accident (e.g., wind, rain, cold).
14. Crane Capacity: The certified capacity of the crane (e.g., 60 tons).
15. Hook Capacity: The capacity of the hook involved in the accident at the maximum radius of the operation.
16. Weight of Load on Hook: If applicable, the weight of the load on the hook.
17. Fatality or permanent total disability?: Check yes or no.
18. Material/Property Cost Estimate: Estimate total cost of damage resulting from the accident.
19. Loss of work time beyond the day or shift on which it occurred?: Check yes or no.
20. Accident Type: Check all that apply.
21. Cause of Accident: Check all that apply.
22. Chargeable to: Check all that apply.
23. Crane Function: Check the function(s) in operation at time of accident. Check all that apply.
24. Is this a recurring problem?: Check yes or no. Identify any other similar accidents.
25. Situation Description/Corrective Actions: Self-explanatory.
26. Concurrence: Signatures of activity personnel verifying the accident report.

FIGURE 12-1 (2 of 2)



SECTION 13  
LINE HANDLING MECHANISMS (CAPSTANS AND WINCHES)  
Exclusive of Hand-Powered Mechanisms

Note: These requirements also apply to capstans and deck winches on floating cranes.

13.1 General. Activities shall provide a program of maintenance, inspection, and testing to incorporate the following requirements as a minimum.

13.2 Operator Check. Prior to each use, the operator shall perform an inspection as follows:

- a. Inspect the capstan head (drum) for cracks, rough or sharp surfaces, and clearance around cover plates or decking.
- b. Visually check controls for damage.
- c. Inspect accessible parts of the capstan for wear, cracks, loose fasteners, and general condition.
- d. Include any specific inspection items prescribed by the OEM.
- e. Operate the capstan or winch through all motions and check for proper operation of control points, brakes, and drum or head clearance. Report any deficiencies found during inspection, or noises heard during operational check, to the shop responsible for repair and maintenance.

13.3 Preventive Maintenance. Annually perform a preventive maintenance inspection for each line handling mechanism as follows:

- a. Remove all covers, guards, and shields necessary to provide access to the foundation, capstan or winch, motors, brakes, and controls.
- b. Check motor and machinery foundations for soundness and drainage.
- c. Check for loose, missing, corroded, or cracked structural members, securing bolts, rods, nuts, rivets, etc.
- d. Inspect motor case and gearbox for cracks, corrosion, and loose or missing fasteners.
- e. Inspect (where practical) for worn, defective, or misaligned bearings, couplings, bushings, shafts, pins, gears, and drums.

- f. Inspect to see if the unit is lubricated as required by the OEM and check lubricant levels as required.
- g. Inspect brakes for proper security of brake to foundation, lining thickness, condition of brake wheel, proper adjustment, and condition of wiring and electrical components.
- h. Inspect wire rope (where applicable) for broken wires, damaged strands, and excessive wear.
- i. Any additional inspections required by the OEM.
- j. Operate the line handling mechanism through all modes and observe proper functioning of motors, controls, brakes, and gears. Listen for unusual noises during operation.

#### 13.4 Condition Inspection, Load Test, and Certification

13.4.1 Frequency. Every four years, each line handling mechanism shall be given a thorough condition inspection, consisting of the items in paragraph 13.3, and a load test. Each line handling mechanism shall be thoroughly inspected before, during, and after the load test.

13.4.2 Methods. Tests shall be conducted using dead load (test weights) or a dynamometer. When a dynamometer is used, the line handling mechanism shall be operated until a line pull of 125 percent of rated line pull is attained or as recommended by the OEM. The line pull attained shall be recorded. Where weights are used, the actual weight shall be recorded. Test personnel shall ensure that the brakes (where practical) operate correctly to hold maximum line pull obtained. When a dynamometer is employed, the brake shall hold a line pull of not less than 85 percent of rated line pull (the higher line pull obtained by means of motor torque will drop off during application of the brake) for not less than two minutes. OEM's rated speed need not be measured. The speed of the capstan shall be observed during the test to ensure that speed will be sufficient for the mechanism's intended purpose. Accuracy of test weights and dynamometer shall be plus or minus two percent of recorded values.

Note: Extreme caution shall be exercised when using cranes in support of load testing of line handling mechanisms. The activity's engineering organization shall ensure that the rigging system will not create a hazard to personnel or equipment.

13.4.3 Certification and Tagging. Upon satisfactory completion of the condition inspection and load test, the line handling mechanism shall be certified by a designated individual at the activity. Identification, certification date, and expiration date shall be placed on a tag or card and attached to the mechanism.

13.5 Lubrication and Servicing. Line handling mechanisms shall be lubricated and serviced in accordance with the OEM's instructions, where available. Local instructions shall be developed when OEM's data are not available. Local experience and usage factors shall be considered when developing lubrication and servicing programs.

13.6 After Alterations or Repairs. An inspection and operational test or load test, as appropriate, shall be performed to verify proper operation of the affected components.

13.7 Equipment History File. A file shall be established for each equipment unit. Specifications, contracts, acceptance tests, complete description of the unit, lubrication and servicing plans; records of alterations, maintenance, and repair; and latest test and inspection records shall be filed in the equipment history file.

(INTENTIONALLY LEFT BLANK)

## SECTION 14 CRANE RIGGING GEAR AND MISCELLANEOUS EQUIPMENT

14.1 Introduction. The purpose of this section is to provide maintenance, inspection, and test requirements for rigging and miscellaneous lifting equipment not covered in sections 2 through 11, as well as to provide specific use criteria and precautions resulting from the Navy's experience with the equipment. These requirements apply to Navy owned equipment and to contractor owned equipment used with Navy owned cranes.

This section, and the applicable portions of section 10, provide the minimum requirements for developing and maintaining a crane rigging program, i.e., maintenance, inspection, and use of rigging gear; operational responsibilities and requirements; knowledge factors, etc. Knowledge factors for riggers involved in weight handling operations are provided in appendix N. This publication does not provide information on rigging principles or techniques. Such information can be found in rigging handbooks, rigging gear users association manuals, OEM publications, textbooks, consensus standards, etc. (see appendices Q and R) and shall be used to provide guidance to rigging personnel. Activities have the option to establish local rigging procedures based upon established rigging references.

14.1.1 Covered Equipment. This section applies to the following equipment used in weight handling operations: rigging gear (slings, including chain, wire rope, metal mesh, synthetic rope, synthetic webbing, and synthetic roundslings; shackles; eye bolts; swivel hoist rings; links and rings; turnbuckles; etc.); portable load indicators (dynamometers, load cells, crane scales, etc.); and portable chainfalls and hoists (except chainfalls that are designated for use at the same location on a continuing basis. These are covered in other sections.). Also covered are below the hook lifting devices as identified in ASME B30.20; container spreaders; personnel platforms; portable A-frames, portable gantries, and portable floor cranes used for general lifting; and cranes and hoists procured with, integral to, and used solely in support of larger machine systems (milling machines, press brakes, etc.). Not covered are OEM's installed integral lifting attachments.

14.2 Record Keeping. Inspections and tests required herein shall be documented for each piece of applicable equipment or gear. Computer generated files are acceptable provided they identify the individual components, dates of inspections and tests, and inspection/test results. The latest load test report and inspection report for each piece of equipment shall be retained.

14.3 Equipment Markings. Each piece of applicable equipment or gear shall be tagged, engraved, or otherwise marked in a manner that clearly identifies the rated load and an indication of re-inspection due date. The marking shall clearly identify the equipment or gear is acceptable for current use. Markings shall be such that the strength of the

component will not be affected. In general, vibra-etch methods and low stress dot faced stamps are acceptable (consult OEM as necessary for allowable types and locations of markings). For multiple part equipment that can be separated (e.g., shackles with pins), the subordinate part (the pin) shall be identified to the primary part (the bow). If space limitations do not permit legible marking, engineering guidance shall be obtained. OEM markings shall not be removed or altered unless directed by the activity engineering organization. Where rated load markings are removed during a repair process or where markings are hard to read because of wear, equipment shall be re-marked. Procurement documents for new equipment shall ensure the item is marked with the OEM's name, logo, trade mark, or other method that will make it possible to identify the OEM.

**14.4 Test and Inspection Program.** Each activity shall establish a program for applicable equipment, including initial visual inspection and load test followed by pre-use and documented periodic visual inspections (and periodic tests as noted).

Unsatisfactory equipment and gear shall be removed from service and disposed of or repaired and re-tested.

**14.4.1 Load Test.** Except as noted, each piece of applicable equipment shall be given an initial load test. A certificate of load (proof) test from the supplier of purchased equipment will satisfy this requirement, provided the proof loads used meet or exceed the loads specified in table 14-1. For equipment where the OEM does not permit testing at the percentages shown, the rated load shall be reduced such that the OEM's allowed test load will serve as the load test value.

For rigging gear, load indicating devices (dynamometers, etc.), container spreaders, and below the hook lifting devices, except magnetic devices and vacuum lifters, the load test is a one time test. (See paragraph 14.4.1.1 for container spreaders and below the hook lifting devices used in longshoring operations.) Manual and powered chain hoists, portable A-frames, portable floor cranes, portable gantries, magnetic and vacuum lifting devices, personnel platforms, and cranes and hoists integral to larger machine systems shall be load tested annually (i.e., within 12 months prior to use).

For each test, the equipment shall withstand the load test for a minimum of 10 minutes with no permanent deformation. For hoists, trolleys, and other moving machinery, lift (travel) through at least one revolution of all moving parts. Test loads shall be as shown in table 14-1 and are expressed as percentages of the rated load established by the OEM or the activity engineering organization. When testing wire rope and synthetic rope slings, ensure the slings are prevented from unlaying. (See use criteria for these slings.)

A rigging assembly made up of component parts (slings, shackles, rings, etc.) that are reserved for that particular assembly may be tested as a complete assembly. A rigging component tested as part of an assembly shall not be removed and used independently,

unless it can be proven that the component was tested at the applicable percentage shown in table 14-1. The legs of a multiple leg sling shall be tested individually. The master link of a three or four leg sling shall be tested at the test load required for each sling leg, multiplied by the number of sling legs.

Synthetic rope and webbing and wire rope used for lashing need not be individually tested provided that a sample from each spool or reel is tested and determined to have satisfactory breaking strength. Each piece used for lashing shall be marked and inspected. The markings shall identify the spool or reel from which the lashing was taken and shall indicate the basic rated load.

Where it is not practical to test locally fabricated special rigging gear (e.g., non-standard eyebolts made specifically for a particular application), the activity engineering organization shall approve the use of such gear.

TABLE 14-1  
Test Load Percentages

<u>Item</u>	<u>Minimum Test Load (Percent of Rated Load)</u>
Slings (except hand tucked wire rope slings)	150*
Hand tucked wire rope slings	125
Other Rigging Gear (Shackles, Eye bolts, Swivel Hoist Rings, Links, Rings, Turnbuckles, etc.)	150*
Container Spreaders	125
Personnel Platforms	125
Below the Hook Lifting Devices (except close proximity magnet devices)	125
Close Proximity Magnet Devices	200
Hoists and Cranes (including portable gantries and A frames)	125
Portable Load Indicating Devices	150

\* New gear used in longshoring shall be proof tested at 200 percent of the rated load. See paragraph 14.4.1.1

14.4.1.1 Test Requirements for Rigging Gear, Container Spreaders, and Below the Hook Lifting Devices Used in Longshoring Operations (Applicable to naval activities in the United States and its territories). In accordance with 29 CFR 1917.50(c), the following requirements apply to common rigging gear, container spreaders, and below the hook lifting devices used in longshoring.

For common rigging gear (i.e., slings, shackles, hooks, rings, chain, links, eyebolts, etc.) made or purchased after 21 January 1998, a certificate of proof test shall be obtained from the equipment supplier. A proof test is required for each piece of gear. Proof tests shall be at 200 percent of the rated load of the gear. OEM catalog information stating that every applicable piece has been proof tested is acceptable. Certificates shall be retained on file.

Container spreaders and below the hook lifting devices (i.e., does not include common rigging gear) with rated loads greater than 10,000 pounds shall be load tested every four years at the test load percentages noted in table 14-1. (If the equipment is idle for more than four years, perform an inspection and load test prior to use.)

14.4.2 Pre-use Inspection (Frequent Inspection). Applicable equipment shall be visually inspected by the user prior to each use to verify rated load, marking, and condition. No documentation of pre-use inspection is required.

14.4.3 Periodic Inspection. Periodic inspections for slings, chainfalls and hoists, A-frames, gantries, cranes, and below the hook lifting devices shall be conducted annually (chain slings in ship repair or longshoring use require inspection every three months per 29 CFR 1915.112 and 1917.42 (h) respectively). Portable load indicating devices shall be inspected and calibrated in accordance with the activity's calibration program and the OEM's recommendations. Other rigging hardware (eye bolts, turnbuckles, shackles, hoist rings, etc.) shall be inspected at two year intervals. Records of periodic inspections shall be kept on file.

14.5 Repairs and Alterations. Repairs and alterations to equipment shall be performed in accordance with OEM or engineering instructions. Alterations shall be approved by the activity engineering organization. Re-inspection and load test of the repaired or altered equipment shall be performed prior to returning to service. Alteration and repair documentation shall be retained for the life of the equipment.

14.6 Slings. Slings shall meet the selection, use, and maintenance criteria of ASME B30.9, with additions and changes as noted. Slings shall not be used at angles of less than 30 degrees from horizontal, unless specifically authorized by an engineering work document. Components in multiple leg sling assemblies shall be sized based on the worst case distribution of loads. For example, slings and shackles in a four leg assembly for a four-point lift shall be sized based on either pair of opposing legs carrying the entire load, unless the assembly is equipped with devices such as equalizer plates which



automatically adjust for equal distribution of the load. Chain hoists may be used for equalizing loads only if used in conjunction with load indicating devices. This requirement for load indicators does not apply to chain hoists used for leveling the load in three-point or two-point lift configurations.

---

TABLE 14-2  
Maximum Allowable Wear on Chain Sling Links

<u>Nominal Size of Link</u>	<u>Maximum Allowable Wear</u>
7/32"	0.029"
1/4"	0.034"
9/32"	0.037"
3/8"	0.052"
1/2"	0.069"
5/8"	0.084"
3/4"	0.105"
7/8"	0.116"
1"	0.137"
1 1/4"	0.171"
1 3/8"	0.188"
1 1/2"	0.239"

---

#### 14.6.1 Chain Slings and Fittings

14.6.1.1 Chain Sling Inspection Criteria. For those deficiencies identified below, each link and each attachment shall be examined individually (taking care to expose inner link surfaces). Nicks and cracks in individual links or components shall be removed by grinding. The link or component shall be measured at smallest diameter after grinding.

14.6.1.2 Chain Sling Rejection Criteria. The sling shall be removed from service if inspection reveals any of the following:

- a. Link wear, including master link and coupling links. Cross sectional link wear or reduction of size exceeding OEM requirements or the values in table 14-2 for each diameter. For sizes not shown consult the OEM.
- b. Detectable deformation.
- c. Nicks or cracks that can not be removed by grinding.

14.6.1.3 Chain Sling Use Criteria. Chain slings shall be used in accordance with OEM recommendations. Chain slings are recommended for use in abrasive and high temperature environments that may damage other slings. Chain slings shall not be used where their use increases the risk of electrical shock or electrocution, or where damage to equipment may result. If exposure to high temperatures could heat the sling above 300 degrees Fahrenheit (F), follow OEM recommendations for rated load reduction.

#### 14.6.2 Wire Rope Slings

14.6.2.1 Wire Rope Sling Inspection Criteria. Inspection shall be conducted on the entire length of each sling, including splices, end attachments, and fittings.

14.6.2.2 Wire Rope Sling Rejection Criteria. The sling shall be removed from service if inspection reveals any of the following:

- a. Severe localized abrasion or scraping.
- b. Kinked, crushed, or birdcaged sections, or any other damage resulting in distortion of the wire rope structure.
- c. Evidence of heat damage.
- d. End attachments that are cracked or deformed.
- e. End attachments that are worn to the extent that their strength is questionable.
- f. Severe corrosion of the wire rope, fittings, or attachments.
- g. Broken wires:
  - (1) Single part and strand laid wire rope slings: 10 randomly distributed broken wires in one rope lay length, or five broken wires in one strand in one lay length, or two broken wires within one lay length of the end connection.
  - (2) Braided wire rope slings less than eight parts: 20 randomly distributed broken wires in one rope lay length, or one completely broken strand.
  - (3) Braided wire rope slings eight parts or more: 40 randomly distributed broken wires in one rope lay length, or one completely broken strand.
  - (4) Cable laid wire rope slings: 20 randomly distributed broken wires in one rope lay length, or one completely broken strand.

14.6.2.3 Wire Rope Sling Use Criteria. Wire rope slings shall not be used over a pin, shackle, hook, or ring of less than the nominal diameter of the wire rope. If the body of the sling is bent around an object that is greater than 40 times the diameter of the wire rope (e.g., basket hitch), then the total capacity of the sling is equal to two times the sling's single leg lift capacity. If the body of the sling is bent around a pin, hook, or other object that is 40 times the diameter of the sling or less, the total capacity shall be reduced to reflect the efficiency percentages shown in table 14-3. No reduction is required for a pin/hook in the eye of the sling, provided the diameter is equal to or greater than the nominal diameter of the wire rope.

Where a wire rope sling is used in a choker hitch, the capacity shall be reduced to reflect the efficiency percentages shown in table 14-4. Chafing protection shall be used where necessary to protect the load and the sling from damage. Except for braided slings, wire rope slings shall not be used in single leg vertical hitches, unless a method is used to prevent unlaying of the rope. Wire rope slings shall not be used where their use increases the risk of electrical shock or electrocution, damage to equipment may result, or exposure to temperatures below -60 or above 400 degrees F. may occur. (For fiber core slings, the maximum temperature shall be 200 degrees F.)

---

TABLE 14-3  
Efficiency Factors for Various Wire Rope Slings

<u>D/d Ratio</u>	<u>Efficiency Percentage</u>
1:1	50
2:1	65
4:1	75
8:1	83
12:1	87.5
16:1	90
24:1	92.5
40:1	95
over 40:1	100

Note: Not applicable to braided multi-part slings. Contact the Wire Rope Technical Board for recommended efficiency factors for braided multi-part slings.

---

Where D/d is the ratio of the diameter of the pin, hook, or other object the wire rope is bent around, divided by the diameter of the wire rope sling. Efficiency is expressed as the percentage of the remaining capacity of each leg of the sling. For D/d ratios between the values shown, use the lower efficiency percentage.

TABLE 14-4  
Rated Loads for Wire Rope Slings in a Choker Hitch

<u>Angle of Choke in Degrees</u> (See figure 14-1)	<u>Percentage of Vertical Rated Load</u>
120-180	75
90-120	65
60-90	55
30-60	46
0-30	36

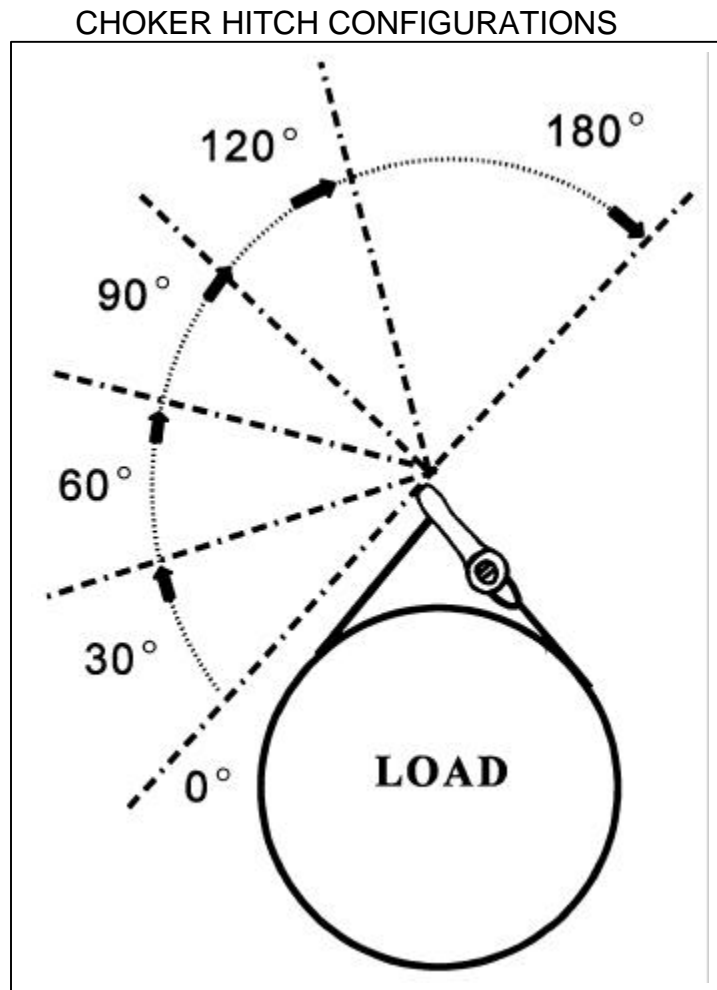


FIGURE 14-1

14.6.2.3.1 Additional Criteria for Wire Rope Endless Slings. To determine the rated load of an endless sling, use the following calculation:

$$\frac{\text{NRS} \times \text{D/d Efficiency} \times 2}{\text{DF}}$$

where: NRS is the nominal rope strength listed in Federal Spec RR-W-410.  
D/d Efficiency is taken from Table 14-3.  
DF is the design factor (5 or greater).

For non-specific applications, endless slings shall have a rated load based on a D/d ratio of 1:1 (i.e., use D/d Efficiency of 0.5). For specific applications where the rated load is based on a D/d ratio greater than 4:1, the maximum efficiency percentage shall be 0.78. For specific applications, the sling shall be marked to indicate the pin diameter (D) used to determine the rated load. The sling shall not be used over a hook, pin, or shackle that is smaller than the diameter used to determine the rated load. When using wire rope endless slings, ensure the splice is situated at least 10 rope diameters from the load bearing area.

#### 14.6.3 Metal Mesh Slings

14.6.3.1 Metal Mesh Sling Inspection Criteria. Inspection shall be conducted on the entire length of each sling, including welds, end attachments, and fittings.

14.6.3.2 Metal Mesh Sling Rejection Criteria. The sling shall be removed from service if inspection reveals any of the following:

- a. A broken weld or broken brazed joint along the sling edge.
- b. A broken wire in any part of the mesh.
- c. Reduction in wire diameter of 25 percent due to abrasion or 15 percent due to corrosion.
- d. Lack of flexibility due to distortion of the mesh.
- e. Distortion of the choker fitting such that the depth of the slot is increased by more than 10 percent.
- f. Distortion of either end fitting such that the width of the eye opening is increased by more than 10 percent.
- g. A reduction of 15 percent of the original cross sectional area of metal at any point around the hook opening of the end fitting.



h. Visible distortion of either end fitting out of its plane.

i. Any cracks in either end fitting.

14.6.3.3 Metal Mesh Sling Use Criteria. Metal mesh slings shall be used in accordance with OEM recommendations. Metal mesh slings are recommended for use in abrasive and high temperature (up to 550 degrees F) environments that may damage other flat slings, such as web slings. Metal mesh slings shall not be used where their use increases the risk of electrical shock or electrocution, or where damage to equipment may result. Elastomer coated slings shall not be used in temperatures below 0 degrees or above 200 degrees F.

14.6.4 Synthetic Slings. Where non-metallic slings are used (for ease of handling, equipment protection, non-conductivity, etc.), only slings made from synthetic materials shall be used. Natural fiber rope shall not be used for slings.

#### 14.6.4.1 Synthetic Rope Slings

14.6.4.1.1 Synthetic Rope Sling Inspection Criteria. Inspection shall be conducted on the entire length of each sling, including splices, end attachments and fittings.

14.6.4.1.2 Synthetic Rope Sling Rejection Criteria. The sling shall be removed from service if inspection by a qualified person reveals any of the following:

- a. Cuts, gouges, badly abraded spots, or other abnormal wear.
- b. Seriously worn surface fibers or yarns.
- c. Considerable filament or fiber breakage along the line where adjacent strands meet (light fuzzing is acceptable).
- d. Powder or particles of broken filaments or fibers inside the rope between the strands (twist or pry rope open for inspection).
- e. Discoloration or harshness that may indicate rotting, chemical damage, or excessive exposure to sunlight. Inspect filaments or fibers for weakness or brittleness.
- f. Kinks.
- g. Variations in the size or roundness of the strands.
- h. Melting or charring of any part of the sling.

- i. Severe pitting or corrosion, or cracked, distorted, or broken fittings.
- j. Knots in any part of the sling.
- k. Other visible damage that causes doubt as to the strength of the sling.

14.6.4.1.3 Synthetic Rope Sling Use Criteria. The minimum D/d ratio when bending the straight run of a sling over a hook, pin, or other object shall be 2:1. (Note: Rated load tables shown in ASME B30.9 for basket hitches and endless slings are based on a minimum D/d ratio of 8:1. For a D/d ratio of 4:1 use 75 percent of the values shown in the tables. For a D/d ratio of 2:1 use 65 percent of the values shown in the tables.) Where a synthetic rope sling is used in a choker hitch, the capacity shall be reduced to reflect the efficiency percentages shown in table 14-5. Chafing protection shall be used where there is a possibility of the sling being cut, crushed, or otherwise damaged by the load. Stranded synthetic rope slings shall not be used in a single part vertical hitch, unless a method is used to prevent unlaying of the rope. Slings shall not be used where there is a danger of chemical attack, overheating, or other damage. Slings shall not be exposed to temperatures exceeding 150 degrees F or OEM recommendations. (Heat or flame may be used to melt non-load-bearing ends to prevent fraying.) Slings shall not be painted. Exposure to sunlight shall be minimized. Slings shall be stored indoors. Synthetic rope slings shall not be substituted for other types of slings shown on rigging sketches without prior engineering approval.

---

TABLE 14-5  
Rated Loads for Synthetic Fiber Rope Slings in a Choker Hitch

<u>Angle of Choke in Degrees</u> (See figure 14-1)	<u>Percentage of Vertical Rated Load</u>
120-180	50
90-120	43
60-90	37
30-60	31
0-30	24

---



#### 14.6.4.2 Synthetic Webbing Slings

14.6.4.2.1 Synthetic Webbing Sling Inspection Criteria. Inspection shall be conducted on the entire length of each sling, including stitches, end attachments, and fittings.

14.6.4.2.2 Synthetic Webbing Sling Rejection Criteria. The sling shall be removed from service if inspection reveals any of the following:

- a. Acid or caustic burns.
- b. Melting or charring of any part of the sling.
- c. Holes, tears, cuts, or snags.
- d. Broken or worn stitching in load bearing splices.
- e. Excessive abrasive wear.
- f. Knots in any part of the sling.
- g. Cracked, distorted, broken, or excessively pitted or corroded fittings.
- h. Other visible damage that causes doubt as to the strength of the sling.

14.6.4.2.3 Synthetic Webbing Sling Use Criteria. Where a synthetic webbing sling is used in a choker hitch, the total capacity shall be reduced to reflect the efficiency percentages shown in table 14-6. Chafing protection shall be used where there is a possibility of the sling being cut or otherwise damaged by the load. Synthetic webbing slings shall not be used where there is a danger of chemical attack, overheating, or other damage. Slings shall not be exposed to temperatures exceeding 180 degrees F or OEM recommendations. Slings shall not be painted. Exposure to sunlight shall be minimized. Slings shall be stored indoors. Synthetic webbing slings shall not be substituted for other types of slings shown on rigging sketches without prior engineering approval.

#### 14.6.4.3 Synthetic Roundslings

14.6.4.3.1 Synthetic Roundsling Inspection Criteria. Inspection shall be conducted on the entire length of each sling, including stitches, end attachments, and fittings.

---

TABLE 14-6  
Rated Loads for Synthetic Webbing Slings and Roundslings in a Choker Hitch

<u>Angle of Choke in Degrees</u> (See figure 14-1)	<u>Percentage of Vertical Rated Load</u>
120-180	75
90-120	65
60-90	55
30-60	46
0-30	36

---

14.6.4.3.2 Synthetic Roundsling Rejection Criteria. Remove from service any synthetic roundsling with the following:

- a. Evidence of acid or caustic burns.
- b. Melting, charring, or burns on any part of the sling surface.
- c. Snags, punctures, tears, cuts, or knots that expose any part of the core yarns.
- d. Broken or worn stitches.
- e. Excessive wear, abrasion, or embedded abrasive particles.
- f. Knots, bumps, bulges, or irregularities that can be felt by massaging the sling manually along its length. (Note: A knot in the yarn where the cover is joined may be a termination made by the OEM, which is acceptable.)
- g. Broken, worn, corroded, or distorted end fittings.
- h. Any condition that would cause doubt as to the strength of the sling.

14.6.4.3.3 Synthetic Roundsling Repairs. Synthetic roundslings shall be repaired in accordance with OEM requirements. No temporary repairs are permitted.

14.6.4.3.4 Synthetic Roundsling Use Criteria. Roundslings shall conform to the following:

- a. Roundslings shall be used only in the lifting applications for which they were designed by the OEM.

b. Roundslings shall be used in strict compliance with the OEM's instructions, including using shackles recommended by the OEM for this type of sling.

c. For new roundslings, a certificate of proof test shall be retained in the history file for the life of the sling.

d. Roundslings constructed of yarns other than nylon or polyester (referred to here as "alternate yarn roundslings") shall be used only with the following additional restrictions:

(1) The certificate of proof test shall include the diameter of pin used during actual proof test.

(2) Alternate yarn roundslings shall not be used over a hook, pin, or shackle that is smaller than the diameter of the pin used during the sling proof test. The minimum size allowed for use shall be marked on the sling.

Where a synthetic roundslings is used in a choker hitch, the total capacity shall be reduced to reflect the efficiency percentages shown in table 14-6. Chafing protection shall be used where there is a possibility of the sling being cut, crushed, or otherwise damaged by the load. Slings shall not be used where there is a danger of fraying, chemical attack, overheating, or other damage. Slings shall not be exposed to temperatures exceeding OEM recommendations. Slings shall not be painted. Exposure to sunlight shall be minimized. Slings shall be stored indoors.

#### 14.7 Shackles, Links, Rings, Swivels, Eye Bolts, Turnbuckles, Hooks, and Swivel Hoist Rings

14.7.1 General Inspection. Shackles, links, rings, swivels, eye bolts, turnbuckles, hooks, and swivel hoist rings shall be inspected for proper operation and for wear and excessive corrosion (sufficient to cause an orange peel texture after cleaning). Special care shall be taken to check high wear areas of shackles, links, and rings (e.g. center of the shackle bail and pin). Inspect for such conditions as nicks cracks, gouges, or peening. Cracks shall be removed. Other conditions shall be removed or, for questionable conditions, referred to the activity engineering organization for resolution. Where the component shows evidence of burning or welding, or is visibly bent, spread, twisted, or otherwise distorted, it shall be removed from service and destroyed. Components with damaged threads shall be referred to the activity engineering organization for resolution. Except where the OEM recommendation is more restrictive, the component shall be rejected where normal wear results in a reduction of the original cross sectional dimension of any part exceeding the following:

a. Shackle bows - 10 percent of the nominal diameter shown in Federal

Specification RR-C-271. For shackle sizes not shown in Federal Specification RR-C-271, the OEM's listed nominal dimensions shall be used.

b. Shackle pins, Links, Rings, and Swivels - five percent of the nominal diameter shown in Federal Specification RR-C-271. For sizes not shown in Federal Specification RR-C-271, the OEM's listed nominal dimensions shall be used.

c. Eyebolts - five percent of the minimum eye section diameter shown in ASME B18.15.

d. Turnbuckle end fittings - five percent of the nominal diameter shown in ASTM F1145.

e. Hooks - 10 percent of the OEM's nominal dimensions.

f. Swivel Hoist Rings - five percent of the OEM's minimum dimensions.

14.7.2 Repairs. Grinding, to remove defects, shall be the only method used to repair rigging gear. Grinding shall follow the contour of the piece, blending with a maximum 1:3 taper. Dimensions after grinding shall be within the wear limits for the piece being repaired. Removal of cracks shall be verified by nondestructive test as described in appendix E paragraph 1.4.3 for crane hooks. Removal of defects as specified will not require a load test. Correction of defects by use of heat or welding is not permitted. No attempt shall be made to straighten bent or twisted rigging gear.

14.7.3 Use Criteria for Shackles, Links, and Rings. Shackles, links, and rings shall be selected for the direct tension they will see rather than the weight of the load. In some cases, the tension of one leg of a lift could exceed the weight of the load. Special care shall be used in selecting shackles to be used in multiple leg applications. Different types, grades, or brands of shackles of the same rated load may vary significantly in physical size. This could affect the total leg length and the tension seen by each leg. Round pin shackles shall not be side loaded. If side loading of screw pin or bolt type shackles is required, reduce the rated load by 50 percent or as specified by the OEM if more restrictive.

14.7.4 Shoulder Eye Bolt Use Criteria. Shoulder eye bolts, either shoulder nut (through type) or machinery bolt type, shall be used in accordance with the OEM's recommendations, except as noted. Machinery bolt type eyebolts shall be installed with the shoulder flush with the mounting surface. Nut type eyebolts may be used with the shoulder not flush to the mounting surface if approved by the activity engineering organization. When installed with the shoulder flush to the face of the mounting surface, shoulder eyebolts may be used for loading at angles (in the plane of the eye) from the axis of the bolt shank. One or more spacers (of approximately the same outer diameter as the shoulder) may be used under the face of the shoulder to allow for rotational

alignment. The total thickness of spacers shall not exceed one thread pitch. The rated load of the eyebolt shall be reduced in accordance with table 14-7. Pulls at angles out of the plane of the eye are not permitted. Nut type eyebolts shall not be installed where plate thickness will not allow full nut contact with at least one external thread exposed. Nuts shall be of sufficient thickness to provide not less than one full thread diameter of thread engagement. If screwed into a base material of questionable grade or strength, the thread engagement shall be as recommended by the OEM or the activity engineering organization.

**14.7.5 Non-shouldered Eye Bolt Use Criteria.** Non-shouldered eye bolts (sometimes referred to as plain pattern or regular nut eye bolts) shall be used in accordance with OEM recommendations. Pulls at angles greater than five degrees in the plane of the eye are not permitted. Pulls at any angle out of the plane of the eye are not permitted. Nut type eye bolts shall not be installed where plate thickness will not allow full nut contact with at least one external thread exposed. Nuts shall be of sufficient thickness to provide not less than one full thread diameter of thread engagement. If screwed into a base material of questionable grade or strength, the thread engagement shall be as recommended by the OEM or the activity engineering organization.

---

TABLE 14-7  
Eye Bolt Loading for Shoulder Eye Bolts

<u>Direction of loading</u> (in the plane of the eye)	<u>Maximum Allowable</u> <u>Percentage of Rated Load</u>
Along the axis of the shank	100
15 degrees	65
30 degrees	35
45 degrees	25
60 degrees	20
90 degrees (As permitted by OEM)	15

Note: For intermediate angles, use the lower percentage shown.

---

**14.7.6 Turnbuckle Use Criteria.** Turnbuckles shall be used in straight (in line) pulls only. Jam nuts, where supplied with the turnbuckle, shall be tightened in accordance with OEM instructions. Where the danger of rotation exists, the turnbuckle shall be secured by safety wire or other suitable means in addition to jam nuts if used.

14.7.7 Hook Use Criteria. Hooks shall be loaded only in the bowl of the hook. Where slings are supported in a hook, the included angle of the slings shall not exceed 90 degrees. Hooks shall not be loaded at the point or tip. No side loading of hooks is permitted.

14.7.8 Swivel Hoist Ring Use Criteria. Swivel hoist rings may be used at any angle up to 90 degrees with no reduction in rated load when used in accordance with OEM recommendations. They shall be used in threaded holes where they can be installed with the shoulder flush to the face of the mounting surface. Threaded holes in the piece lifted shall be of sufficient length to allow full thread contact. Where retaining nuts are approved for use, use only those nuts specified by the OEM. Where a nut is used, the nut shall have full thread engagement. It is critical that the OEM recommended installation torque be applied to the attaching bolt. If screwed into a base material of questionable grade or strength, the installation torque and rated load shall be reduced as recommended by OEM or the activity engineering organization.

#### 14.8 Tackle Blocks

14.8.1 Inspection and Rejection Criteria for Tackle Blocks. Tackle blocks shall be removed from service if inspection of the blocks and rigging attachments reveals any of the following:

- a. Distortion.
- b. Cracks in housing or sheaves.
- c. Damaged sheaves.
- d. Binding or abnormal sheave play.
- e. Any damage that may causes doubt as to the strength of the unit.

14.8.2 Use Criteria for Tackle Blocks. When tackle blocks are used in combination so as to provide mechanical advantage (e.g., block and tackle) the assembly shall be fully engineered and tested as an assembly. Tackle blocks shall be selected for the direct tension they will see rather than the weight of the load. In most cases, the combined tension imposed on a tackle block will exceed the weight of the load. Care shall be used in selecting tackle blocks to ensure that the sheaves are rated for the size of wire rope being used. When calculating total line pull, consider the friction imposed by the bushings or bearings used in the tackle block. If the type of bushing or bearing is unknown, 10 percent shall be added to the calculated line pull for each sheave in the tackle block to account for friction. Attachment points for tackle blocks shall be approved by the activity engineering organization. Tackle blocks shall be used only in compliance with OEM recommendations.

14.9 Below the Hook Lifting Devices. Below the hook lifting devices and container spreaders shall be operated, maintained, and inspected in accordance with ASME B30.20 and OEM recommendations.

14.10 Chainfalls, Portable Hoists, Lever Operated Hoists, Portable Floor Cranes, Portable A-frames, Portable Gantries, and Cranes Integral to Larger Machine Systems. Chainfalls and portable hoists shall be operated, maintained, and inspected in accordance with ASME B30.16 and OEM recommendations. Lever operated hoists shall be operated, maintained, and inspected in accordance with ASME B30.21 and OEM recommendations. Other equipment shall be operated, maintained, and inspected in accordance with applicable ASME B30 criteria and/or OEM recommendations.

14.11 Portable Load Indicating Devices (Dynamometers, Load Cells, Crane Scales, etc.). The design factor for load indicating devices with steel load bearing members shall be 5:1. The design factor for load indicating devices with aluminum load bearing members shall be 7:1. Some devices have less than these design factors. Such devices shall only be used in the range that ensures the proper design factor. These devices shall be marked or tagged to indicate the reduced maximum rated load.

14.12 Lashing. Lashing is defined as wire rope, synthetic rope, synthetic webbing, or other approved material (without permanent end fittings) that is used for wrapping and securing around an object to provide a point or points from which to lift the object. Activities shall develop written procedures for the use of lashing when lifting with cranes. As a minimum, the procedures shall include the following:

- a. A crane hook shall not be attached directly to the lashing material. A shackle, ring, etc., (and standard sling if necessary) shall be used for attachment to a crane.
- b. Lashing shall be inspected after each use and damaged portions removed prior to reuse.
- c. Lashing shall be attached tightly enough to prevent the object to be lifted from slipping out, and shall be installed so as not to damage or crush the object (i.e., the object to be lifted shall be structurally sound enough to support its own weight when lifted by the lashing).
- d. The use criteria and inspection/rejection criteria addressed above for slings shall apply to lashing.
- e. The lashing configuration shall be such that at least two parts of lashing support the load.
- f. The lashing shall be marked with its rated load.





g. A square knot (with the ends tightly seized) may be used for wire rope lashing 1/2 inch and smaller. For wire rope greater than 1/2 inch, knots are not permitted. Wire rope clips shall be used to secure the ends. Properly tied standard knots or hitches (square knots backed up with half hitches, bowlines, clove hitches, etc.) may be used to secure synthetic rope and webbing lashing. When knots are used, the rated load of lashing shall be reduced by 50 percent. When wire rope clips are used, the rated load shall be reduced by 20 percent. (Reduction factors for knots and wire rope clips are not cumulative with D/d ratio reduction factors. Use the greater reduction factor.)

h. The additional force due to lift angles in the lashing configuration shall be taken into consideration to ensure the rated load (or reduced rated load) of the lashing is not exceeded.

(INTENTIONALLY LEFT BLANK)

## APPENDIX A - GLOSSARY

ACCIDENT. See section 12.

A-FRAME. On cranes equipped with booms, the structural portion exclusive of the boom above the rotate platform. On derricks, the stationary portion of the structural framing above the foundation or sills.

A-FRAME BLOCK. The lower block of luffing tackle usually integral with the apex of the A-frame. The term luffing block is preferred.

ALTERATION. See section 1.

AUTOMATIC MECHANICAL LOAD-LOWERING BRAKE. See "MECHANICAL LOAD BRAKE."

AUXILIARY HOIST. A separate hoist system of lighter load capacity and usually of higher speed than the main hoist.

BALLAST. A weight (usually fixed) added to the non-rotating portion of a crane or derrick to provide the required stability of the crane or derrick as a whole.

BEAM. Maximum width of a vessel hull.

BITT. Double post fitting to which mooring lines from vessels are attached.

BOGIE. A short end truck attached to the end of one girder. This type of end truck is used when more than four wheels are required on a crane due to the design of the runway.

BOLSTER. The load-bearing crossbeam connecting, equalizing, and aligning a pair of parallel trucks on a two-rail track.

BOOM. In crane and derrick usage, an inclined spar, strut, or other long member supporting the hoisting tackle.

BOOM HINGE. The combination of the immediate parts of the rotate structure, boom, and (as most frequently used) the pin about which the boom turns when luffed.

BRAKE. A device used for retarding or stopping motion by friction or power means.

BRIDGE. The main structural and mechanical portion of an overhead traveling crane spanning from one runway rail to the other, consisting of the girders supporting the trolley, the end trucks, the travel drive mechanism, and related parts.

BROOMING. The straightening of the wires at the end of a wire rope in preparation for pouring zinc in a splattered socket.

BULL GEAR AND PINION. The large gear (usually attached to the non-rotating part of a crane) and the mating pinion (usually attached to the rotating superstructure) by which the superstructure is caused to rotate.

BULL WHEEL. A relatively large wheel attached to the base of mast and boom of a derrick with a rim shaped to accommodate two cables. By pulling on the cable, the boom is rotated by the bull wheel.

BUMPER. A device fastened to a traveling crane to cushion the impact of striking another crane or a runway stop.

CAB. The compartment containing the controls for cranes or derricks and a seat and shelter for the operator.

CAGE. A partially open circular ring that retains, spaces, and aligns the balls or rollers of an anti-friction bearing, or the rollers or wheels of a live roller path.

CAPACITY. The maximum rated load that a crane is designed to handle. Designated limit of operating characteristics based on specific conditions.

CAPSTAN. A stationary vertical shaft/drum for winding rope or chain for hoisting or hauling purposes.

CENTER STEADIMENT. A pair of male and female castings or weldments, one connected to the fixed portion and the other to the revolving superstructure of a crane, for the purpose of maintaining the position of the center of rotation of the superstructure and of spider and cage of the roller path when used. When a center steadiment is used, the kingpin threads through it.

CHAFING BLOCK. Wood or brass wear plate used to prevent excessive wear or damage to cable.

CIVIL ENGINEERING SUPPORT EQUIPMENT (CESE). The term Civil Engineering Support Equipment is a procurement budget term referring to equipment for which NAVFACENGCOM has the responsibility for determining requirements, procuring, and assigning. The equipment includes automotive vehicles, construction, railway, fire fighting and mobile weight handling equipment. Portal, gantry, jib, floating, derrick, and other facility cranes nominally fixed are not classified as CESE.

CLEARANCE. The minimum distance from any part of the crane to the point of nearest obstruction.

CLEAT. A mooring fitting having two horizontal arms to which mooring lines are secured.

COLLECTORS. Contacting devices for collecting current from the runway or bridge conductors. On rotating cranes, a ring and brush assembly that provides a means for conducting electrical power between a stationary and a rotating member or component.

CONDUCTOR. A metal bar, shape, or wire used to conduct electric current.

CONSTRUCTION EQUIPMENT. The term "construction equipment" means all mechanical equipment used in the construction, alteration, or repair of buildings, bridges, roads, or other kinds of real property. It includes pile drivers, power shovels and cranes with special attachments, road rollers, tractors, scrapers, plows, street sweepers, sprinkle carts, portable boilers, pumps, and air compressors. It also includes such stationary machines and mechanical apparatus as rock crushing plants, concrete batching and mixing plants, and similar equipment used exclusively in the construction and maintenance of public works. When used as a general term, "construction equipment" includes mobile weight handling equipment.

CONTACTOR. A device, operated other than by hand, for repeatedly establishing and interrupting an electric power circuit.

CONTROLLER. A device or group of devices that serves to govern, in some predetermined manner, the power delivered to the motor to which it is connected.

CONTROL PANEL. An assembly of electrical components that governs the flow of power to or from a motor in response to signals from master switch, push button station, or remote control.

COUNTERWEIGHT. Weight, usually attached to the rotating part of a crane, to provide stability to the rotating superstructure.

CRANE BASE. The portion of the supporting structure immediately below the rotating portion of a crane. On land cranes, it is a portion of the portal, underbody, carrier, or car body. On floating cranes, it is that portion of the framing extending down to the deck of the pontoon.

CRANE JIB. A boom or arm supporting a trolley or fall block, fitted to swing in sockets attached to a wall or column. The arm is generally fixed in a vertical direction but free to rotate horizontally.

CRANE SAFETY ADVISORY. A directive issued by the Navy Crane Center identifying a deficient condition and corrective actions associated with weight handling or rigging equipment, or weight handling operations.

CREEP SPEED. A very slow, constant, continuous, fixed rate of motion of the hoist, trolley, or bridge. Usually established at 1 to 10 percent of the normal full load speed.

CUSHIONED START. An electrical or mechanical method for reducing the rate of acceleration of travel motion.

DEAD END. The fixed end of a rope or cable on a crane, derrick, or hoist.

DEAD LOADS. The loads on a structure that remain in a fixed position relative to the structure. On a crane such loads include the girders, footwalk, cross shaft, drive units, panels, etc.

DIAPHRAGM. A plate or partition between opposite parts of a member, serving a definitive purpose in the structural design of the member.

DRAFT. Depth of vessel hull below the water line.

DRIFT. Motion after the power is cut off. Also means the change of hook radius due to load.

DRIFT POINT. An operating position of a motor control circuit in which all power is cut off from the motor but the electric brake remains energized allowing the driven load to "drift" or "coast."

DRIVE. The assembly of the motor and gear unit used to propel the bridge or trolley.

DRUM. The cylindrical member around which the hoisting ropes are wound for lifting or lowering the load.

DUMMY CAB. An operator's compartment or platform on a pendant or radio controlled crane, having no permanently mounted electrical controls, in which an operator may ride while controlling the crane.

DUTY. A requirement of service that defines the degree of regularity of the load. It is determined by the kind of loads to be handled and the facility to be served.

DUTY CYCLE. A complete operation from preparation for lifting a load to its final deposition, or a series of such movements, the kind, amount, sequence, frequency, duration, and period of work performed. A factor in determining mechanical, control,

and electrical duty classification and the design ratings of engines, generators, motors, gearing, clutches, brakes, bearings, and other parts.

DYNAMIC BRAKING. Braking a driven load by connecting an electrical control and motor circuit so that the motor becomes a generator under an overhauling load, absorbing energy from the load and returning it to the power input line, or wasting it as heat in special resistance, or both.

DYNAMIC LOWERING. A method of control by which the hoist motor is so connected in the lowering direction, that when it is over-hauled by the load, it acts as a generator and forces current either through the resistors or back into the line.

EDDY CURRENT BRAKE. A brake consisting of a stationary magnetic field, usually variable, and a metallic rotor through which braking forces are exerted electromagnetically by the induced eddy currents in the rotor, the rotor absorbing the energy of motion, and dissipating it as heat. An eddy current brake can slow down but cannot stop a moving load.

ELECTRIC CONTROL OR CONTROLLER. A device or group of devices that serve to govern, in a predetermined manner, the electric power delivered to the apparatus to which it is connected. Some of the basic functions are the control of acceleration, retardation, line closing, and reversing.

ELECTRICAL BRAKING SYSTEM. A method of controlling crane motor speed when in an overhauling condition, without the use of friction braking.

ENCLOSED CONDUCTOR(S). A conductor or group of conductors substantially enclosed to prevent accidental contact.

ENCLOSURE. A housing to contain electrical components, usually specified by a NEMA classification number.

END APPROACH. The minimum horizontal distance, parallel to the runway, between the outermost extremities of the crane and the centerline of the hook.

END TIE. A structural member other than the end truck that connects the ends of the girders to maintain the squareness of the bridge.

END TRUCK. The unit consisting of truck frame, wheels, bearings, axles, etc., that supports the bridge girders.

EQUALIZER. A pivoted bar or frame upon which two loads may be maintained in constant relationship (most often equal) regardless of differences in elevation or

horizontal attachment of the loads; usually used between two parts of line. For example, a single sheave serves as an equalizer between two parts of line.

EQUALIZER BEAM. Most frequently applies to a beam with a hook near its center and arranged to be hoisted at the ends by two cranes, thereby simplifying the hoisting of a single load by two cranes.

FAIL-SAFE. A provision designed to automatically stop or safely control any motion in which a malfunction occurs.

FAIRLEAD. A group of pulleys or rollers used in connection with a winch or similar apparatus to permit the cable to be reeled from any direction.

FENDER. A protective system installed around the hull of a floating vessel.

FIXED AXLE. An axle that is fixed in the truck and on which the wheel revolves.

FLEET ANGLE. The angle formed by the lead of a rope at the extreme end of a drum with a line drawn perpendicular to the axis of the drum through the center of the nearest fixed sheave (expressed in degrees).

FLEETING SHEAVE. A sheave that moves along its supporting shaft or pin.

FLOAT. In connection with portal crane trucks, float is the total amount of lateral movement of the pairs of trucks on both sides of a crane that is permitted by their construction.

FLOOR-OPERATED CRANE. A crane that is pendant or radio controlled by an operator on the floor or an independent platform.

FOOTWALK. The walkway with handrail and toe boards attached to the bridge or trolley for access purposes.

FREEBOARD. The distance from the main or weather deck on a floating vessel to the water line.

FULL MAGNETIC CONTROL OR CONTROLLER. An electric control having all of its basic functions performed by electromagnets.

GAGE. For portal and gantry crane track, the center to center distance between rails. For railroad track, the clear distance between rail heads.

GANTRY. A framework supported at each end so that it spans a distance, used for carrying a traveling crane.



GANTRY CRANE. A crane whose bridge is rigidly supported on two or more legs running on fixed rails or other runway.

GIRDERS. The principal horizontal beams of the crane bridge that support the trolley and are supported by the end trucks.

GROUND FAULT. An accidental conducting connection between the electrical circuit or equipment and the earth or some conducting body that serves in place of the earth.

GUDGEON. In crane usage, a vertical pin about which a travel truck (or its associated equalizers or bolsters) pivots in a horizontal plane and on which the weight of the truck usually bears.

GUDGEON PIN. In crane usage, a horizontal pin connected to a gudgeon that carries the weight of a crane to the trucks or equalizers, and on which the latter pivot in a vertical plane and frequently float.

GYPSY HEAD. A small, auxiliary revolving drum at the side or top of a winch.

HEADACHE BALL. A heavy weight attached above the hook on a single line or whip hoist to provide sufficient weight to lower the hook when unloaded.

HEALTH CARE PROFESSIONAL. Health care professional means a person who is licensed, certified, and/or registered, in accordance with applicable State laws and regulations, to perform physical examinations. The term includes, but is not limited to, doctors of medicine, doctors of osteopathy, physician's assistants, advanced practice nurses, and doctors of chiropractic.

HEEL. The transverse inclination of a vessel due to the action of the waves, wind, unsymmetrical weight distribution or other temporary force.

HOGLINE. Boom stay cable attached to the equalizer bar.

HOIST. A machinery unit that is used for lifting and lowering a load.

HOIST ROLL BACK. An inherent condition, due to insufficient motor torque, that allows a hoisted hook load to lower:

- a. When the hoist controller is moved initially into the hoisting position, or
- b. As the controller is returned to neutral.

HOIST ROLL UP. On solid state controlled hoists, the distance a hoisting drive block rises when the controller is placed in the lowering direction. This roll up is due to torque proving circuits in the hoist direction that ensure the drive is capable of restraining a load before releasing the holding brakes.

HOLDING BRAKE. A brake that automatically prevents motion when power is off.

HOOK APPROACH. The minimum horizontal distance between the center of the runway rail and the hook.

HOOK, DOUBLE-BARBED. A hook with two symmetrical barbs from a common shank.

HOOK LATCH. A device used to bridge the throat opening of a hook.

HOOK ROLLER. A roller attached to the underside of the rotate platform, rolling under a projecting flange (usually attached to the lower roller path) to prevent the rotate platform from overturning.

HYDRAULIC BRAKE. A brake that provides retarding or stopping motion by hydraulic means.

IDLER SHEAVE. A sheave used to equalize tension in opposite parts of a rope. Because of its slight movement, it is not termed a running sheave.

IMPACT ALLOWANCE. Additional hook load assumed to result from the dynamic effect of the live load.

INSULATED LINK. A component normally installed between the hook and the lifting wire rope or lower load block to prevent the flow of electrical energy. Insulated links are primarily used when there is the possibility of contact between weight handling equipment and electrified power lines or when radio frequency energy may collect on the weight handling equipment structure. Insulated links are used extensively in the handling of ordnance.

JOGGING (NOTCHING, INCHING). The rapidly repeated closure of a circuit to start a motor from rest for the purpose of accomplishing small movements of the driven machine.

KINGPIN (CENTERPIN). A vertical steel pin or hollow tube located at the center of rotation of a crane for the purpose of aiding in preventing overturning of the superstructure and also for maintaining the center of rotation in position. (See "Center Steadiment.")

LIFT. Maximum safe vertical distance through which the hook, magnet, or bucket can move.

LIFT CYCLE. Single lifting and lowering motion (with or without load).

LIFTING DEVICES. Buckets, magnets, grabs and other supplemental devices, the weight of which is to be considered part of the rated load, used for ease in handling certain types of loads.

LIMIT SWITCH. A device designed to cut off power automatically at or near the limit of travel for the crane motion.

LIST. The angle between the horizontal plane and roller path plane measured athwartships for floating cranes.

LIVE BOOM. A boom that is lowered by gravity solely under the control of the boom hoist drum brake.

LIVE LOAD. A load that moves relative to the structure under consideration.

LOAD BEARING PARTS. See section 1.

LOAD BRAKE. A brake that provides retarding force without external control.

LOAD CONTROLLING PARTS. See section 1.

LOAD CYCLE. One lift cycle with load plus one lift cycle without load.

LUFFING. A radial in and out movement of the load by the raising or lowering of a crane or derrick boom.

MAGNETIC CONTROL. A means of controlling direction and speed by using magnetic contactors and relays.

MAIN HOIST. Hoist system used for raising and lowering loads up to maximum rated capacity of the crane.

MAJOR DEFICIENCY. See section 1.

MANUAL CONTROL OR CONTROLLER. An electric control having all of its basic functions performed by hand.

MASTER SWITCH. A switch, usually in low current and low voltage circuits and operated by a crane or hoist operator, that dominates the operation of other control

devices most often of greater current and voltage, such as contactors, relays, and other magnetically operated devices.

MATERIALS HANDLING EQUIPMENT. This term includes all self-propelled and conveyor equipment normally used in storage and materials handling operations in and around warehouses, shipyards, industrial plants, airfields, magazines, depots, docks, terminals and on board ships. Included are warehouse tractors, forklift trucks, rough terrain forklift trucks, platform trucks, straddle carrying trucks, industrial cranes and automated material handling systems. Also included are driverless tractor systems, stock selector systems, storage retriever systems, stacker crane systems, pallet movement systems, and intra-depot transporter systems for warehouse applications. Excluded are construction and gantry/portal cranes, overhead electric traveling cranes, and non-portal shipboard conveyor systems. See SECNAVINST 4440.31.

MECHANICAL LOAD BRAKE. An automatic type of friction brake used for controlling loads in the lowering direction. This unidirectional device requires torque from the motor to lower a load but does not impose additional load on the motor when lifting a load.

MESSENGER TRACK. A horizontal member, mounted along a handrail or girder, supporting movable carriers from which festooned wires are hung.

MODIFICATION. See alteration.

NOTCH. Movement across or to mechanical notches that indicates by feel of the master switch handle the various speed points and that automatically centers the handle at the contact points.

OEM. The original equipment manufacturer or a company that has obtained the rights to the equipment design or manufacture.

OPERATOR'S CAB. The operator's compartment from which movements of the crane are controlled. May be specified as open, having only sides or a railing around the operator, or enclosed, complete with roof, windows, etc.

OUTRIGGERS. Extendable or fixed members attached to the mounting base, that rest on supports at the outer ends used to support the crane. Outriggers are capable of supporting the entire weight of the crane and load.

OVERHEAD ELECTRIC TRAVELING CRANE. An electrically operated machine for lifting, lowering and transporting loads, consisting of a movable bridge carrying a fixed or movable hoisting mechanism and traveling on an overhead runway structure.

OVERLOAD. Any load greater than the rated load.

OVERLOAD PROTECTION (OVERCURRENT). A device operative on excessive current to cause and maintain the interruption or reduction of current flow to the equipment governed.

PAWL. A gear locking device.

PARKING BRAKE. A friction brake for a bridge or trolley, automatically applied when power to the crane is interrupted.

PENDANT PUSH BUTTON STATION. A device suspended from the crane permitting operation of the crane from the floor or other remote location.

PERFORMANCE. The effective operation of any device. The manner or behavior of equipment in operation.

PITCH DIAMETER. Distance through the center of a drum or sheave from center to center of a rope passed about the periphery.

PLUGGING. Creating a braking motion with an electric or hydraulic motor by applying energy to reverse the motor.

PROTECTIVE PANEL. An assembly containing overload and undervoltage protection for all crane motions.

RACK. A bar, straight or curved, with teeth or one face for gearing to a pinion, worm, or other mechanism.

RADIUS. The horizontal distance from a projection of the axis of rotation to the ground or water line, before loading, to the center of the hoist line(s) with load applied ("radius" and "reach" as used for cranes are synonymous).

RATING. Designated limit of operating characteristics based on specific conditions.

REACTOR. A device that introduces reactance into an AC circuit for such purposes as motor starting, paralleling transformers, and control of current.

REEVING ARRANGEMENT. A plan showing the path that a rope takes in adapting itself to all sheaves and drums of a piece of equipment.

REMOTE OPERATED CRANE. A crane controlled by an operator not in a pulpit or in the cab attached to the crane, by any method other than pendant or rope control.

REGENERATIVE BRAKING. In crane and hoist usage, braking a driven load that becomes overhauling by virtue of overspeed beyond the synchronous speed of an AC

motor, the motor then becoming a generator that absorbs energy from the overspeeding load and returns it to the power input line.

RELAY. A device that is operative by a variation in the conditions of one electric circuit to effect the operation of other devices in the same or another electric circuit.

ROLLBACK. See "HOIST ROLL BACK."

ROLLER CLEARANCE. Distance between rollers and roller path on portal and floating cranes that have a balance deck platform design. Roller clearance is not necessarily indicative of crane instability, but can be the result of normal dynamic undulation of the roller path or the roller path supporting members, undersized rollers, mis-aligned roller axles, roller race connectors, rail splices, etc.

ROLLER LIFT-OFF. Roller clearance comprising approximately 60 percent or more rollers in the roller path quadrant under the counter weight with the boom at maximum radius and maximum load or the quadrant under the boom heel pin with the boom at minimum radius and no load.

ROLLER PATH. The circular rails or flat tracks or conical surface tracks on which rollers or wheels travel.

ROTATE BEARING. A large, precision machined ring bearing connecting the stationary and rotating portions of portal, floating, and mobile cranes.

ROTATE PLATFORM (TURNABLE). That part of a rotating crane immediately above the roller path supporting the machinery, the machinery house, and cab.

RUNNING SHEAVE. A sheave that rotates as the hook is raised or lowered.

SAFETY DEVICE. See section 1.

SEMI-MAGNETIC CONTROL OR CONTROLLER. An electric control having only a part of its basic functions performed by electromagnets.

SERVICE BRAKE. A friction brake for bridge or trolley, automatically or manually applied, used during normal operation to apply a retarding force.

SERVICE CLASSIFICATIONS FOR OVERHEAD TRAVELING CRANES. For procurement purposes, the Crane Manufacturers Association of America has established the following classifications:

Class A - Standby Service  
Class B - Light Service

Class C - Moderate Service  
Class D - Heavy Duty Service  
Class E - Severe Service  
Class F - Continuous Severe Service

SERVICE FACTORS. Multipliers applied to ratings to adapt them to conditions of service other than those for which the ratings were established.

SHACKLE. A U-shaped fitting with a pin across the throat used as connection between lengths of a chain or to attach other fittings.

SHALL. As used in this publication, means the requirement is mandatory.

SHOULD. As used in this publication, means recommended guidance.

SHUNT. A conductor of one of many forms joining two points in a circuit to form a parallel or bypass circuit through which a portion of the current may pass for the purpose of regulating the relative electrical characteristics of various portions of the circuit.

SKYLIGHT. A built-up frame having glass fitted in the top and installed over a deck opening for the purpose of admitting light and air to compartment below.

SLOW SPEED MICRODRIVE. Normally an alteration to main hoist of portal cranes. Used in specialized applications where very slow speeds and high degree of control are required.

SMOOTH. Motion without any hesitation, abnormal vibration, binding, gross shimmy, or irregularity.

SPEED POINT. One of a series of circuits and associated electrical control devices that control the various speeds and directions of a motor.

SPELTERED SOCKET. A type of connection for rope in which molten zinc is used.

SPIDER. The radial member connecting the roller cage with the center steadiment to maintain the true circular path of the rollers and to resist the outward thrust of the rollers.

SPUD LOCK. A device consisting of a spud and socket used for the purpose of preventing motion of the rotating structure of a crane while idle.

STABILIZERS. Extendable or fixed members attached to the mounting base to increase the stability of a crane, but that may not have the capability of relieving all of the weight from wheels or tracks.

STOP. A fixed obstruction designed to contact the bumper of a traveling crane or trolley.

TEST LOAD. Any load or force used for testing, the magnitude of which is known within acceptable tolerances and is so certified by the facility test director. Test loads shall be expressed in pounds.

TOPPING BLOCK. The upper block of luffing tackle. The term upper luffing block is preferred.

TRAVEL. The horizontal, usually straight-line motion, of a crane or its parts (such as a trolley).

TRIM. Angle between the horizontal plane and roller path plane measured fore and aft.

TROLLEY. A wheeled carriage designed to support and transport a suspended load. The term includes all integral associated equipment for hoisting, and propelling the load.

TRUCK. The complete unit of frame, wheels, integral driving, and associated equipment that supports a traveling crane or traveling portion of a crane, such as a trolley.

TWO-BLOCK. Over-hoisting by direct hoisting or indirectly by lowering the boom so that the hook block and the upper block come in contact resulting in possible damage to the structure, parting of the hoist line, and dropping of the load.

VALIDATION. Second level approval of the activity certification of cranes used in special purpose service by the Navy Crane Center, normally consisting of complete record review, independent condition inspection, and verification of the proper conduct of the crane condition inspection and load test performed by the activity.

VANGS (VANG LINES). Lines attached to each side of a derrick boom near the outer end and to tackle on the base, ground, or pontoon by means of which the boom is rotated from one side to the other.

WEATHERPROOF. Tightness such that exposure to the weather will not interfere with its successful operation.



WEIGHT HANDLING EQUIPMENT. This term includes mobile or transportable truck, crawler and railway mounted locomotive cranes normally used for lifting, moving, and placing heavy material or equipment. This term also includes captive cranes of the gantry, portal, hammerhead, derrick, overhead electric, jib, wall, pillar, and monorail type as well as floating cranes.

WHEELBASE. The distance between the centers of the most forward and most aft wheels on a traveling crane. On overhead traveling cranes with more than a total of four bridge wheels, the distance between the centers of the forward group of wheels and the aft group of wheels.

WHIP HOIST. A hoist using a single line to the hook without intervening tackle. Used for light loads and fast speeds.

WILDCAT. A pocketed and slotted wheel on a winch over which the chain passes.

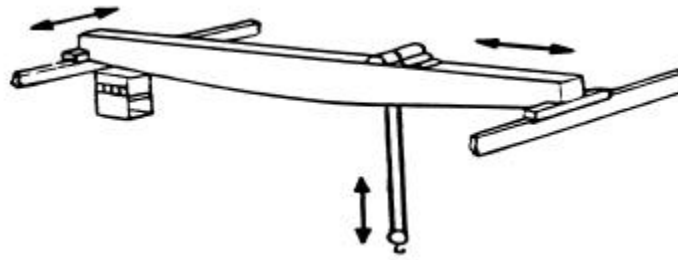
WINCH. A stationary drum for winding rope or chain for hoisting or hauling purposes.

WINDLASS. A stationary vertical winch that consists of a chain grabbing wildcat to wind chain for hoisting or hauling purposes.


WIND LOCK. A means, usually a spud lock, for preventing the motion of a crane that might be caused by the action of the wind.

(INTENTIONALLY LEFT BLANK)


APPENDIX B - TYPES OF WEIGHT HANDLING EQUIPMENT  
AND LINE HANDLING MECHANISMS



TOP RUNNING BRIDGE/TOP RUNNING TROLLEY

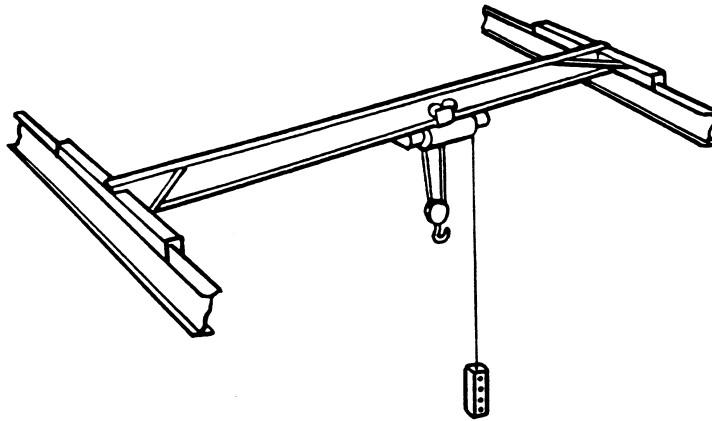


TOP RUNNING BRIDGE/UNDERHUNG TROLLEY

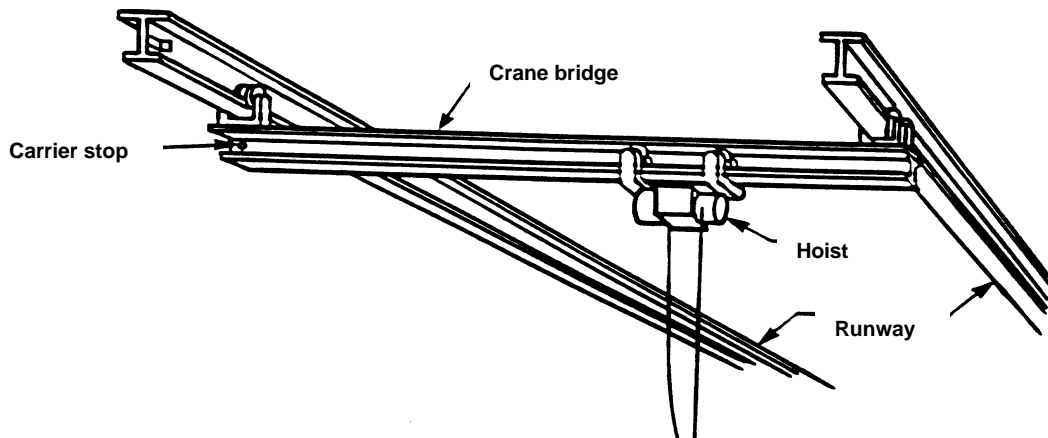


UNDERHUNG BRIDGE/UNDERHUNG TROLLEY

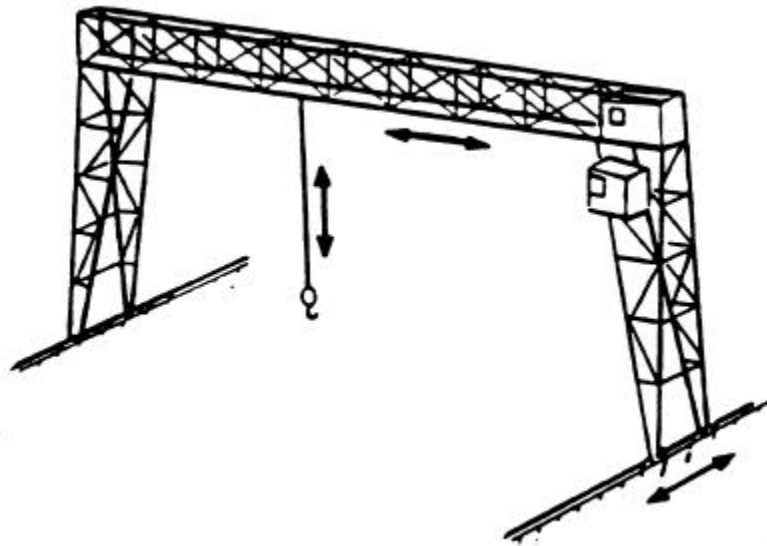Overhead Traveling. A crane with a single or multiple girder traveling movable bridge carrying a movable or fixed hoisting mechanism and traveling on an overhead fixed runway structure. Operation is limited to the area between the runways. May be top running or underhung.




GANTRY CRANE

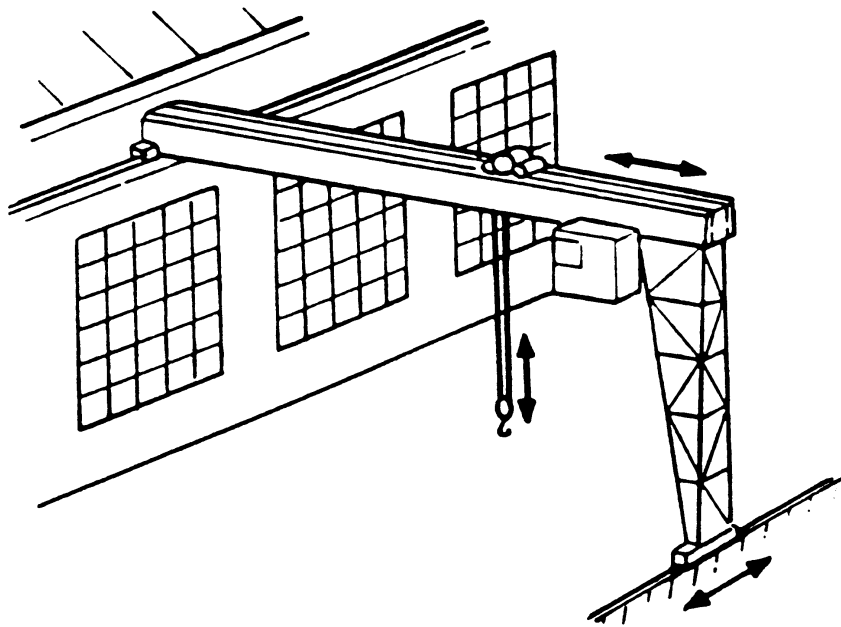Gantry. A crane similar to an overhead traveling crane, except that the bridge for carrying the trolley or trolleys is rigidly supported on two or more legs, traveling on elevated or ground level rail systems.




SEMIGANTRY CRANE

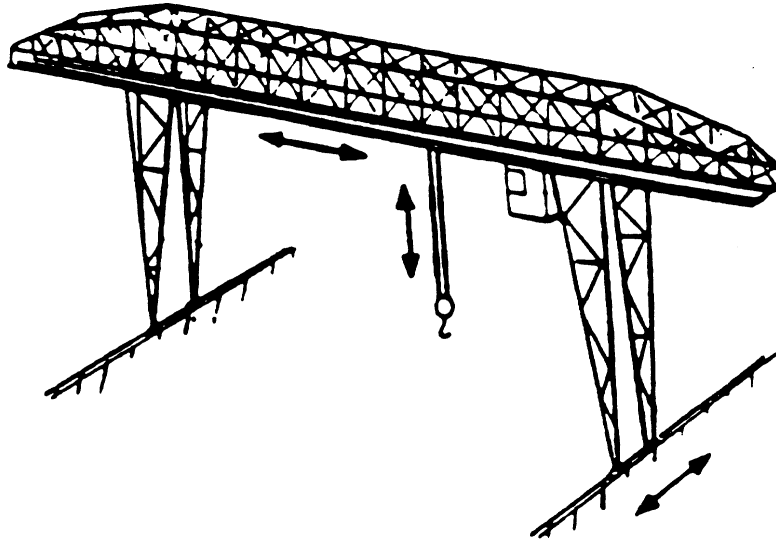Semigantry. A crane with one end of the bridge rigidly supported on one or more legs and the other end supported by a truck running on an elevated rail or runway.




CANTILEVER GANTRY CRANE

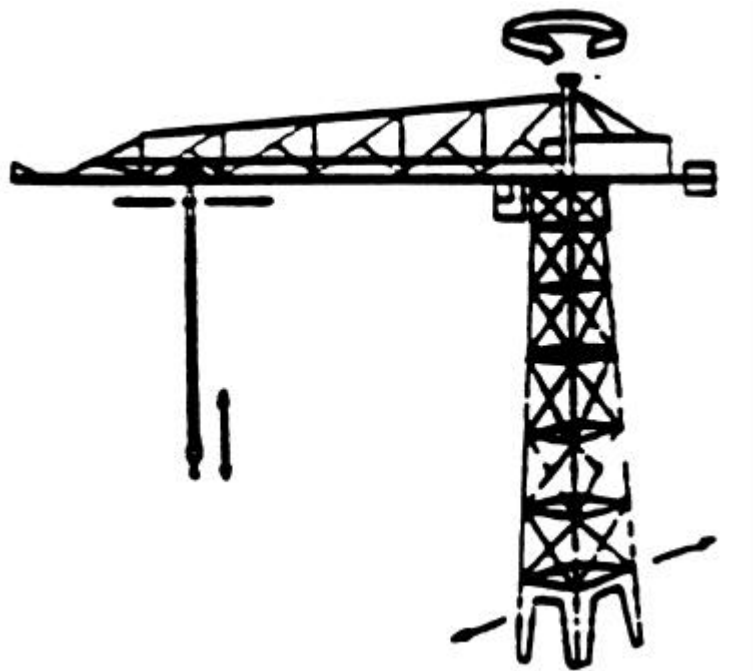Cantilever. A gantry crane in which the bridge gantry girders or trusses extend transversely beyond the crane runway on one or both sides.




HAMMERHEAD CRANE

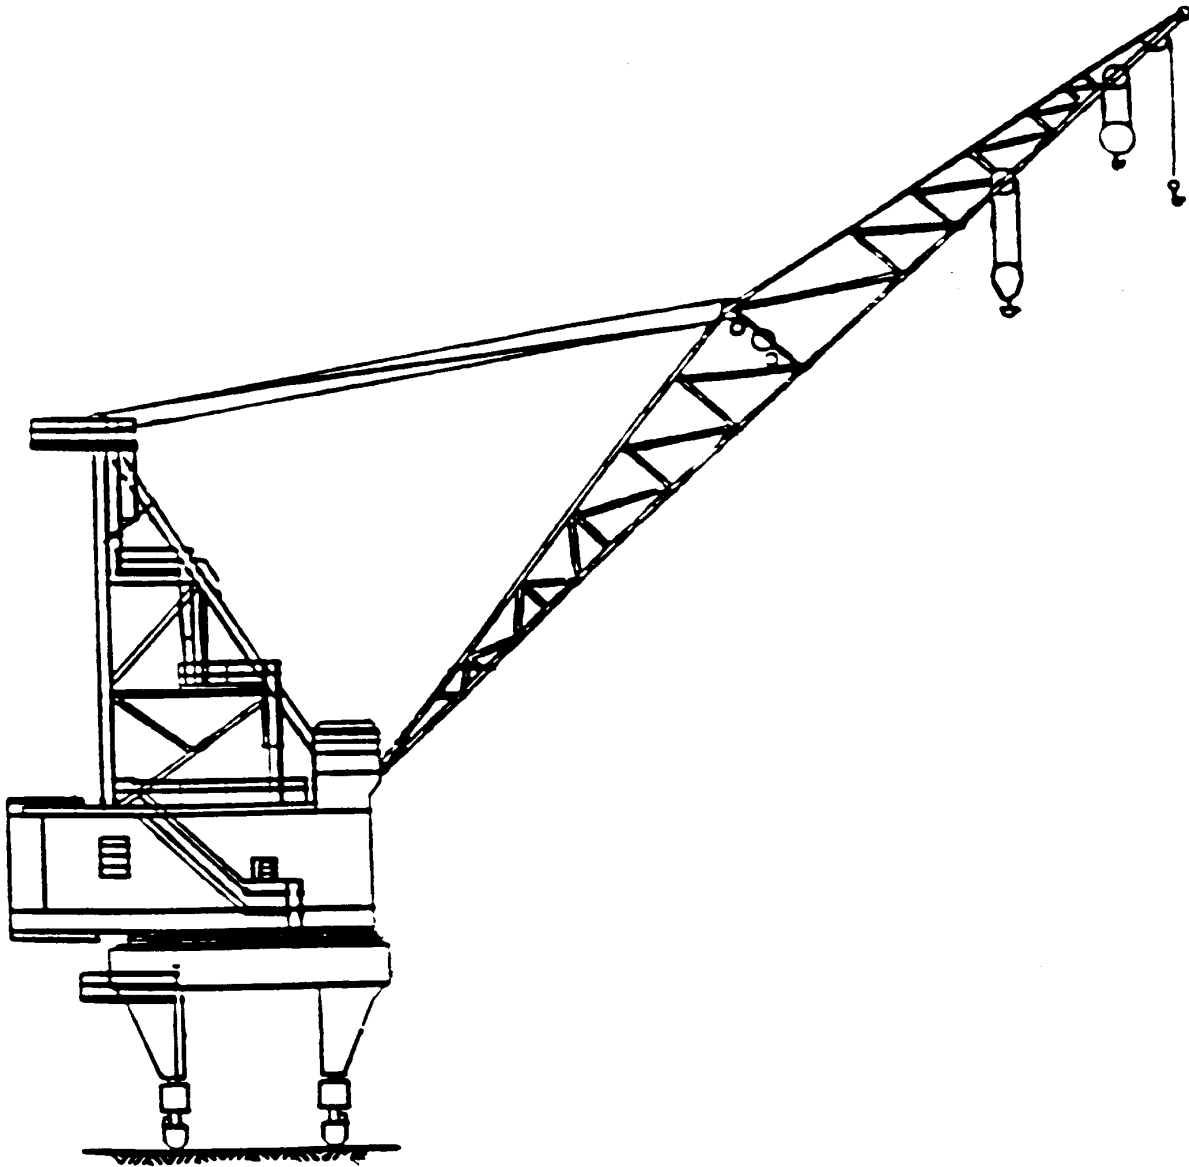Hammerhead. A crane with rotating counterbalanced cantilever boom equipped with one or more trolleys and supported by a pintle or turntable on a traveling or fixed tower.




## PORTAL CRANE

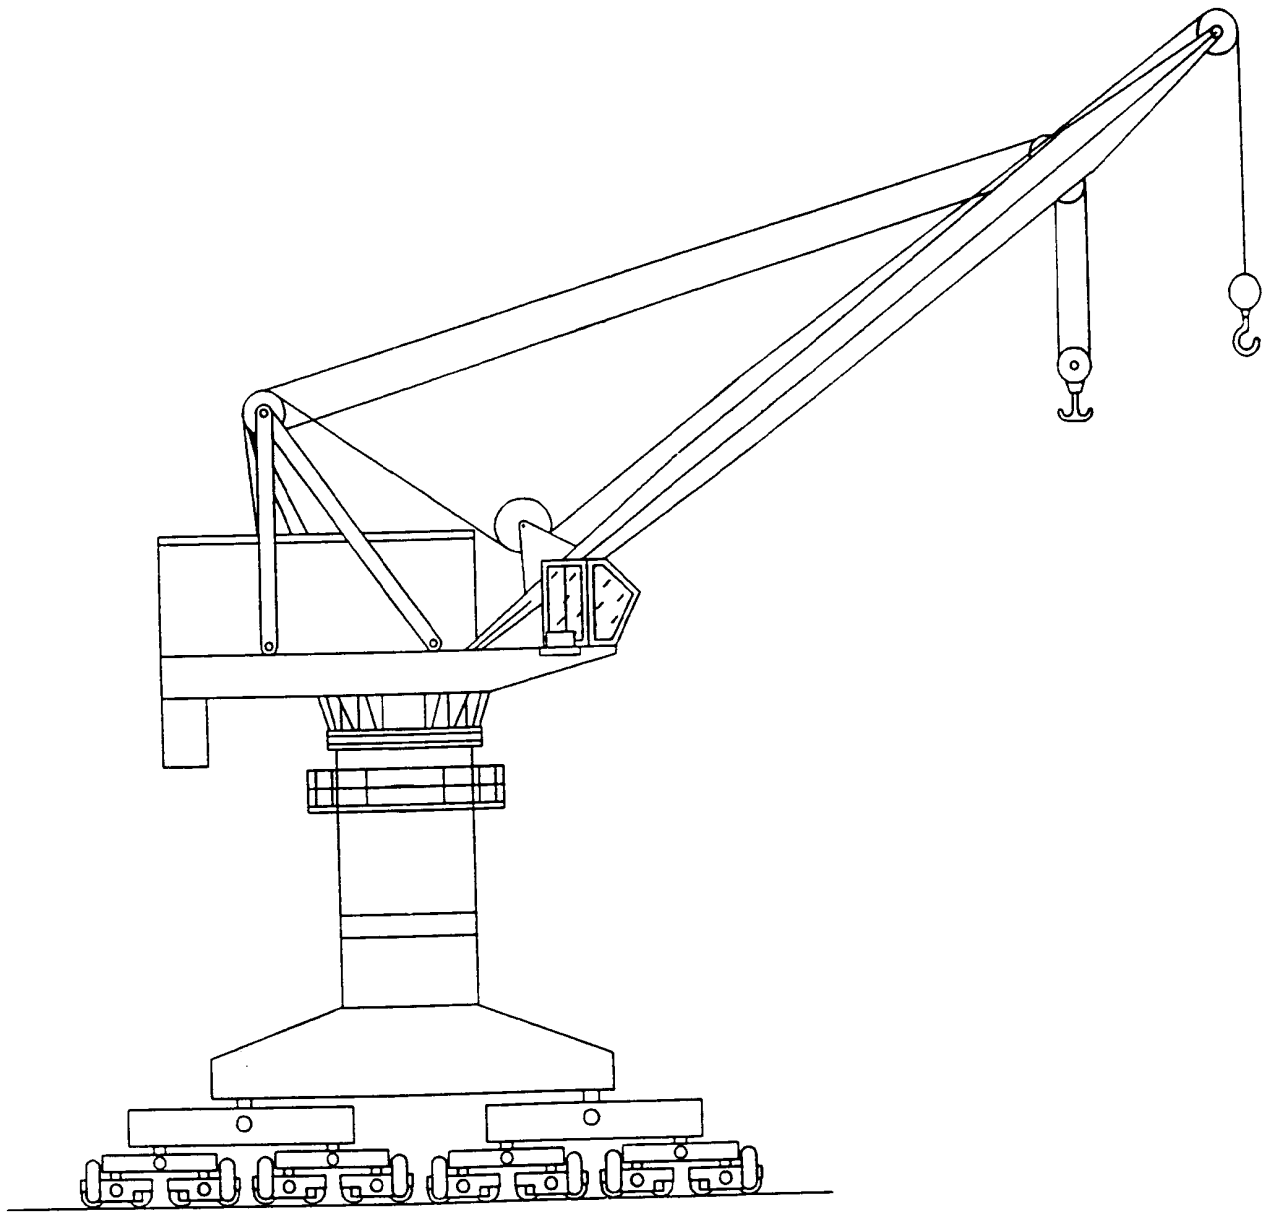Portal. A crane consisting of a rotating superstructure with operating machinery and boom mounted on a gantry structure, usually with a portal opening between the gantry columns or legs for traffic to pass beneath the crane. The crane may be fixed or on a traveling base.






## PORTAL CRANE

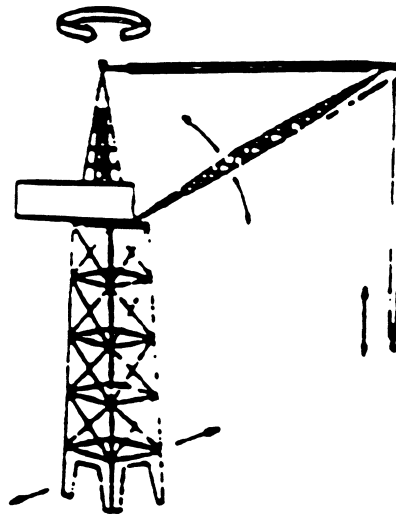

TOWER CRANE

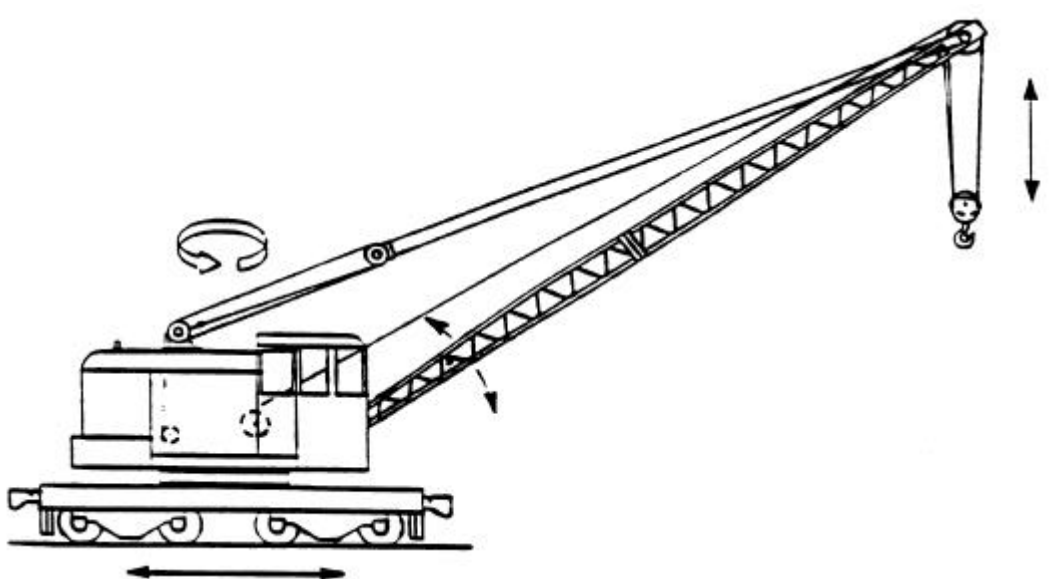
Tower. Similar to a portal crane, but with a tower intervening between the superstructure and the gantry or other base structure; ordinarily, no portal is provided for traffic to pass beneath the crane. To resist overturning moments, the assembly may be ballasted, fixed to a foundation, or a combination of both. The crane may be fixed or on a traveling base.




LOCOMOTIVE CRANE

Locomotive. A crane consisting of a rotating superstructure with a power plant, operating machinery, and a boom capable of being raised and lowered, all mounted on

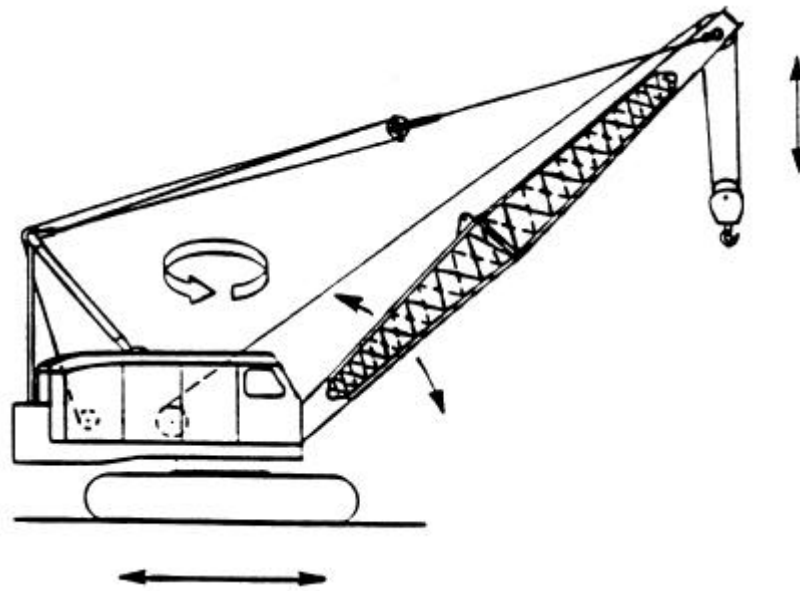a base or car capable of traveling on railroad track. It may or may not be self-propelled.




CRAWLER CRANE - FIXED BOOM

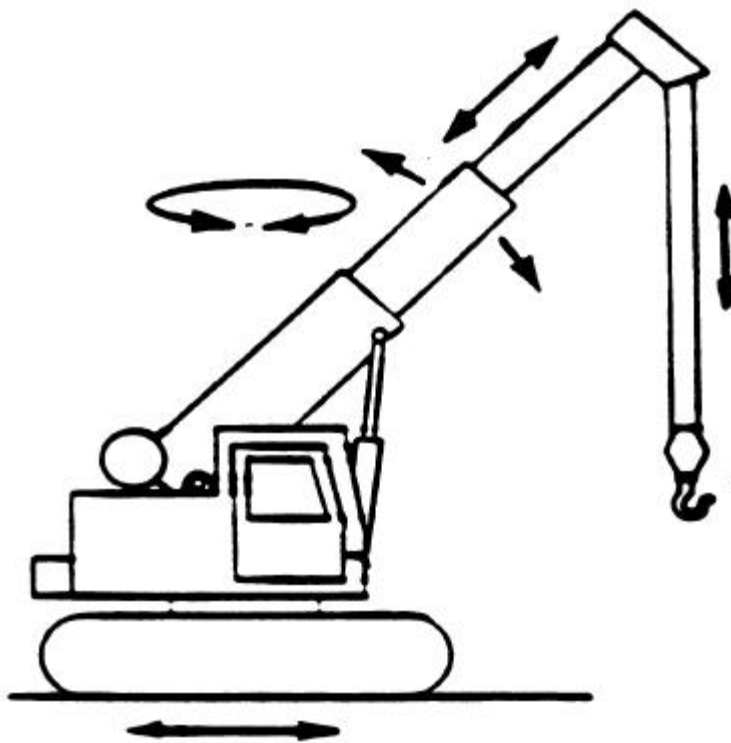


CRAWLER CRANE - TELESCOPING BOOM

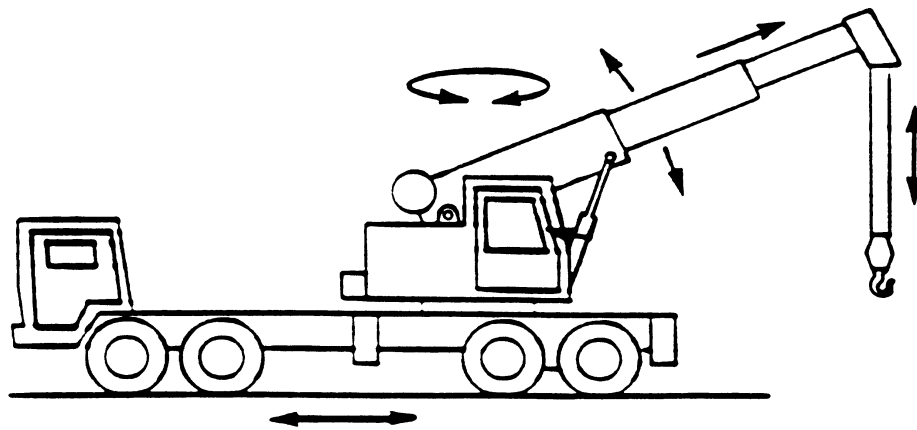Crawler. A crane consisting of a rotating superstructure with power plant, operating machinery, and a boom (either fixed or telescoping) capable of being raised and lowered, all mounted on a base equipped with crawler treads for travel.




TRUCK CRANE - TELESCOPING BOOM

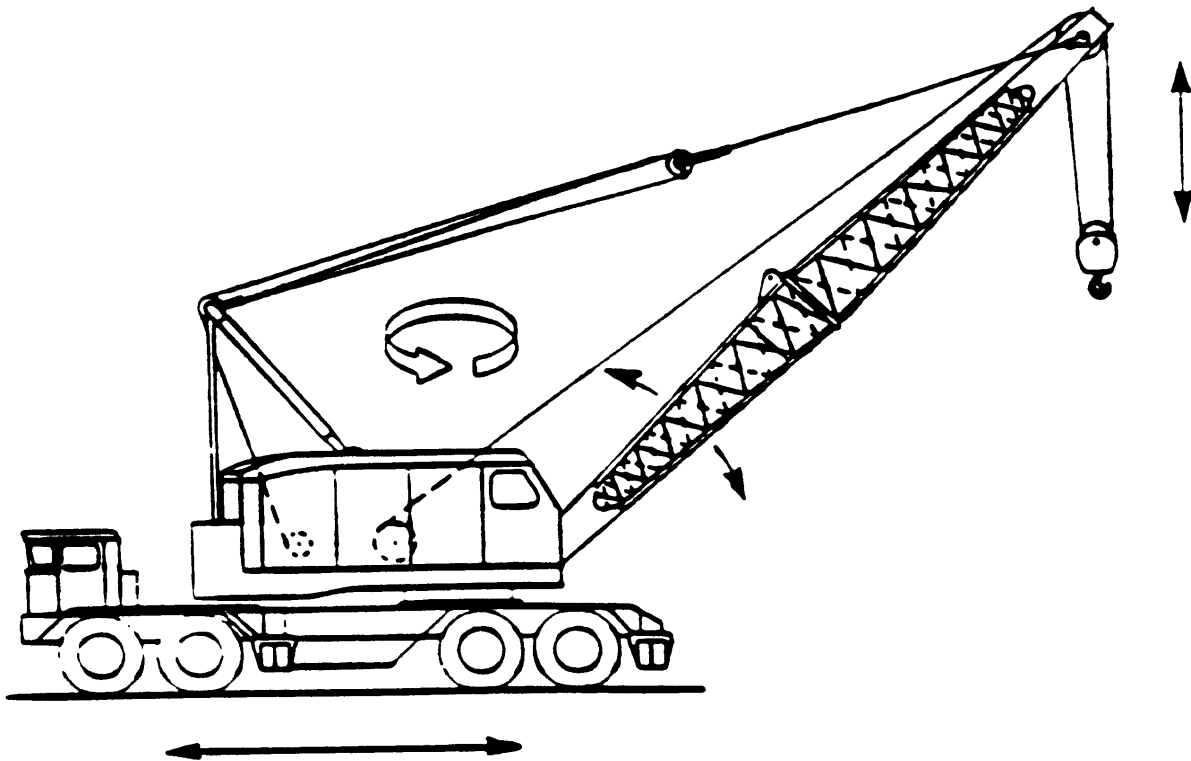


TRUCK CRANE - FIXED BOOM

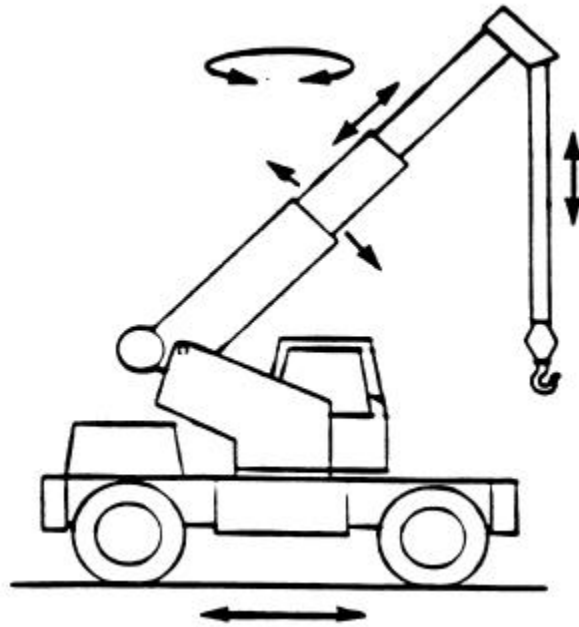Truck. A crane consisting of a rotating superstructure with power plant, operating machinery, and a boom (either fixed or telescoping) capable of being raised and lowered, all mounted on an automotive truck chassis equipped with a power plant for travel.




CRUISER CRANE - TELESCOPING BOOM

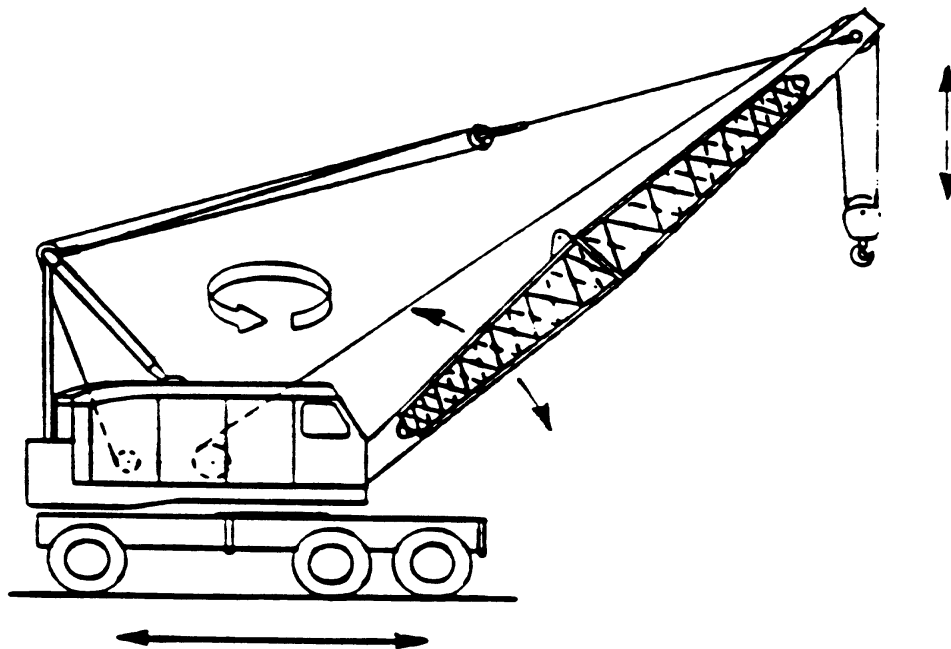


CRUISER CRANE - FIXED BOOM

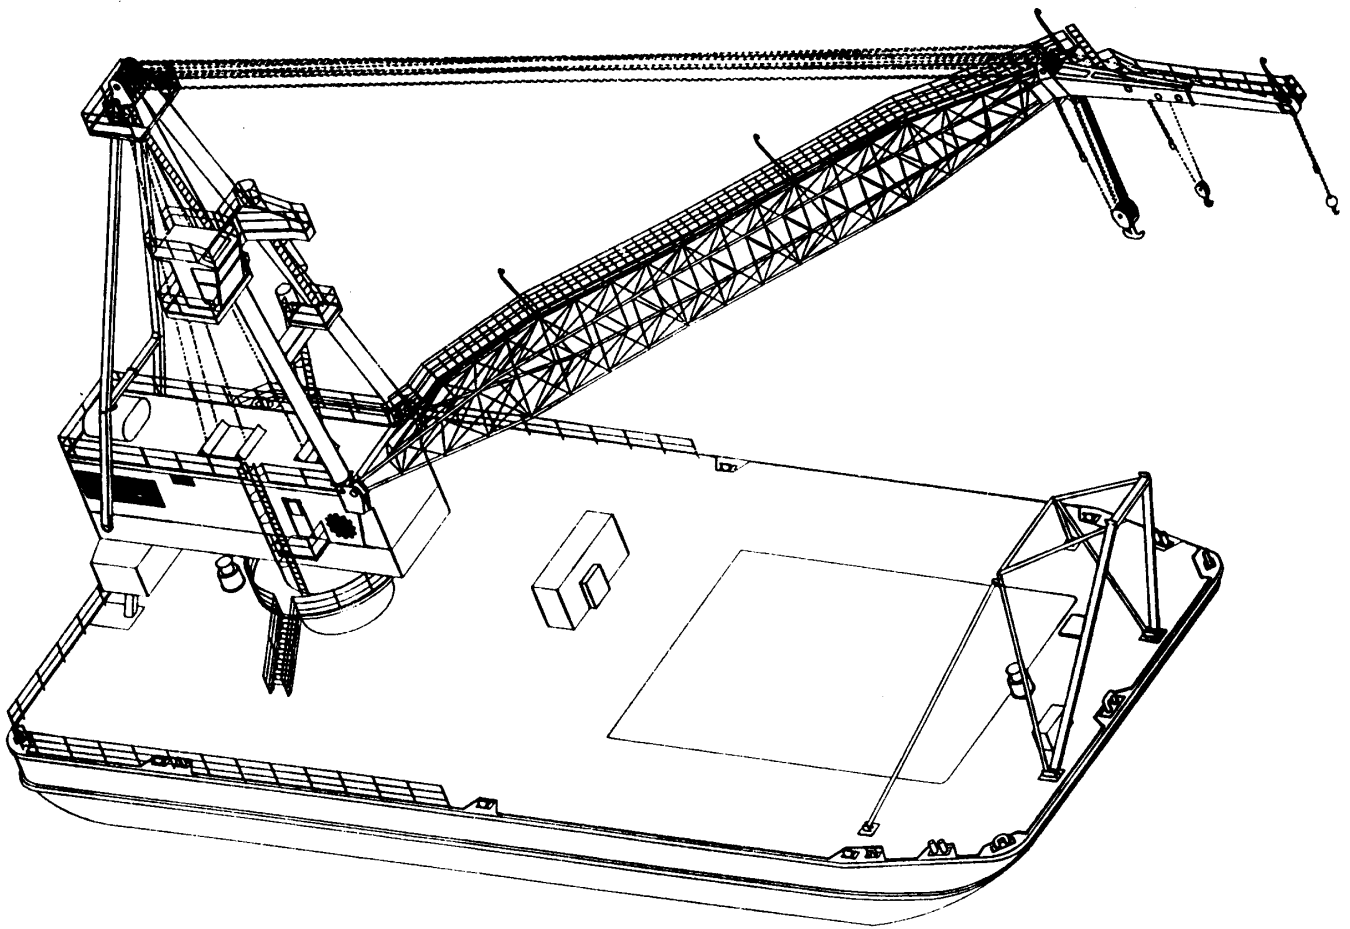Cruiser (Wagon Crane/Rough Terrain Crane). A crane consisting of a rotating superstructure with power plant, operating machinery, and a boom (either fixed or telescoping) capable of being raised and lowered, all mounted on a base or platform equipped with axles and rubber tired wheels for travel. The base is usually propelled by the engine in the superstructure, but it may be equipped with a separate engine controlled from the superstructure.




## FLOATING CRANE

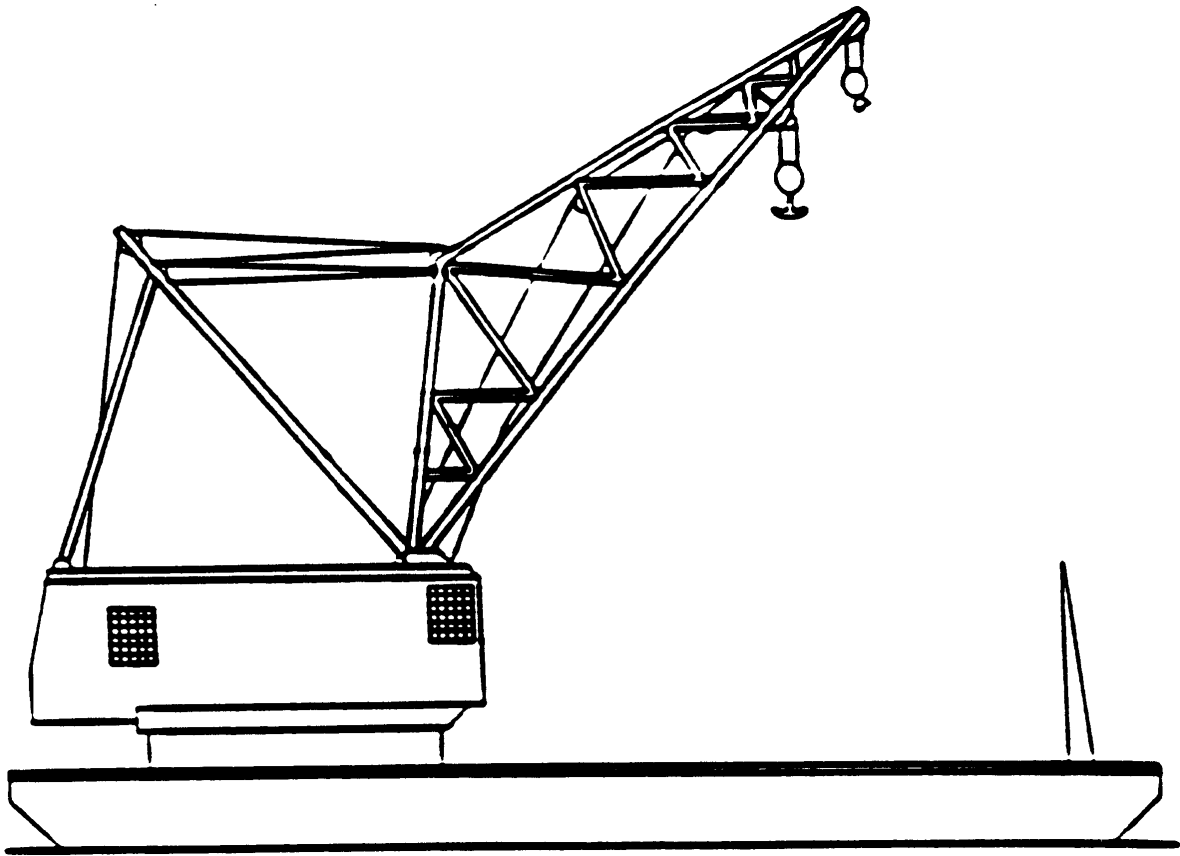Floating. A crane with an integral base consisting of a pontoon, barge, or hull.




FLOATING CRANE



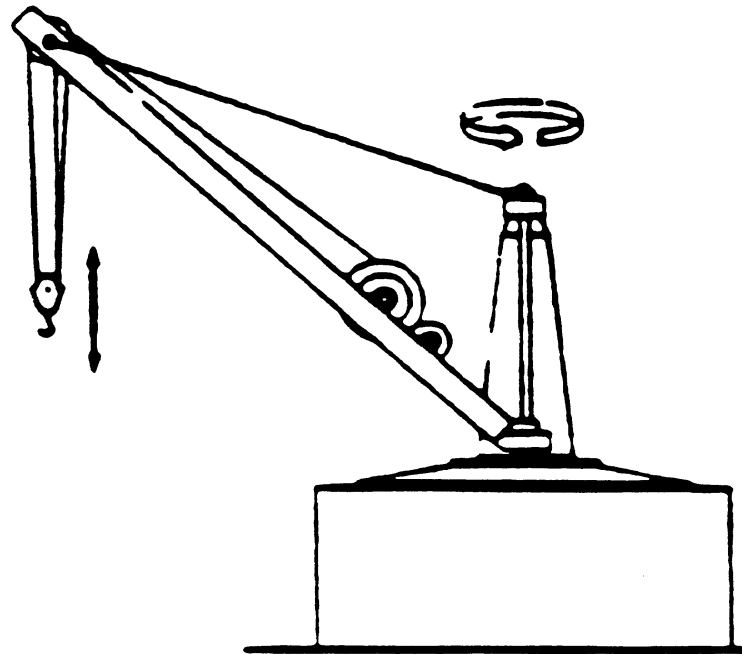


PILLAR CRANE

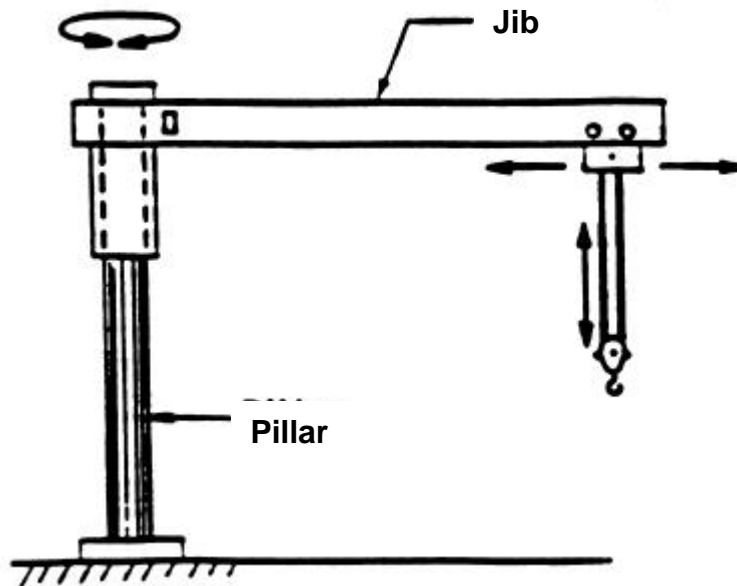Pillar. A fixed crane consisting of a vertical member held in position at the base to resist overturning moment, with a constant-radius revolving boom supported at the outer end by a tension member.




PILLAR-JIB CRANE

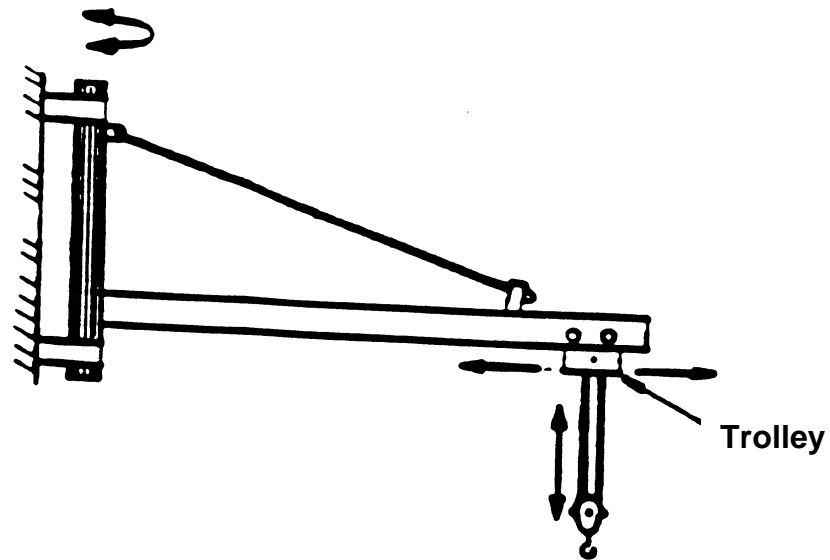Pillar-Jib. A fixed crane consisting of a rotating vertical member with a horizontal arm carrying a trolley and hoist.




JIB CRANE (WALL MOUNTED)

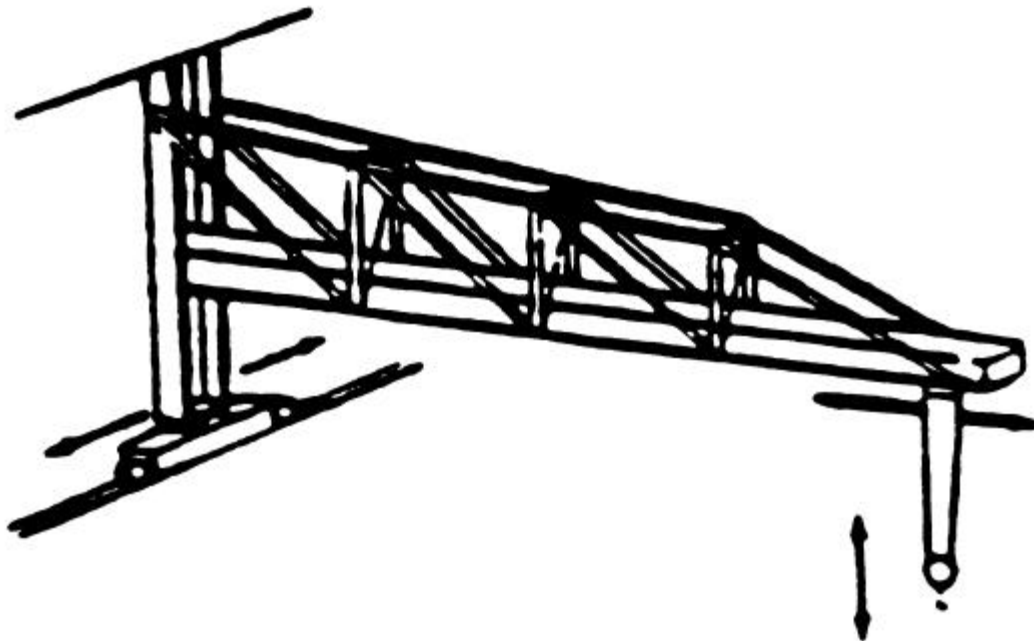Jib. A fixed crane, usually mounted on a wall or building column, consisting of a rotating horizontal boom (either cantilevered or supported by tie rods) carrying a trolley and hoist.




WALL CRANE

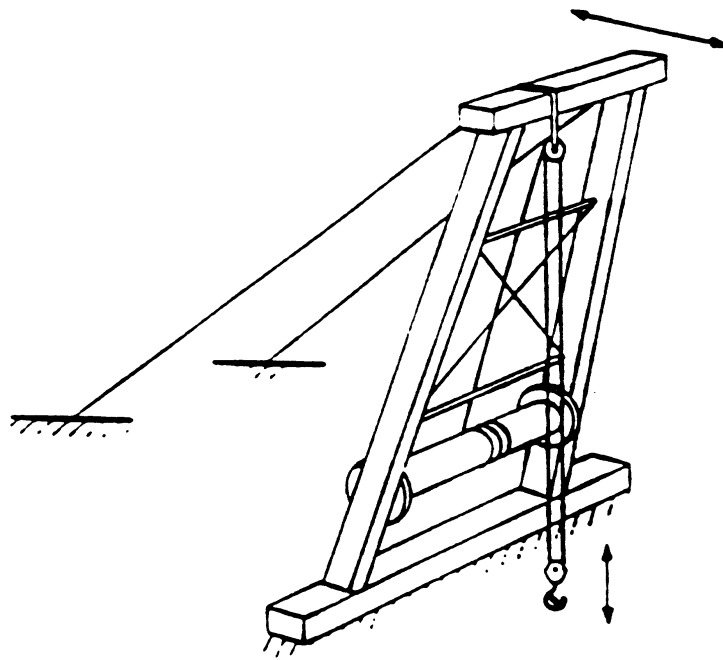Wall. A crane with a jib and hoist, with or without a trolley, traveling on a runway attached to the sidewall or building columns.




BREAST DERRICK

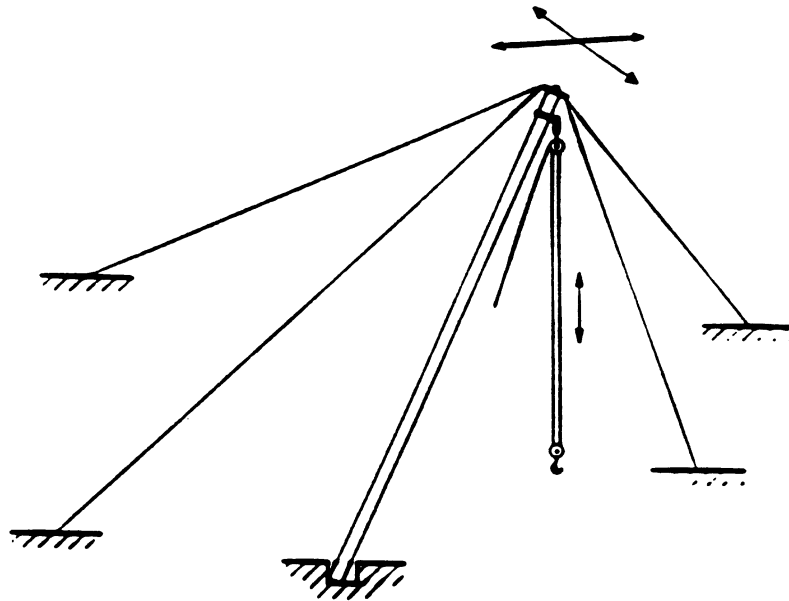Breast Derrick. A derrick without a boom, the mast consisting of two side members spread farther apart at the base than at the top and tied together at top and bottom by rigid members. The top is held from tipping by guys, and the load raised and lowered by ropes through a sheave or block secured to the top crosspiece.




GIN-POLE DERRICK

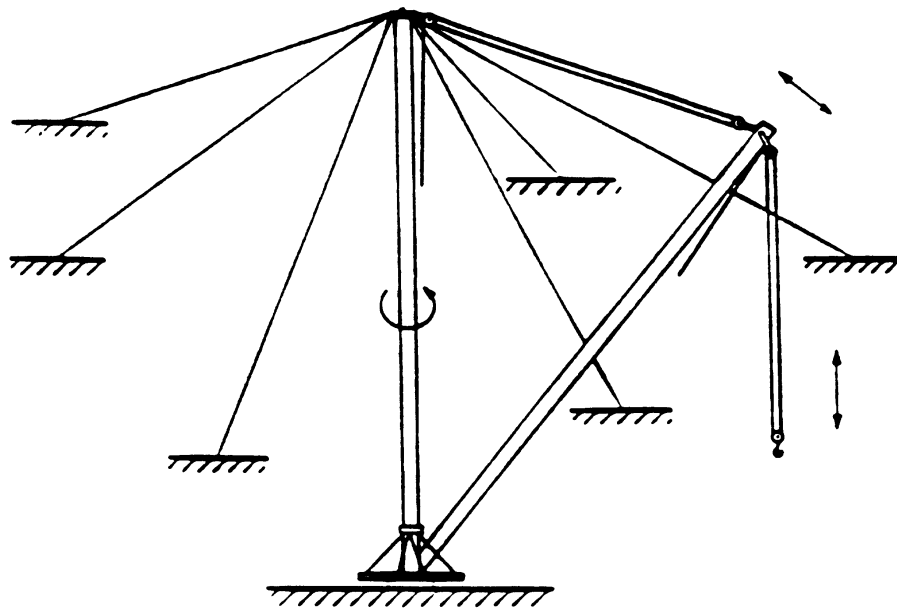Gin-pole Derrick. A derrick consisting only of a mast, with guys from its top arranged to permit leaning the mast in any direction. Ropes leading through sheaves or blocks at the top of the mast raise or lower the load.




GUYED DERRICK

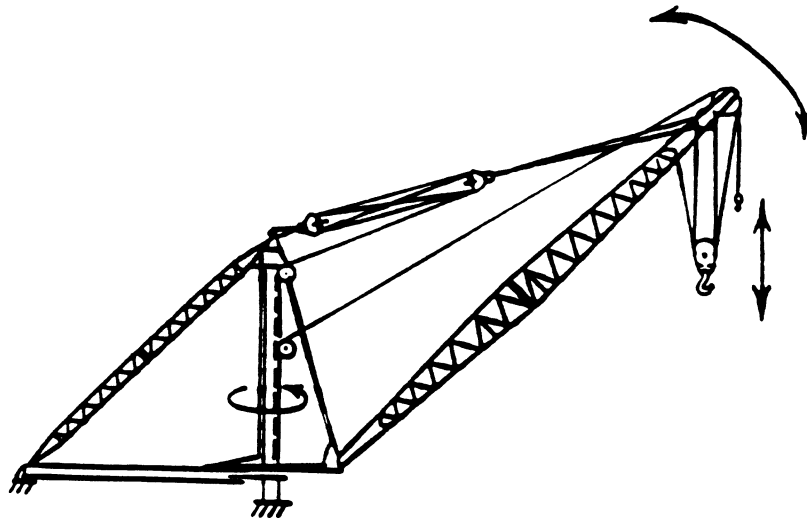Guyed Derrick. A fixed derrick consisting of a mast, capable of being rotated, that is supported in a vertical position by three or more guys, and a boom with its bottom end hinged or pivoted to move in a vertical plane. Lines between the head of the mast and the head of the boom are used for raising and lowering the boom, and lines from the head of the boom are used for raising or lowering the load.




STIFF LEG DERRICK

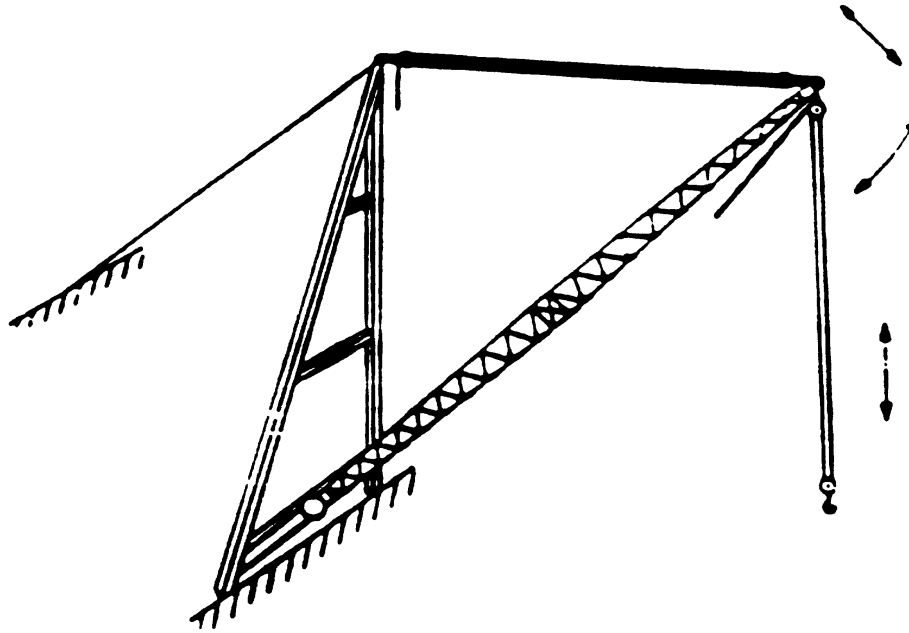Stiff leg Derrick. Similar to a guyed derrick except that the mast is supported or held in place by two or more stiff members capable of resisting both tensile and compressive forces. Sills are generally provided to connect the lower ends of the two stiff legs to the foot of the mast.




A-FRAME DERRICK

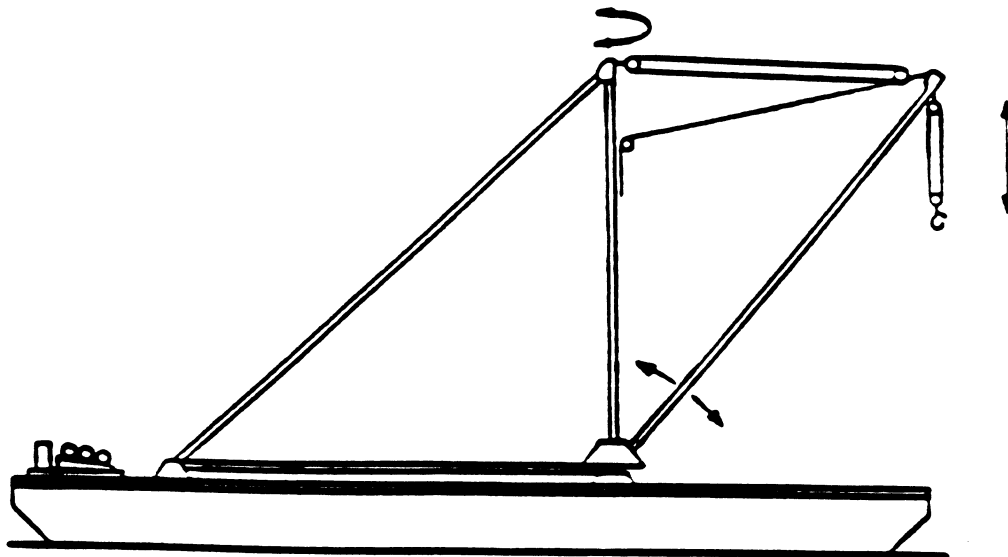A-frame Derrick. A derrick with a boom hinged from a cross member between the bottom ends of two upright members spread apart at the lower ends and united at the top. The upper end of the boom is secured to the upper junction of the side members, and the side members are braced or guyed from the junction point.



FLOATING STIFF LEG DERRICK

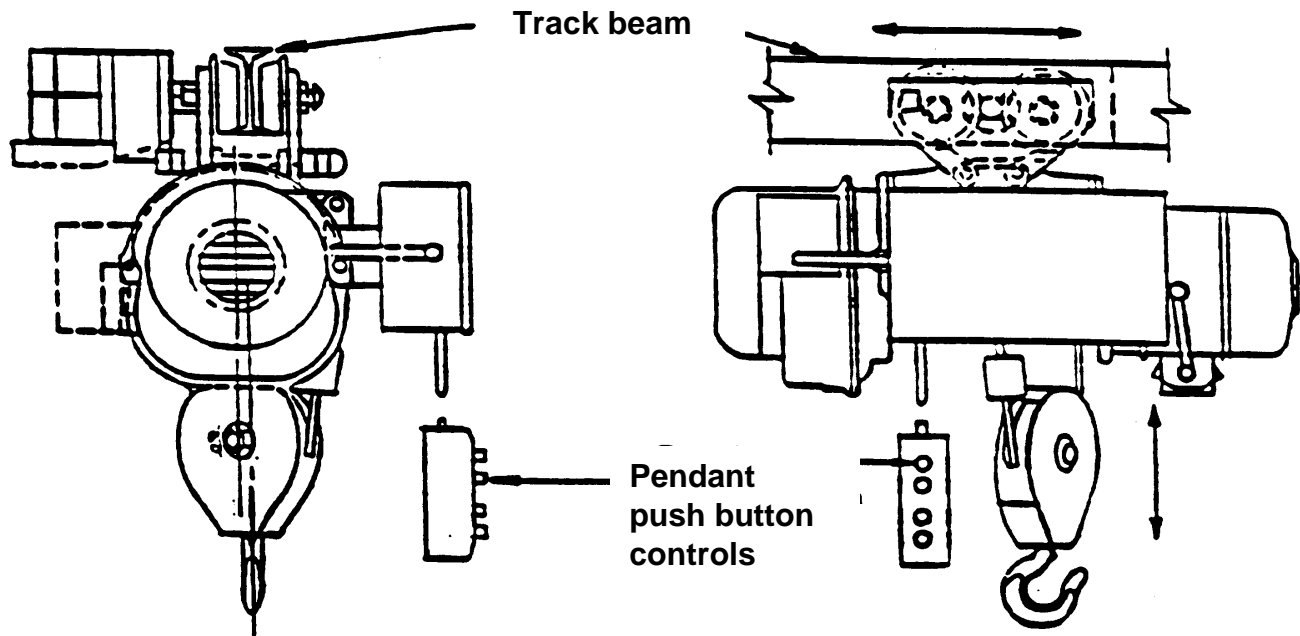Floating Derrick. A derrick constructed integrally with a floating base. May be of any type, but usually is either an A-frame or a stiff leg type.



OVERHEAD HOIST  
TROLLEY-MOUNTED ON MONORAIL TRACK

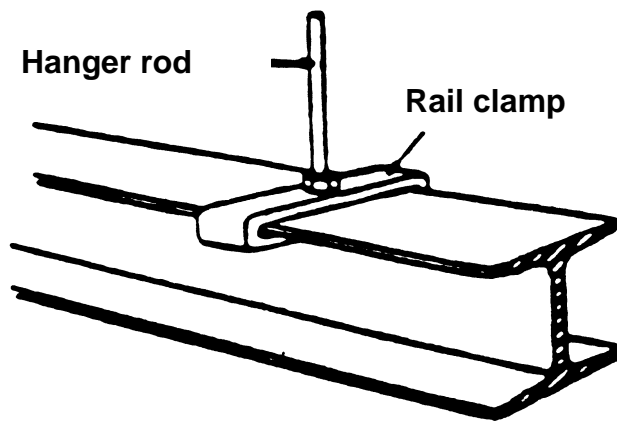
Overhead Hoist. A hoist having one or more drums and sheaves for wire rope or chain. May be manual, electric, hydraulic, or pneumatic powered. May be fixed or may travel on jib crane booms or monorail track.

Suspension Types for Overhead Hoists.


Clevis - Utilizes a clevis for the upper suspension member.

Hook - Utilizes a hook for the upper suspension member.


Trolley - Utilizes a trolley as upper suspension member for the purpose of traveling on jib booms and monorail track.




STRUCTURAL STEEL I-BEAM

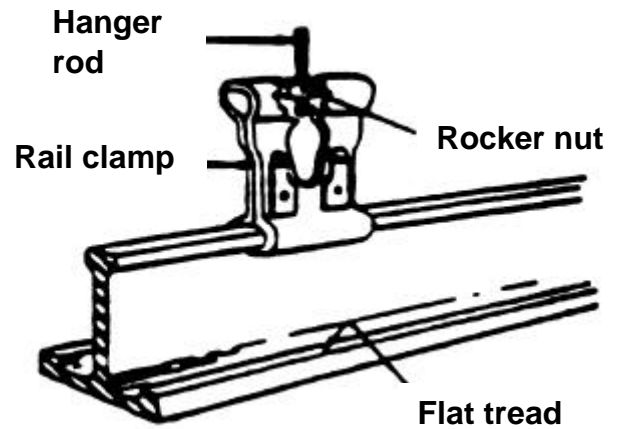

RAISED-TREAD STEEL TRACK

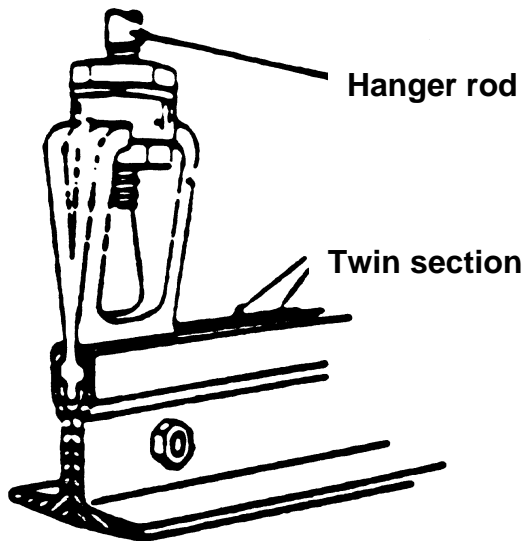

TWIN-SECTION TRACK

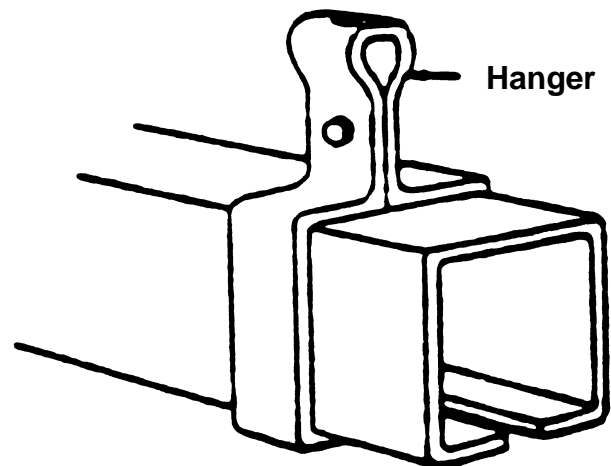

RECTANGULAR TUBING TRACK


### Track Types for Overhead Hoists.

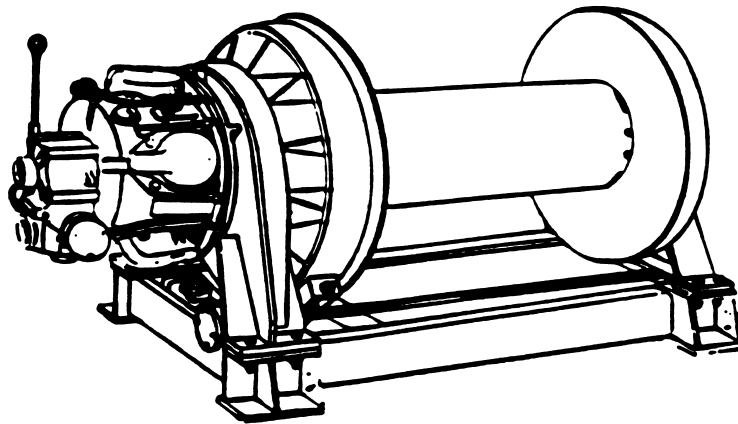Structural steel I-beams - Use for heavy loads and long spans.


Raised-tread steel track (patented track) - Adds wear resisting thickness for longer service life.

Twin-section track - Use for light loads.

Rectangular tubing track - Use for light loads.



SINGLE-DRUM BASE MOUNTED HOIST

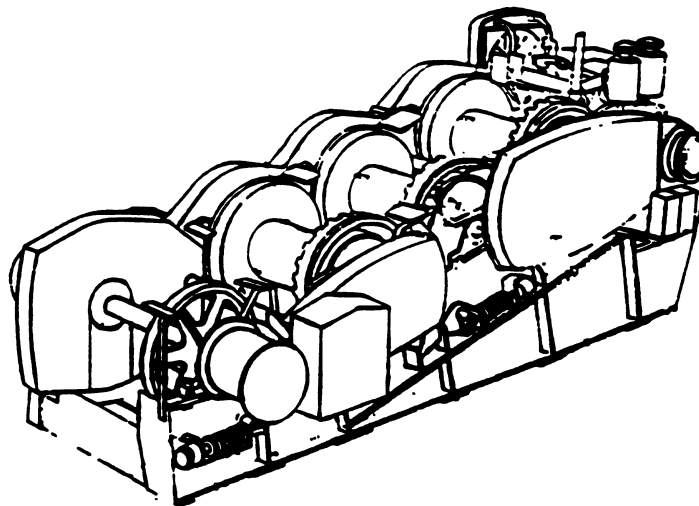

TRIPLE-DRUM BASE MOUNTED HOIST

Base Mounted Hoist. A hoist with one or more drums controlled by manually operated clutches and brakes, or by ratchet and pawl on the drum, with control levers. This type of hoist, known as a "contractor's hoist," is usually a portable unit.

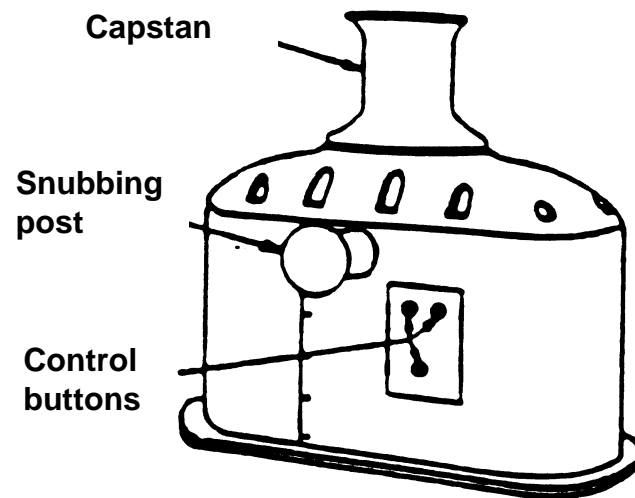
Single-drum - A hoist with only one hoisting drum.

Double-drum - A hoist with two independent hoisting drums.

Triple-drum - A hoist with three independent hoisting drums.









CAPSTAN

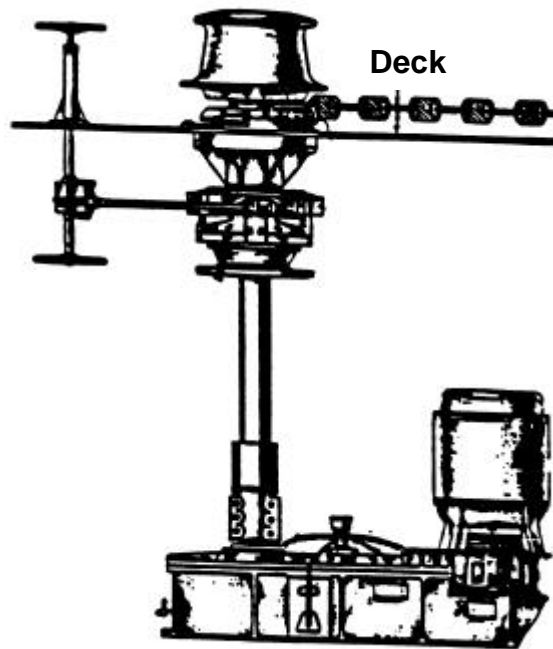Capstan. A stationary vertical-shaft concave drum for winding rope or chain for hoisting or hauling purposes




WINDLASS

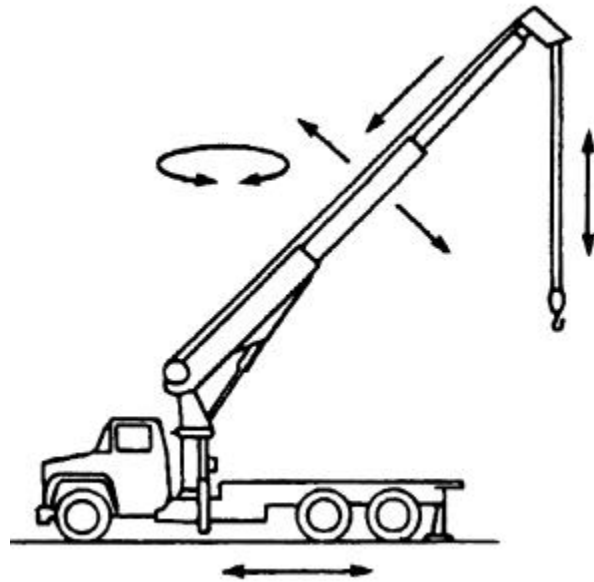Windlass. A windlass is of the same construction as a capstan except that a wildcat (chain grab) replaces the capstan head.




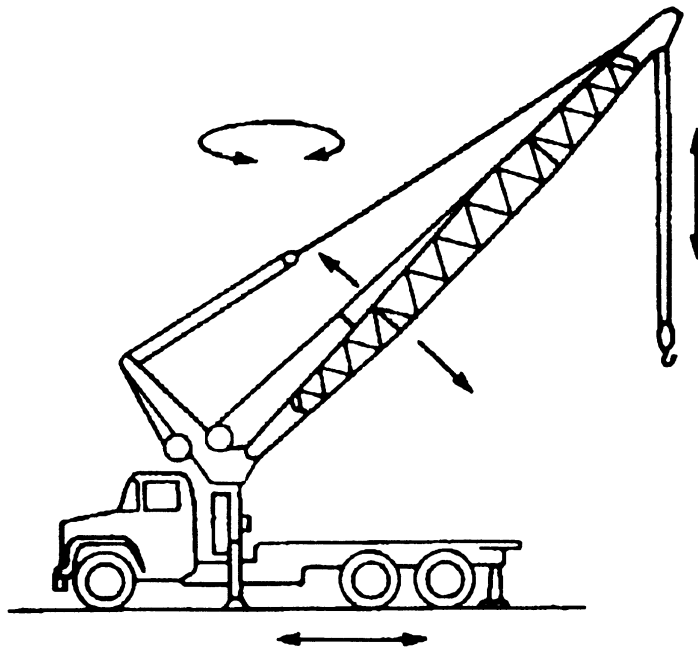COMMERCIAL TRUCK-MOUNTED CRANE - TELESCOPING BOOM




COMMERCIAL TRUCK-MOUNTED CRANE - NONTELESCOPING BOOM

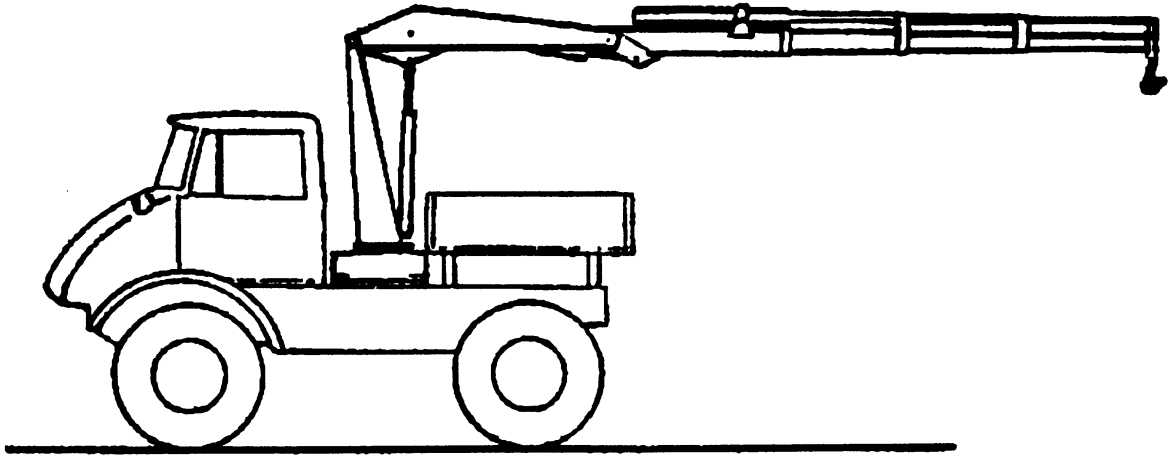Commercial Truck-mounted Crane. A crane consisting of a rotating superstructure (center post or turn-table), boom, operating machinery, and one or more operator's stations mounted on a frame attached to a commercial truck chassis, usually retaining a payload hauling capability whose power source usually powers the crane. Its function is to lift, lower, and swing loads at various radii.




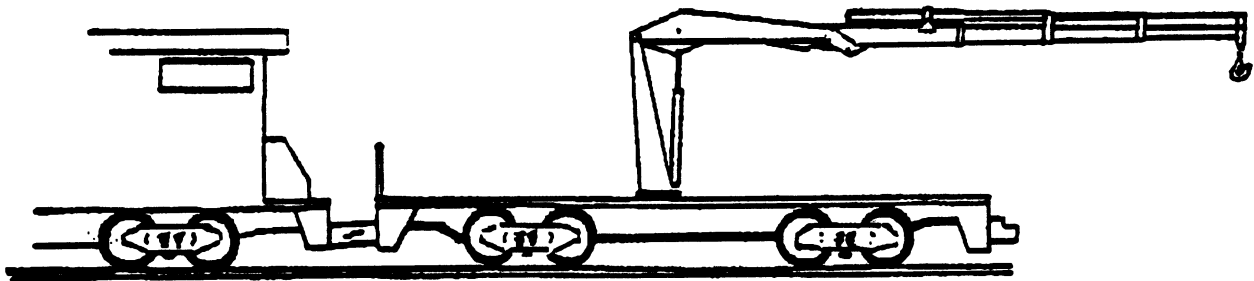ARTICULATING BOOM CRANE - OFF-ROAD VEHICLE




ARTICULATING BOOM CRANE - RAIL CAR INSTALLATION

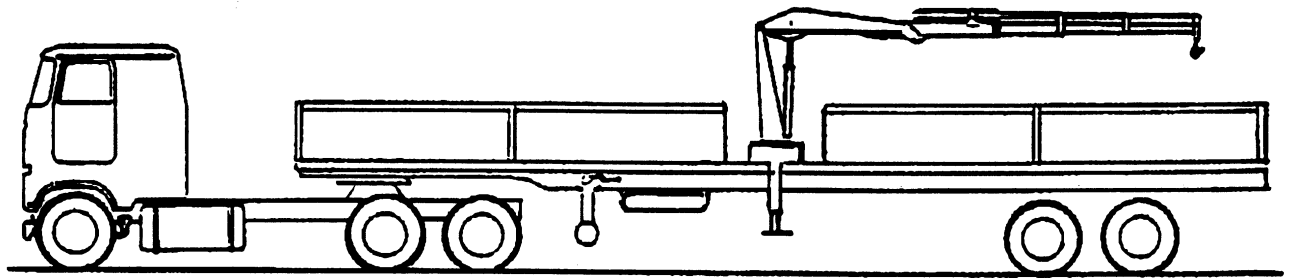Articulating Boom Crane. A crane with a boom that has sections that are articulated by hydraulic cylinders. The boom usually consists of an inner boom section, a secondary boom section, and an outer boom section, each section individually pivoting about a pivot point and individually powered by hydraulic cylinders. The boom may have a telescoping extension. The crane may be truck mounted, trailer mounted, rail car mounted, crawler-mounted, or stationary.



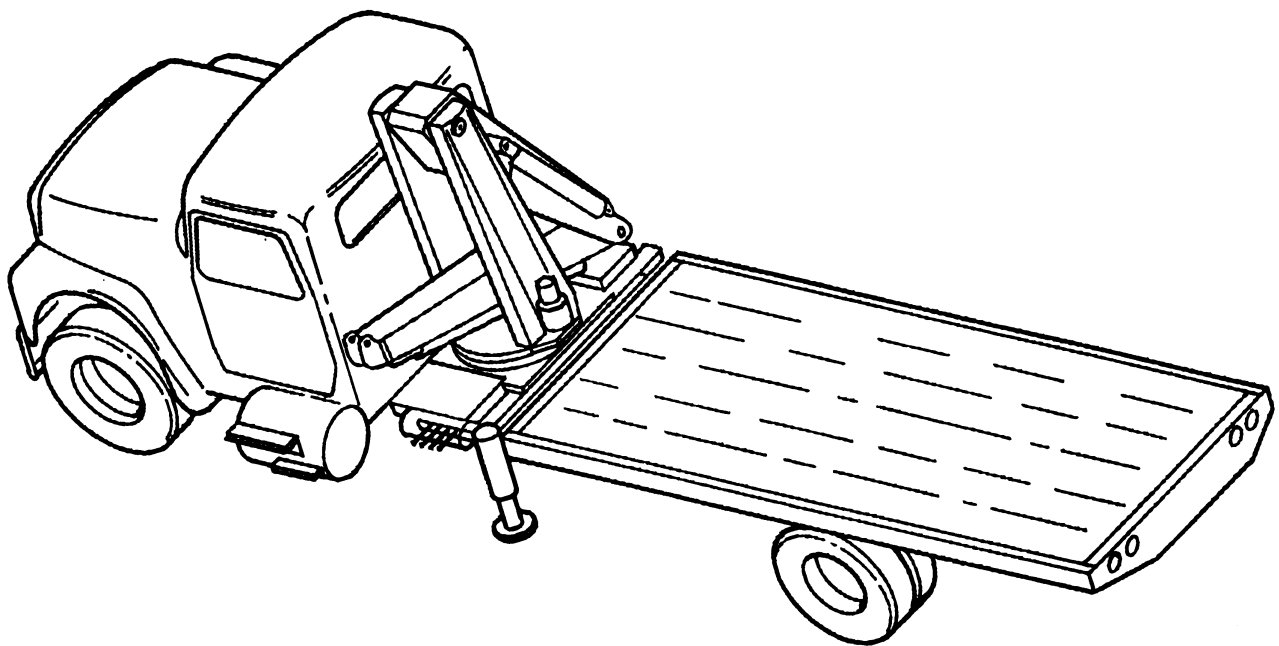ARTICULATING BOOM CRANE - TRAILER MOUNTED



ARTICULATING BOOM CRANE  
COMMERCIAL TRUCK-MOUNTED STANDARD GROUND CONTROL



## APPENDIX C - MAINTENANCE INSPECTION SPECIFICATION FOR CATEGORY 1 CRANES

### Notes:

1 The following are the minimum inspection requirements. Due to the various makes and models of cranes in the Navy inventory with unique or special components, these specifications may require additional instructions. Components need not be disassembled for inspection, except: (a) where noted specifically to disassemble; (b) where activity experience warrants disassembly of specific components; or (c) where problems indicated by these inspections require disassembly for further inspection. Deleting or reducing the frequency of these inspections requires Navy Crane Center approval. Justification shall be provided with the activity's request. Additional or more frequent inspections based upon activity experience or OEM recommendations may be performed at the discretion of the activity. For items not identified in these specifications, the activity shall develop appropriate inspection criteria.

2 These specifications include both non-operational and operational inspection criteria. Where necessary to ensure the safety of inspection and maintenance personnel, the crane shall be de-energized in accordance with approved lockout procedures.

3 For inspections that involve fluids (lubricants, coolants, brake fluid, hydraulic fluid, etc.) or grease, inspect visual appearance, smell, and feel for indications of damaged or malfunctioning components.

4 Where an unsatisfactory condition is found, the item shall be identified on the "Unsatisfactory Items" sheet together with a statement of the condition observed. Corrective action in terms of adjustments, repairs, or replacements of items shall be detailed on a Shop Repair Order (SRO) or other appropriate document.

5 Brake data measurements shall be recorded on the "Brake Data" sheet. Measurement attributes and criteria shall be based on brake OEM recommendations. Where measurements are inaccessible without disassembly, those measurements need only be taken when the brake is disassembled.

6 Where other measurements are specified or required for acceptance, these measurements shall also be recorded.

7 Where an inspection item applies to multiple components (e.g., main hoist, auxiliary hoist, whip hoist), each component shall be identified in the "system inspected" column.

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 1 OF       

Crane		Type		Manufacturer			Capacity			
Prior Inspection				Current Inspection			Legend: Check under condition S = Satisfactory      C = Corrected U = Unsatisfactory    NA = Not Applicable			
DATE		TYPE		DATE		TYPE				
Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
1	X	X	X	Cooling System (Hoses, Thermostat, Pump, Radiator)	Inspect hoses for cracks, clamps for evidence of looseness, and entire system for leaks. Inspect for proper coolant level, color, and clarity. During operation, inspect for leaks and verify proper shutter operation. Inspect for proper engine coolant temperature. Listen for abnormal noise originating from the water pump and inspect for leaking seals.					
		X	X		Inspect for proper coolant freeze protection.					
2	X	X	X	Lube Oil Lines and Lube Pressure	Inspect for evidence of loose connections, leakage, or damage. During operation, inspect for leaks. Inspect gauge for proper lube oil pressure.					
3	X	X	X	Fuel Lines and Fuel Pressure	Inspect for evidence of loose connections, leakage, or damage. During operation, inspect for leaks. Verify proper operation of the fuel pump and fuel pressure gauge and inspect fuel pressure.					
4			X	Starter	Inspect for damaged or deteriorated wiring, evidence of loose connections, and proper lubrication. Operate starter and listen for abnormal noise and verify proper operation.					
5		X	X	Air Starting Lines	Inspect for evidence of loose connections and damage. When lines are charged, inspect for leaks. Inspect lubricators for lubrication level and leakage.					
6		X	X	Drive Belts	Inspect drive belts on fan, water pump, oil pumps, alternator, and external fuel transfer pumps for tension and wear.					
7		X	X	Engine Alternator/Generator (Battery Charging System)	Inspect for cleanliness and proper lubrication. Inspect external wiring for damage, deterioration, or oil or grease contamination, and for evidence of loose connections. During operation, inspect for rubbing, vibration, and sparking. Listen for abnormal noise. Verify that alternator/generator is properly charging batteries.					
8		X	X	Battery and Cables	Inspect battery for proper electrolyte level, cleanliness, structural distortion, damaged racks/holders, and evidence of loose terminals. Inspect battery cables for damage or deterioration, and for evidence of loose connections.					
9		X	X	Voltage Regulator (Battery Charging System)	Inspect for evidence of loose or damaged wires and connections. During operation, verify regulator cycles and does not overcharge batteries.					
10		X	X	Engine Wiring	Inspect wiring to lights, warning devices, and meter connections for damage or deterioration, and for evidence of loose connections.					



# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 2 OF \_\_\_\_\_

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
11		X	X	Gauges (Oil, Fuel, Temperature, Ammeter, Tachometer, Etc.)	Inspect for identification, legibility, and condition. Inspect for evidence of loose electrical or mechanical connections. Verify operation (calibration not required).					
12		X	X	Turbocharger	Inspect for evidence of loose or missing mounting bolts and parts. During operation, inspect for vibration and oil leaks. Listen for abnormal noise.					
13		X	X	Governor	Inspect linkage for evidence of binding, looseness, and damaged parts. Inspect for proper oil level. Verify proper operation.					
14	X	X	X	Fuel Filters	Inspect for leaks prior to and during operation.					
15	X	X	X	Air Cleaner	Inspect mounting brackets for evidence of loose or missing fasteners. Inspect for proper oil level and condition of filter element or vacuum indicator.					
16		X	X	Throttle Linkage	Inspect for evidence of loose and damaged components. Verify proper operation.					
17		X	X	Clutch-Main Drive	Inspect linkage for damage, for evidence of binding, loose and worn components, and for proper lubrication and adjustment. During operation, inspect for slippage and evidence of binding. Listen for abnormal noise.					
			X		<b>At every second "C" inspection,</b> disassemble and inspect all internal components.					
18		X	X	Exhaust System	Inspect for holes, for damaged gaskets, for evidence of loose or missing fasteners, and for proper insulation. During operation, inspect for leaks and sparks. Listen for abnormal noise.					
19	X	X	X	Engine Condition	During operation, inspect for excessive smoking and vibration. Listen for abnormal noise.					
20		X	X	Engine Alarm Safety Devices	Inspect wiring for damage or deterioration, and for evidence of loose connections. Verify proper operation of engine overspeed shutdown, oil system shutdown, water system shutdown, and alarm systems. For portal and floating cranes, verify sensors function properly by testing with sensors connected to system.					
21			X	Heat Exchanger	Inspect for oil and water leaks, and for evidence of loose or missing fasteners. During operation, verify operation of temperature gauges.					
22			X	Fuel Tank	Inspect fuel tank for leaks, for condition of gauge, and for evidence of loose or missing fasteners. Inspect fuel strainers and filters. Inspect for proper venting.					
23	X	X	X	Clutches (Boom, Hoist, Swing, and Travel)	Inspect clutch linkage for damage, for evidence of binding and loose or worn components, and for proper lubrication and adjustment. Inspect clutch linings for wear, and drums for smoothness and for evidence of overheating. During operation, inspect for slippage and evidence of binding. Listen for abnormal noise.					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 3 OF       

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
24	X	X	X	Mechanical Brakes	Inspect system for damage, for evidence of binding, loose, and worn components, and for proper lubrication. Inspect brake linings for wear, and drums for smoothness and for evidence of overheating. Inspect brakes for proper settings and for alignment of brake shoes. During operation, verify proper release, engagement, and stopping action in both directions of motion. Inspect for evidence of overheating.					
		X	X	Brake Linings	Disassemble as required to inspect brake linings for glazing.					
			X	Chassis Travel Brakes	Inspect chassis travel brakes on mobile cranes.					
25 a	X	X	X	Hydraulic Brake System (Shoe, Caliper/Disc, and Band Type Brakes)	(Not applicable to internal disc brakes on mobile crane hoist and rotate assemblies.) Inspect system for damage, for evidence of binding, loose, and worn components, and for proper lubrication. Inspect brake linings for wear, and drums or rotors for smoothness, and for evidence of overheating. Inspect brakes for proper settings and for alignment of brake shoes, calipers, and bands. Inspect master cylinders for proper hydraulic brake fluid level. Inspect lines for damage or leakage, and for evidence of loose connections. During operation, verify proper release, engagement, and stopping action in both directions of motion. Inspect for evidence of overheating.					
		X	X	Brake Linings	Disassemble as required to inspect brake linings for glazing.					
			X	Chassis Travel Brakes	Inspect chassis travel brakes on mobile cranes.					
25 b	X	X	X	Hydraulic Brake System (Caliper Brakes on Wire Rope Drums)	Inspect system for damage, for evidence of binding, loose, and worn components, and for proper lubrication. Inspect brake linings for wear, and braking surfaces for smoothness and for evidence of overheating. Inspect brakes for proper settings and for alignment of calipers. Inspect for proper hydraulic brake fluid level. Inspect system (pumps, accumulator, gauges, and lines) for damage or leakage, and for evidence of loose connections. During operation, verify proper release and engagement.					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 4 OF       

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
26	X	X	X	Air Brake System	Inspect system for damage, for evidence of binding, loose, and worn components, and for proper lubrication. Inspect brake linings and discs for wear, and drums or rotors for smoothness and for evidence of overheating. Inspect brakes for proper settings, and for alignment of shoes, calipers, and bands. Inspect air lines for damage and evidence of loose connections. During operation, verify proper release, engagement, and stopping action in both directions of motion. Verify proper operation of the air application valves and inspect air application valves and air lines for leaks.					
		X	X	Brake Linings	Disassemble as required to inspect brake linings for glazing.					
			X	Chassis Travel Brakes	Inspect chassis travel brakes on mobile cranes.					
27 a	X	X	X	Electric Magnetic Brake System (Shoe Type Brakes)	Inspect system for damage, for evidence of binding, loose, and worn components, and for proper lubrication. Inspect brake linings for wear, and drums for smoothness and for evidence of overheating. Inspect brakes for proper settings and for alignment of brake shoes. Inspect wiring for damage or deterioration, and for evidence of loose connections. During operation, inspect for proper release, engagement, and stopping action in both directions of motion. Inspect for evidence of overheating or other evidence of incomplete brake release.					
		X	X	Brake Linings	Disassemble as required to inspect brake linings for glazing.					
27 b	X	X	X	Electric Magnetic Brake System (Disc Type Brakes)	Inspect brake housings for damage or evidence of loose hardware. Inspect brakes for proper settings. During operation, verify proper release, engagement, and stopping action in both directions of motion. Inspect for vibration and overheating. Listen for abnormal noise.					
		X	X	Disc Type Brakes-Hoist and Rotate	For hoist and rotate brakes, disassemble as required to inspect for glazed or damaged brake discs, damaged splines or other internal components, and for proper brake lining thickness.					
			X	Disc Type Brakes-Travel	For travel brakes, disassemble 50 percent of the brakes and inspect for glazed or damaged brake discs, damaged splines or other internal components, and for proper brake lining thickness (at the following "C" inspection, disassemble and inspect brakes not done at previous "C" inspection).					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 5 OF       

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
28		X	X	Shafts and Couplings	Inspect for damage, for leaking seals, and for evidence of loose keys, coupling bolts, and covers. During operation, inspect for vibration and other evidence of misalignment or damaged components. Listen for abnormal noise. Inspect for evidence of bearing damage, overheating, and abnormal wear.					
		X	X	<b>Hoist and Rotate Drives-Initial Inspection</b>	Disassemble coupling cover (sleeve) and inspect components for damage and abnormal wear. Verify coupling alignments are within OEM tolerances (not applicable to NEMA c, d, and p-face motors). <b>Coupling alignment verifications shall be phased in over the next three years from the date of this publication.</b>					
			X	<b>Hoist and Rotate Drives-Subsequent Inspections</b>	<b>After initial verification and inspection, inspect for alignment and inspect coupling components at every second "C" inspection.</b> Coupling alignment verification data shall be filed in the crane's history file.					
29 a		X	X	Gearing (Boom, Hoist, Rotate, Travel) <b>External Gears</b>	Inspect for damaged or worn gears, for evidence of misalignment or loose keys, and for proper lubrication. During operation, listen for abnormal noise, and inspect for other evidence of possible damage.					
29 b		X	X	Gearing (Boom, Hoist, Rotate, Travel) <b>Internal Gears</b>	For internal gearing on hoist and single rotate drives, establish an oil or vibration analysis program. Inspect for proper gear case lubricant level. Inspect for leaks and for evidence of loose or missing mounting fasteners. Inspect breathers for restrictions. During operation, and inspect for vibration, overheating, and other evidence of damaged internal components or misalignment. Listen for abnormal noise. Inspect for evidence of bearing damage, overheating, and abnormal wear.					
		X	X	<b>Internal Gears for Hoists and Single Rotate Drives</b>	Monitor using an oil or vibration analysis program. The oil or vibration analysis shall be performed at least once each certification period with results analyzed by a qualified source. The results of the analysis shall be documented and retained in the equipment history file for the life of the component.					
			X	<b>Internal Gears for Hoists and Single Rotate Drives-Alternate</b>	As an alternative to oil or vibration analysis, internal gears shall be visually inspected for wear or damage and for evidence of misalignment. If all gears can not be visually inspected through inspection ports or by video probe or similar inspection devices, the gear cases shall be disassembled for visual inspection. <b>If this alternative is selected, initial inspections shall be phased in over the next 3 years (from the date of this publication) with subsequent inspections at every third "C" inspection. Document the results in equipment history file.</b>					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 6 OF       

Crane:

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
30			X	Chains and Sprockets	Inspect chains for proper tension and lubrication, and for evidence of loose or worn links and pins. Inspect sprockets for worn or damaged teeth, for evidence of loose shafts and keys, and for proper lubrication. During operation, listen for abnormal noise.					
31	X	X	X	Pawls, Ratchets, and Rotate Locks	Inspect for evidence of loose, damaged, or worn components. Inspect operating system for evidence of worn keys, loose fasteners, and broken springs. Operate pawls and rotate locks and inspect for proper setting. Verify limit switch and indicator light operation.					
32		X	X	Air Compressor	Inspect for cleanliness, for evidence of loose or missing mounting fasteners, for proper belt tension and wear, and for condition of filters. During operation, verify proper operation of unloader valve and pressure switch. Listen for abnormal noise and inspect for vibration.					
33	X	X	X	Pressure Vessel Inspection Certificate	Verify that pressure vessel inspection certificate is properly posted and current. (See NAVFAC MO-324 or appropriate document for test procedure).					
34		X	X	Air Control System	Inspect valves, cylinders, lines, regulators, and gauges for damage or deterioration, and for evidence of loose or missing fasteners. During operation, inspect system for leaks, and verify proper operation of valves, regulators, and gauges.					
35		X	X	Hydraulic System	Inspect hydraulic system components, including motors, pumps, valves, cylinders, lines, regulators, and gauges for damage or deterioration, and for evidence of loose or missing fasteners. Inspect reservoir for proper fluid level. During operation, inspect system for leaks, and verify proper operation of motors, pumps, valves, cylinders, regulators, and gauges.					
36			X	Wheels and Axles	Inspect wheels for uneven wear, flat spots, chips, flange wear, and cracks, for evidence of loose or missing fasteners and bearing caps, and for proper lubrication. During operation, inspect for excessive movement between components, improper tracking, overheating, and other evidence of component wear or bearing damage. Listen for abnormal noise.					
37	X	X	X	Mobile Crane Chassis (Steering, and Suspension)	Inspect components for damage or deterioration, and for evidence of loose or missing fasteners and cracked welds. During operation, inspect for abnormal play and other evidence of component wear. Listen for abnormal noise.					
38	X	X	X	Tires	Inspect for proper air pressure. Inspect for damage, deterioration, or worn treads, and for evidence of loose or missing wheel lugs.					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 7 OF       

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
39			X	Crawler System	Inspect crawler tracks for damaged or broken treads, missing or broken pins, for proper track adjustment, and for evidence of loose or missing fasteners. Inspect drive sprockets for broken teeth, worn idlers or rollers, damaged track adjusting screws, damaged or missing lubrication fittings, and for proper lubrication. During operation, inspect for abnormal play, overheating, and other evidence of bearing damage or component wear. Listen for abnormal noise.					
40			X	Travel Trucks, Equalizers, Gudgeons, Gudgeon Pins, and Retainers	Inspect for damage or deterioration, for evidence of loose or missing fasteners and cracked welds, and for proper lubrication. Verify proper operation.					
41		X	X	Outrigger Assemblies	Inspect for damage or deterioration, and for evidence of loose or missing fasteners. During operation, inspect system for leaks, and verify proper operation of cylinders.					
42			X	Structure (Portal Base, Boom, A-Frame, Tower, Stifflegs, Sills, Support Pins, Retainers, Etc)	Inspect structural components for damaged, distorted, or deteriorated members, and for evidence of loose or missing fasteners and cracked welds. Inspect support pins for proper lubrication. For damaged booms, see section 4.					
43	X	X	X	Telescoping Booms	Verify smooth operation, and inspect for proper lubrication, and evidence of abnormally worn or improperly adjusted wear pads.					
44		X	X	Handrails, Walkways, Ladders, and Personnel Safety Guards	Inspect for damage or deterioration, and for evidence of loose or missing fasteners and cracked welds.					
45			X	Counterweight	Inspect counterweight and counterweight support structure for damage or deterioration, and for evidence of loose or missing fasteners.					
46			X	Rotate Path Assembly	Inspect spider assembly and roller path for damage or deterioration, and for evidence of loose or missing fasteners and cracked welds. Inspect rollers for uneven wear, flat spots, chips, flange wear, cracks, or deterioration, for evidence of loose or missing fasteners, and for proper lubrication. During operation, verify free rotation of rollers and inspect for evidence of misalignment.					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 8 OF       

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
47			X	Center Pin Steadiment Sections and Structural Support Assembly.	Inspect for damaged or deteriorated components, and for evidence of loose or missing fasteners and cracked welds. Inspect for proper lubrication.					
48		X	X	Center Collector Assembly (Electrical or Hydraulic)	Inspect for loose or bent supports. Inspect wiring for damage or deterioration, and for evidence of loose connections. Inspect for worn brushes and proper spring tension. Inspect for loose hydraulic connections, defective tubing, and leaks. During operation, verify brush to collector ring alignment. Inspect for hydraulic leaks.					
49		X	X	Slewing Ring Bearings	Inspect expelled lubricant for evidence of metal flakes or metal or plastic particles. Inspect fasteners for proper tightness. For portal and floating cranes, measure and record internal axial clearance (thrust direction) between bearing rollers (balls) and races. Refer to OEM's literature for method and acceptance/rejection criteria. For mobile cranes, follow OEM recommendations for bearing wear inspection. During operation, listen for abnormal noise and inspect for vibration.					
50			X	Wire Rope Drums and Machinery Foundations	Inspect drums for distortion, cracks, worn grooves, and for evidence of loose or missing fasteners and cracked welds. Inspect pillow block bearings for evidence of loose or missing fasteners. Inspect machinery foundations for damaged or deteriorated components, and for evidence of loose or missing fasteners and cracked welds. During operation, verify that at least two complete wraps of wire rope remain on grooved drums (at least three complete wraps on ungrooved drums) in all operating conditions, including extremes of hook or boom positions. Listen for abnormal noise. Inspect for vibration, overheating, and other evidence of component wear, bearing damage, or misalignment.					
51		X	X	Sheaves	Inspect for abnormally worn or corrugated grooves, flat spots, abnormal play, and broken or cracked flanges. Inspect for evidence of loose or missing fasteners, keepers, and lubrication fittings. Gauge the wire rope grooves of all sheaves. Expose and examine sections of equalizer sheaves and saddles in contact with wire rope and where corrosion may develop because of poor drainage. During operation, verify free movement of all sheaves. Listen for abnormal noise. Inspect for abnormal play, overheating, and other evidence of component wear or bearing damage.					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 9 OF       

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
52		X	X	Wire Rope, Fastenings, and Terminal Hardware	Thoroughly inspect the entire length of running ropes and standing ropes. The depth and detail of the inspection shall be that necessary to ensure that the entire rope is acceptable with special attention paid to areas of expected wear or damage, and to areas not normally visible to the operator during operation or pre-use inspection. During the inspection, the wire rope shall be payed out as far as possible. For sections that can not be spooled off the drum, visual inspection of the wire rope on the drum is sufficient. Where it is not possible to pay out to the lowest layer, the crane shall not be used for applications where the uninspected rope (i.e., covered layers) would be spooled off the drum under load. The first layer of wire rope must be properly reinstalled on the drum to provide adequate support for the upper layers. Remove wire rope dressing from selected areas exposed to significant wear, exposure, and abuse. Dimensional checks shall be performed at several places over the length of the rope. Expose and examine sections in contact with equalizer sheaves and saddles or where corrosion may develop because of poor drainage. Lubricate areas after inspection. Inspect for defects noted below and proper lubrication. Inspect poured sockets, wedge sockets, swage fittings, eyes, swivels, trunnions, and fasteners for undue looseness, wear, cracks, corrosion, and other damage. Undue looseness in poured sockets is defined as looseness or evidence of slippage of wires in the securing material, evidence of deterioration of the securing material, looseness of wire rope strands or wires adjacent to the socket or any looseness resulting from cracks or other defects in the basket. Evidence of looseness between the securing material and the basket resulting solely from seating of the material in the basket is acceptable. Drum end fittings need only be disconnected or disassembled when experience or visible indications deem it necessary. The Federal Specification for wire rope is RR-W-410.					

See next page for wire rope rejection criteria.



Wire Rope Rejection Criteria. Remove damaged portions (or replace entire length, if necessary) if any of the following are found:

1. Kinked, Birdcaged, Doglegged, or Crushed Sections. Kinked, birdcaged, doglegged, or crushed rope in straight runs where the core is missing or protrudes through or between strands, or where the rope does not fit properly in sheave or drum grooves. (This does not apply to runs around eyes, thimbles, or shackles.)
2. Flattened Sections. Flattened sections where the diameter across the flat is less than 5/6 of nominal diameter. (This does not apply to runs around eyes, thimbles, and shackles.)
3. Wear. Wear exceeding one-third the original diameter of outside individual wires.
4. Broken Wires
  - a. Running Ropes. Six randomly distributed broken wires in one lay or three broken wires in one strand in one lay. For rotation resistant wire rope, two in a length equal to six times the rope diameter or four in a length equal to 30 times the rope diameter. One outer wire broken at the point of contact with the core of the rope that has worked its way out of the rope structure and protrudes or loops out from the rope structure ("valley break"). For end connections, two broken wires within one lay length of the end connection.
  - b. Standing, Guy, and Boom Pendant Ropes. Three broken wires in one lay length in sections beyond end connection or two broken wires within one lay length of the end connection.
5. Loss in Diameter. Reduction from nominal diameter of:
  - 1/64" for diameters up to and including 5/16"
  - 1/32" for diameters 3/8" to and including 1/2"
  - 3/64" for diameters 9/16" to and including 3/4"
  - 1/16" for diameters 7/8" to and including 1 1/8"
  - 3/32" for diameters 1 1/4" to and including 1 1/2"
  - 10 percent for diameters over 1 1/2"
6. High Strand. High strand where the height exceeds 10 percent of the nominal diameter.
7. Corrosion. Corrosion such that significant pitting occurs on the surfaces of outside wires. Minor surface roughness on outside wires is acceptable provided no significant pitting occurs and the rope is not corroded internally. Significant pitting is defined as pitting that can not be removed by abrasive removal of less than 1/3 of the original diameter of individual outside wires.
8. Heat Damage. Evidence of heat damage from any cause.
9. Accumulation of Defects. An accumulation of defects that in the judgment of the inspector creates an unsafe condition.
10. Splices. Wire rope shall not contain splices.

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 10 OF       

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
53	X	X	X	Hoist Blocks and Hooks	Inspect hoist blocks, cheek plates, swivels, trunnions, and lubrication fittings for damage or deterioration, cleanliness, freedom of movement, and for evidence of loose or missing fasteners. Inspect hooks and mousing devices for damage. Inspect drip pans and gaskets for damage, proper clearance, and for evidence of loose or missing fasteners. Inspect for evidence of bearing damage, overheating, and abnormal wear. See appendix E for further inspection and test of hooks.					
54	X	X	X	Insulated Link	Inspect link surface for conductive contaminants such as graphite, grease, metallic particles, or rust streaks. Inspect for damage. See appendix E, for additional inspection and testing requirements for insulated links.					
55		X	X	Machinery House and Operator's Cab	Inspect for leaks, broken glass, deterioration, and cleanliness. Verify proper operation of louvers, doors, windows, windshield wipers, heaters, air conditioners, operator's chair, and communication equipment.					
56		X	X	Load Indicators and Alternate Devices	Inspect wiring for damage or deterioration, and for evidence of loose connections. Verify proper operation and tolerance.					
57		X	X	Drum Rotation Indicators	Inspect wiring for damage or deterioration, and for evidence of loose connections. Verify proper operation.					
58		X	X	Radius/Boom Angle Indicator	Verify radius indications by comparing against measured radii at the minimum and maximum boom operating positions. Verify boom angle indications by comparing the indicated boom angle to the boom angle on the load chart corresponding to the boom length and measured radius. This test shall be accomplished at the minimum and maximum boom operating positions.					
59	X	X	X	Capacity Signs and Load Ratings	Inspect capacity signs and brackets for damage or deterioration, and for evidence of loose or missing fasteners. Verify that load ratings are correct, are noted in pounds, and are visible or otherwise available to the operator and riggers.					
60	X	X	X	Fire Extinguishers	Verify inspection is current.					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 11 OF       

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
61		X	X	Controllers.	Inspect for broken or loose springs, cracked or loose operating levers and pitted or burned contact points and segments. Inspect for broken segment dividers and insulators, for excessive arcing, for evidence of worn or loose cams, pins, rollers, or chains, and for evidence of loose connections. Inspect for proper contact pressure. Inspect wiring for damage or deterioration, and for evidence of loose connections. Inspect for identifying label plates and indicators. Inspect such parts as bearings, star wheels, and pawls for proper lubrication. Inspect for proper spring return and neutral latching. During operation, verify proper sequencing of speed points and operation of controller indicating lights and deadman devices.					
62		X	X	Control Panels, Relays, Coils	Transfer and Disconnect Switches, and Conductors. Inspect contacts for proper alignment, pitting, and for evidence of excess heating and arcing. Inspect coil and contact leads and shunts for insulation breakdown and evidence of overheating. Inspect wiring for damage or deterioration, and for evidence of loose connections. Inspect fuses for proper rating and type, for evidence of loose connections, and for evidence of overheating. Inspect overload devices for evidence of loose connections overheating. Inspect circuit breakers and switches for cleanliness and verify proper operation. Inspect panel boards and arc shields for cracks, evidence of loose or missing fasteners, cleanliness, and moisture. Manually operate relays, switches, contactors, and interlocks and verify that all moving parts operate freely without binding or excessive play. Inspect enclosures for cleanliness, damage, and for evidence of loose or missing fasteners and gaskets. During operation, verify proper operation of panel indicating lights and contactor sequence. Verify proper operation of environmental devices (e.g., strip heaters, cooling fans).					
63		X	X	Electronic (Solid State) Drive Control Systems	Inspect wiring for damage or deterioration, and for evidence of loose connections. Visually inspect (without removing) components for evidence of damage or overheating. Inspect the drive for dust, dirt, and debris.					
64		X	X	Resistors.	Inspect resistors, insulators, and brackets for damage, distortion, deterioration, and for evidence of loose or missing fasteners or overheating. Inspect wiring for damage or deterioration, and for evidence of loose connections.					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 12 OF \_\_\_\_\_

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
65		X	X	Limit and Bypass Switches	Remove covers and inspect electrical and mechanical components and wiring for damage or deterioration, and for evidence of loose connections. Inspect enclosures for evidence of moisture and arcing. Inspect drive and actuating components for damage or deterioration, for proper lubrication, and for evidence of loose or missing fasteners. During operation, verify proper functioning of limit switches, indicator lights, settings, and bypass switches.					
66	X	X	X	Warning Devices (Horns, Bells, Lights, Reflectors, etc.)	Inspect components and associated wiring for damage or deterioration, and for evidence of loose connections. During operation, verify proper functioning of devices.					
67		X	X	Electrical Hardware and General Lighting	Inspect conduits, raceways, junction boxes, light fixtures, and associated wiring for damage or deterioration, and for evidence of loose connections. Verify operation of lights.					
68		X	X	Electrical Cable Reels	Inspect wiring for damage or deterioration, and for evidence of loose connections. Inspect reel assembly for damage, deterioration, and evidence of loose or missing fasteners. Verify proper operation.					
69		X	X	Main and Auxiliary Generators.	Inspect generators and associated wiring for cleanliness, damage, deterioration, and evidence of loose connections. Inspect for proper lubrication. Inspect slip rings for damage and commutators for evidence of destructive commutation. Inspect brushes for proper brush tension and length, and for damage and deterioration. Inspect insulation for deterioration and evidence of overheating. Inspect drive belts or coupling for damage deterioration and evidence of misalignment and loose or missing fasteners. During operation, inspect for vibration, overheating, or other evidence of misaligned, worn, or damaged internal components or bearings. Listen for abnormal noise. Verify proper voltage output. Verify proper operation of environmental devices (e.g., strip heaters, cooling fans).					

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 13 OF       

Crane

Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
70		X	X	Electric Motors (Hoist, Rotate, Travel)	Inspect motors and associated wiring for cleanliness, damage, deterioration, and evidence of loose connections. Inspect for proper lubrication. Inspect slip rings for damage and commutators for evidence of destructive commutation. Inspect brushes for proper brush tension and length, and for damage and deterioration. Inspect insulation, for deterioration and evidence of overheating. During operation, inspect for vibration, overheating, or other evidence of misaligned, worn, or damaged internal components or bearings. Listen for abnormal noise. Verify proper operation of environmental devices (e.g., strip heaters, cooling fans).					
71	X	X	X	Operation of Crane Controls	Verify proper operation of all hoist, rotate, and travel functions and limit and bypass switches.					
72		X	X	Barge Compartments	Inspect compartments (voids) for standing water.					

**REMARKS:**


MAINTENANCE INSPECTION SPECIFICATION AND RECORD										
SHEET _____ OF _____										
Crane										
Item No	Inspection Type			Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
	A	B	C				S	U	C	NA
REMARKS:										

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

## UNSATISFACTORY ITEMS SHEET \_\_\_\_\_ OF \_\_\_\_\_

Crane

NOTE: DESCRIBE ITEMS FOUND UNSATISFACTORY AND LIST SRO NUMBER ISSUED FOR CORRECTIVE ACTION.

[illegible]

# MAINTENANCE INSPECTION SPECIFICATION AND RECORD

## BRAKE DATA

SHEET \_\_\_\_\_ OF \_\_\_\_\_

CRANE:

**NOTICE TO INSPECTOR :** Fill in applicable data as recommended by the brake OEM. Ensure that the brake is adjusted within specifications shown. List measurements for all brakes. List repair document number and corrective action required under remarks.

BRAKE	TYPE	SPRING LENGTH/ TORQUE SETTING			AIR GAP/ PLUNGER STROKE			LINING THICKNESS		OTHER (AS RECOMMENDED BY OEM)
		MIN	MAX	ACT	MIN	MAX	ACT	MIN	ACT	

REMARKS:




APPENDIX D  
ANNUAL MAINTENANCE INSPECTION SPECIFICATION AND RECORD  
CATEGORY 2 AND 3 CRANES

Notes:

1 The following are the minimum inspection requirements. Due to the various makes and models of cranes in the Navy inventory with unique or special components, these specifications may require additional instructions. Components need not be disassembled for inspection, except: (a) where noted specifically to disassemble; (b) where activity experience warrants disassembly of specific components; or (c) where problems indicated by these inspections require disassembly for further inspection. Deleting or reducing the frequency of these inspections requires Navy Crane Center approval. Justification shall be provided with the activity's request. Additional or more frequent inspections based upon activity experience or OEM recommendations may be performed at the discretion of the activity. For items not identified in these specifications, the activity shall develop appropriate inspection criteria.

2 These specifications include both non-operational and operational inspection criteria. Where necessary to ensure the safety of inspection and maintenance personnel, the crane shall be de-energized in accordance with approved lockout procedures.

3 For inspections that involve fluids (lubricants, coolants, brake fluid, hydraulic fluid, etc.) or grease, inspect visual appearance, smell, and feel for indications of damaged or malfunctioning components.

4 Where an unsatisfactory condition is found, the item shall be identified on the "Unsatisfactory Items" sheet together with a statement of the condition observed. Corrective action in terms of adjustments, repairs, or replacements of items shall be detailed on a Shop Repair Order (SRO) or other appropriate document.

5 Brake data measurements shall be recorded on the "Brake Data" sheet. Measurement attributes and criteria shall be based on brake OEM recommendations. Where measurements are inaccessible without disassembly, those measurements need only be taken when the brake is disassembled.

6 Where other measurements are specified or required for acceptance, these measurements shall also be recorded.

7 Where an inspection item applies to multiple components (e.g., main hoist, auxiliary hoist), each component shall be identified in the "system inspected" column.

# ANNUAL MAINTENANCE INSPECTION SPECIFICATION AND RECORD

SHEET 1 OF

Crane		Type		Manufacturer			Capacity	
Prior Inspection		Current Inspection		Legend: Check under condition S = Satisfactory      C = Corrected U = Unsatisfactory    NA = Not Applicable				
DATE		DATE						
Item No	Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition				
				S	U	C	NA	
1	Structure (Bridge Girders, Trolley, Trucks, Equalizer Beams, Gantry, Boom, Jib, Pillar, Etc.)	Inspect structural components for damage, distortion, or deterioration, and for evidence of loose or missing fasteners and cracked welds. Inspect truck equalizer pins for proper lubrication.						
2	Rails and Tracks	Inspect rails, tracks, splices, switches, and end stops for damage, deterioration, visible misalignment, and for evidence of loose, fasteners and cracked welds. Inspect for abnormal wear or other evidence of bridge or trolley misalignment.						
3	Handrails, Walkways, Ladders, and Personnel Safety Guards	Inspect for damage or deterioration, and for evidence of loose or missing fasteners and cracked welds.						
4	Bumpers	Inspect for damage or deterioration, and for evidence of loose or missing fasteners.						
5	Jib Boom Bearings	Inspect rotate bearings for proper lubrication. Rotate boom and inspect for evidence of bearing damage, overheating, and abnormal wear.						
6	Wheels and Axles	Inspect wheels for uneven wear, flat spots, chips, flange wear, or cracks, for evidence of loose or missing fasteners and bearing caps, and for proper lubrication. During operation, inspect for excessive movement between components, improper tracking, overheating, and other evidence of component wear or bearing damage. Listen for abnormal wear.						
7	Shafts and Couplings	Inspect for evidence of damage, misalignment, leaking seals, and loose keys, coupling bolts, and covers. During operation, inspect for vibration, overheating, and other evidence of misaligned, worn, or damaged components or bearings. Listen for abnormal noise.						
	Shafts and Couplings (Hoist Drives)	Disassemble coupling cover (sleeve) and inspect internal components for damage and abnormal wear. Verify coupling alignments are within OEM tolerances (not applicable to NEMA c, d, and p-face motors, or similar configurations). Coupling alignment verifications shall be phased in over the next three years from the date of this publication. <b>After initial verification and inspection, verify alignment and inspect internal coupling components at every sixth annual inspection.</b> Coupling alignment verification data shall be included in the crane's history file.						
8 a	Gearing (Hoist, Rotate, Travel) <b>External Gears</b>	Inspect for damaged or worn gears, for evidence of misalignment or loose keys, and for proper lubrication. During operation, listen for abnormal noise, and inspect for other evidence of possible damage. Inspect for evidence of bearing damage, overheating, and abnormal wear.						

ANNUAL MAINTENANCE INSPECTION SPECIFICATION AND RECORD							
SHEET 2 OF _____							
Crane		Type	Manufacturer		Capacity		
Item No	Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
				S	U	C	NA
8 b	Gearing (Hoist, Rotate, Travel) <b>Internal Gears (Including Clutches)</b>	Inspect gear case for proper lubricant level. Inspect for leaks and for evidence of loose or missing fasteners. Inspect breathers for restrictions. During operation, inspect for vibration, overheating, and other evidence of misaligned, worn, or damaged internal components or bearings. Listen for abnormal noise.					
	Hoist Gears	<p>Additionally, internal gearing for <b>hoists</b> shall be monitored by an oil or vibration analysis program. The oil or vibration analysis shall be performed at least once each certification period with results analyzed by a qualified source and documented and retained in the equipment history file for the life of the component.</p> <p>As an alternative to oil or vibration analysis, internal gears shall be visually inspected for wear or damage and for evidence of misalignment. If all gears can not be visually inspected through inspection ports or by video probe or similar inspection devices, gear cases shall be disassembled for visual inspection. <b>If this alternative is selected, initial inspections shall be phased in over the next three years (from the date of this publication) with subsequent inspections at every tenth annual inspection.</b></p>					
9	Mechanical Load Brakes	<p>Inspect for proper lubrication and level and for leaks. During operation, inspect for chattering, vibration, overheating, or other evidence of misaligned, worn, or damaged internal components. Listen for abnormal noise.</p> <p><b>Disassemble as required to inspect for damage and deterioration of internal components. Disassemblies shall be phased in over the next three years from the date of this publication. After initial disassembly/inspection, disassemble and inspect at every tenth annual inspection.</b></p>					
10	Mechanical Brakes	Inspect system for damage, for evidence of binding, loose, and worn components, and for proper lubrication. Inspect brake linings for wear, and drums for smoothness and for evidence of overheating. Inspect brakes for proper settings and for alignment of brake shoes. During operation, verify proper release, engagement, and stopping action in both directions of motion. Inspect for evidence of overheating.					
11	Hydraulic Brake System	Inspect system for damage, for evidence of binding, loose, and worn components, and for proper lubrication. Inspect brake linings for wear and glazing, and drums for smoothness and for evidence of overheating. Inspect brakes for proper settings and for alignment of brake shoes. Inspect master cylinders for proper hydraulic brake fluid level. Inspect lines for damage, leakage, and evidence of loose connections. During operation, verify proper release, engagement, and stopping action in both directions of motion. Inspect for evidence of overheating.					

ANNUAL MAINTENANCE INSPECTION SPECIFICATION AND RECORD							
SHEET <u>3</u> OF _____							
Crane		Type	Manufacturer		Capacity		
Item No	Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
				S	U	C	NA
12	Air Brake System	Inspect system for damage, for evidence of binding, loose, and worn components, and for proper lubrication. Inspect brake linings and discs for wear and glazing, and drums or rotors for smoothness and for evidence of overheating. Inspect brakes for proper settings and for alignment of shoes and calipers. Inspect air lines for damage and evidence of loose connections. During operation, verify proper release and engagement, and stopping action in both directions of motion. Inspect air lines and air application valves for proper operation and air leaks.					
13 a	Electric Magnetic Brake System ( <b>Shoe and Band Type Brakes</b> )	Inspect system for damage, for evidence of binding, loose, and worn components, and for proper lubrication. Inspect brake linings for wear and glazing, and brake drums for smoothness and for evidence of overheating. Inspect brakes for proper settings and alignment of brake shoes. Inspect wiring for damage or deterioration, and for evidence of loose connections. During operation, verify proper release, engagement, and stopping action in both directions of motion. Inspect for evidence of overheating or other evidence of incomplete brake release.					
13 b	Electric Magnetic Brake System ( <b>Disc Type Brakes</b> )	Inspect brake housings for damage or evidence of loose hardware. Inspect brakes for proper settings. Inspect wiring for damage or deterioration, and for evidence of loose connections. During operation, verify proper release, engagement, and stopping action in both directions of motion. Listen for abnormal noise, and inspect for vibration and overheating.  Disassemble as required to inspect for damaged brake discs, splines, or other internal components, for glazing, and for proper brake lining thickness. For hoists without mechanical load brakes, this shall be done annually. <b>For hoists with mechanical load brakes and for rotate and travel brakes, disassemblies shall be phased in over the next three years from the date of this publication, then at every sixth annual inspection.</b>					
13 c	Electric Magnetic Brake System ( <b>Caliper Brakes on Wire Rope Drums</b> )	Inspect system for damage, for evidence of binding, loose and worn components, and for proper lubrication. Inspect brake linings for wear and glazing, and brake surfaces on drums for smoothness and for evidence of overheating. Inspect brakes for proper settings and alignment of calipers. Inspect wiring for damage or deterioration, and for evidence of loose connections. During operation, inspect for proper release and engagement.					
14	Sheaves	Inspect for abnormally worn or corrugated grooves, flat spots, abnormal play, and broken or cracked flanges. Inspect for evidence of loose or missing fasteners, keepers, and lubrication fittings. Gauge the wire rope grooves of all sheaves. Expose and examine sections of equalizer sheaves and saddles in contact with wire rope and where corrosion may develop because of poor drainage. During operation, verify free movement of all sheaves, and inspect for abnormal play, overheating, and other evidence of bearing or component wear or damage.					

ANNUAL MAINTENANCE INSPECTION SPECIFICATION AND RECORD							
SHEET <u>4</u> OF _____							
Crane		Type	Manufacturer		Capacity		

Item No	Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
				S	U	C	NA
15	Wire Rope Drum and Machinery Foundations	Inspect drums for distortion, cracks, worn grooves, and for evidence of cracked welds and loose or missing fasteners. Inspect pillow block bearings for evidence of loose or missing fasteners. Inspect machinery foundations for damage or deterioration, and for evidence of loose or missing fasteners and cracked welds. During operation, verify that at least two complete wraps of wire rope remain on grooved drums (at least three complete wraps on ungrooved drums) in all operating conditions. Listen for abnormal noise. Inspect for vibration, overheating, and other evidence of misaligned, worn or damaged components or bearings.					
16	Wire Rope, Fastenings, and Terminal Hardware*	Thoroughly inspect entire length of wire rope. The depth and detail of the inspection shall be that necessary to ensure that the entire rope is acceptable with special attention paid to areas of expected wear or damage, and to areas not normally visible to the operator during operation or pre-use inspection. During the inspection, the wire rope shall be payed out as far as possible. For sections that can not be spooled off the drum, visual inspection of the wire rope on the drum is sufficient. Remove wire rope dressing from selected areas subjected to significant wear, exposure, and abuse. Dimensional checks shall be performed at several places over the length of the rope. Expose and examine sections in contact with equalizer sheaves and saddles or where corrosion may develop because of poor drainage. Lubricate areas after inspection. Inspect sockets, swivels, trunnions, and connections for undue looseness, wear, cracks, corrosion, or other damage. Undue looseness in poured sockets is defined as looseness or evidence of slippage of wires in the securing material, evidence of deterioration of the securing material, looseness of wire rope strands or wires adjacent to the socket or any looseness resulting from cracks or other defects in the basket. Evidence of looseness between the securing material and the basket resulting solely from seating of the material in the rope for defects noted below and proper lubrication. Drum end fittings need only be disconnected or disassembled when experience or visible indications deem it necessary. The Federal Specification for wire rope is RR-W-410.					
17	Load Chains and Sprockets	Inspect for damage or deterioration, and for evidence of loose or missing fasteners and cracked welds. Measure for increase in chain length. During operation, listen for abnormal noise. Inspect for overheating and other evidence of worn or damaged components and bearings.					
18	Hoist Blocks and Hooks (Including Hoist Mounting Hooks)	Inspect hoist blocks, cheek plates, swivels, trunnions, and lubrication fittings for damage or deterioration, cleanliness, freedom of movement, and for evidence of loose or missing fasteners. Inspect hooks and mousing devices for damage. Inspect drip pans and gaskets for damage, proper clearance, and for evidence of loose or missing fasteners. Inspect for evidence of bearing damage, overheating, and abnormal wear. See appendix E for further inspection and test of hooks.					

\* See next page for wire rope rejection criteria.

Wire Rope Rejection Criteria. Remove damaged portions (or replace entire length, if necessary) if any of the following are found:

1. Kinked, Birdcaged, Doglegged, or Crushed Sections. Kinked, birdcaged, doglegged, or crushed rope in straight runs where the core is missing or protrudes through or between strands, or where the rope does not fit properly in sheave or drum grooves. (This does not apply to runs around eyes, thimbles, shackles).
2. Flattened Sections. Flattened sections where the diameter across the flat is less than 5/6 of nominal diameter. (This does not apply to runs around eyes, thimbles, and shackles.)
3. Wear. Wear exceeding one-third the original diameter of outside individual wires.
4. Broken Wires. Six randomly distributed broken wires in one lay, or three broken wires in one strand in one lay. One outer wire broken at the point of contact with the core of the rope that has worked its way out of the rope structure and protrudes or loops out from the rope structure ("valley break"). For end connections, two broken wires within one lay length of the end connection.
5. Loss in Diameter. Reduction from nominal diameter of:
  - 1/64" for diameters up to and including 5/16"
  - 1/32" for diameters 3/8" to and including 1/2"
  - 3/64" for diameters 9/16" to and including 3/4"
  - 1/16" for diameters 7/8" to and including 1 1/8"
  - 3/32" for diameters 1 1/4" to and including 1 1/2"
  - 10 percent for diameters over 1 1/2"
6. High Strand. High strand where the height exceeds 10 percent of the nominal diameter.
7. Corrosion. Corrosion such that significant pitting occurs on the surfaces of outside wires. Minor surface roughness on outside wires is acceptable provided no significant pitting occurs and the rope is not corroded internally. Significant pitting is defined as pitting that can not be removed by abrasive removal of less than 1/3 of the original diameter of individual outside wires.
8. Heat Damage. Evidence of heat damage from any cause.
9. Accumulation of Defects. An accumulation of defects that in the judgment of the inspector creates an unsafe condition.
10. Splices. Wire rope shall not contain splices.

ANNUAL MAINTENANCE INSPECTION SPECIFICATION AND RECORD							
SHEET <u>5</u> OF <u>      </u>							
Crane		Type	Manufacturer	Capacity			
Item No	Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
				S	U	C	NA
19	Insulated Link	Inspect link surface for conductive contaminants such as graphite, grease, metallic particles, or rust streaks. Inspect for damage. See appendix E, for additional inspection and testing requirements for insulated links.					
20	Air Operating System	Inspect motors, valves, filters, limit switches, water separators, cylinders, lines, regulators, and gauges for missing parts, damage, and evidence of loose or missing fasteners. Inspect for proper lubrication. Verify proper operation and inspect system for leaks.					
21	Main Disconnect Switch	Inspect for broken or missing support or operating components and for evidence of overheating, and loose connections. Inspect fuses for proper rating and type. Inspect wiring for damage or deterioration, and for evidence of loose connections. Verify proper operation.					
22	Runway and Trolley Electrification (Collector Bar, Festoon, and Cable Track Systems)	Inspect system and associated wiring for damage or deterioration, and for evidence of loose fasteners or connections. Verify proper operation.					
23	Cable Reels	Inspect reel assembly and associated wiring for damage or deterioration, and for evidence of loose fasteners or connections. Verify proper operation.					
24	Electrical Hardware and General Lighting	Inspect conduits, raceways, and junction boxes for damage or deterioration, and for evidence of loose connections. Inspect light fixtures and associated wiring for damage or deterioration, and for evidence of loose connections. Verify operation of lights.					
25	Control Panels, Relays, Coils, Transfer and Disconnect Switches, and Conductors	Inspect contacts for proper alignment, pitting, and evidence of excess heating and arcing. Inspect coil and contact leads, and shunts for insulation breakdown and evidence of overheating. Inspect wiring for damage, deterioration, and evidence of loose connections. Inspect fuses for proper rating and type, and for evidence of loose connections and overheating. Inspect overload devices for evidence of loose connections and overheating. Inspect circuit breakers and switches for cleanliness and proper operation. Inspect panel boards and arc shields for cracks, evidence of loose or missing fasteners, cleanliness, and moisture. Manually operate relays, switches, contactors, and interlocks and verify that all moving parts operate freely without binding or excessive play. Inspect enclosures for cleanliness or damage, and for evidence of loose or missing fasteners and gaskets. During operation, verify proper operation of panel indicating lights and contactor sequence. Verify proper operation of environmental controls (e.g., strip heaters, cooling fans).					
26	Electronic (Solid State) Drive Control Systems	Inspect wiring for damage or deterioration, and for evidence of loose connections. Visually inspect (without removing) components for evidence of damage or overheating. Verify that the drive is dry and free of dust, dirt, and debris.					

ANNUAL MAINTENANCE INSPECTION SPECIFICATION AND RECORD							
SHEET 6 OF							
Crane		Type	Manufacturer	Capacity			
Item No	Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
				S	U	C	NA
27	Controllers	Inspect cab and floor operated controllers for broken or loose springs, cracked or loose operating levers or push buttons, and pitted or burned contact points and segments. Inspect for broken segment dividers and insulators, proper contact pressure, excessive arcing, and worn or loose cams, pins, rollers, or chains, and for evidence of loose or missing fasteners. Inspect wiring for damage or deterioration, and for evidence of loose connections. Inspect pendant cable for proper securing hardware. Inspect for identifying label plates and direction indicators. Inspect such parts as bearings, star wheels, and pawls for proper lubrication. During operation, verify proper sequencing of speed points and operation of indicating lights, and deadman devices. Verify proper spring return and neutral latching.					
28	Resistors	Inspect resistors, insulators, and brackets for damage, distortion, or deterioration, and for evidence of loose or missing fasteners. Inspect wiring for damage or deterioration, and for evidence of loose connections. Inspect for evidence of overheating.					
29	Electric Motors (Hoist, Rotate, Travel)	Inspect motors and associated wiring for cleanliness, damage, or deterioration, and for evidence of loose connections. Inspect for proper lubrication. Inspect slip rings for damage and commutators for evidence of destructive commutation. Inspect brushes for proper brush tension and length. Inspect insulation for deterioration and evidence of overheating. During operation, inspect for any abnormal vibration, overheating, or other evidence of misaligned, worn, or damaged internal components or bearings. Verify proper operation of environmental controls (e.g., strip heaters, cooling fans).					
30	Eddy Current Brakes	Inspect for cleanliness, damage, or deterioration, and for evidence of loose connections. Inspect for proper lubrication. Inspect wiring for damage or deterioration, and for evidence of loose connections. During operation, listen for any abnormal noise. Inspect for vibration, overheating, or other evidence of misaligned, worn, or damaged internal components or bearings.					
31	Limit and Bypass Switches	Remove covers and inspect electrical and mechanical components for damage or deterioration, and for evidence of loose connections. Inspect enclosures for evidence of moisture and arcing. Inspect wiring for damage or deterioration, and for evidence of loose connections. Inspect drive and actuating components for damage, deterioration, and proper lubrication, and for evidence of loose connections. During operation, verify proper functioning of limit switches, indicator lights, settings, and bypass switches.					



[illegible]

Crane	Type	Manufacturer	Capacity
-------	------	--------------	----------

Item No	Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition			
				S	U	C	NA
32	Operator's Cab	Inspect for leaks, broken glass, deterioration, and cleanliness. Inspect louvers, doors, windows, windshield wipers, heaters, air conditioners, operator's chair, and communication equipment for proper operation.					
33	Warning Devices (Horns, Bells, Lights, etc.)	Inspect components and associated wiring for damage or deterioration, and for evidence of loose connections. During operation, verify proper functioning of devices.					
34	Capacity Signs and Load Ratings	Inspect capacity signs and brackets for damage or deterioration, and for evidence of loose or missing fasteners. Verify that load ratings are correct, are noted in pounds, and are posted in view of operator and riggers. In those instances where two or more hoists may be arranged on a single beam, such as an interlocking monorail system, verify that the capacity of the supporting beam is clearly marked to preclude an overload condition.					
35	Fire Extinguishers	Ensure inspection is current.					

[illegible]

ANNUAL MAINTENANCE INSPECTION SPECIFICATION AND RECORD								
SHEET _____ OF _____								
Crane		Type	Manufacturer			Capacity		
Item No	Items to be Inspected	Maintenance Inspection Specification	System Inspected	Condition				
				S	U	C	NA	
<b>REMARKS:</b>								

[illegible]

SHEET \_\_\_\_\_ OF \_\_\_\_\_

**NOTICE TO INSPECTOR :** Fill in applicable data as recommended by the brake OEM. Ensure that the brake is adjusted within specifications shown. List measurements for all brakes. List repair document number and corrective action required under remarks.

[illegible][illegible]

## APPENDIX E - CRANE TEST PROCEDURES

### 1 General Instructions

1.1 Weight handling equipment shall be tested according to the appropriate paragraphs of these procedures depending on the type of equipment. The sequence of testing shall be at the option of the test director except that the no-load test shall be performed first. The nominal test load shall be 125 percent of rated capacity (110 percent for mobile cranes, including crawler cranes), unless otherwise limited by OEM's specifications. Because of the various makes and models of cranes in the Navy inventory, it is not possible to include specific tests for each individual crane or component. However, activities shall assure that all components and features that affect load bearing, load control, or operational safety are properly tested and documented on the certification form.

1.2 All test results shall be entered on the Certification of Load Test and Condition Inspection (figure 3-1) for applicable items according to crane type. Appropriate entries shall be recorded in each space. If a space does not pertain to the particular crane being tested, the entry shall be recorded as Not Applicable (NA).

1.3 The inspector shall assist the test director by checking during the load test for improper operation or poor condition of safety devices, electrical components, mechanical equipment, and structural assemblies. Observed defects critical to continued testing shall be reported immediately to the test director who shall suspend testing until the deficiency is corrected.

### 1.4 Inspection and Testing of Hooks

Note: These criteria apply to both the load hook and the hoist mounting hook, if used. If disassembly of the hoist mounting hook is not possible, then the nondestructive test noted in paragraph 1.4.3 shall be performed on the accessible portions of the assembled hook.

1.4.1 Annual Visual Inspection. Hooks shall be annually inspected for evidence of wear in swivels and pins, and for proper operation and condition of safety latches. Inspect for corrosion, deformation, and wear. Inspect for such other conditions as nicks, cracks, or gouges. All cracks shall be removed. Other conditions shall be removed or, for questionable conditions, referred to the activity engineering organization for resolution. Removal of defects shall be by grinding only. Correction of defects by use of heat or welding is not permitted. Where the hook is visibly bent or twisted, it shall be discarded. No attempt shall be made to straighten bent or twisted hooks. Grinding, if required, shall follow the contour of the hook, blending with a maximum 1:3 taper. Removal of cracks shall be verified by nondestructive test as described in paragraph 1.4.3. Removal of defects as

specified will not require load test and recertification. Where normal wear or removal of defects results in a reduction of 10 percent or more of the OEM's nominal dimension (or as recommended by the OEM if more restrictive), the hook shall be discarded. Hooks shall not be painted or plated.

1.4.2 Hook Throat Spread. Hooks shall be measured for hook throat spread before and after load test. A throat dimension base measurement shall be established by installing two tram points and measuring the distance between these tram points. This base dimension shall be retained in the equipment history file for the life of the hook. The distance between tram points shall be measured before and after load test. Hooks showing an increase in the throat opening by more than five percent from the base measurement shall be discarded.

1.4.3 Hook Disassembly, Inspection, and Nondestructive Test (NDT). In conjunction with the hook NDT, the hook, retaining nut, and bearings shall be disassembled from the block and thoroughly inspected. The hook and retaining nut shall be visually inspected for thread wear and corrosion damage. Block bearing plates shall be visually inspected for cracks, wear, or other damage. Bearings shall be inspected for evidence of unusual wear and free rotation. All components shall be lubricated as required during assembly.

The entire hook and retaining nut shall be NDT'd for defects as follows. NDT shall be magnetic particle method in accordance with ASTM E1444 or NAVSEA Technical Publication T9074-AS-GIB-010/271. If magnetic particle testing can not be performed on surfaces inside holes, those surfaces shall be visually inspected to the maximum extent practical. For hooks of non-magnetic material, NDT shall be liquid penetrant method in accordance with ASTM E 1417 or T9074-AS-GIB-010/271. Acceptance criterion shall be no linear indications greater than 1/16 inch. NDT shall be performed prior to load tests. An NDT of a crane hook is valid for six annual certification periods.

1.4.4 Hook Identification. Each hook and nut shall be uniquely identified with some type of permanent marking in order to provide a positive traceability to the NDT report. Where possible, the marking shall be visible with the hook installed on the crane.

## 1.5 Inspection and Testing of Insulated Links

1.5.1 General Inspection. Ensure link surface is clean and that no conductive material exists on the outer surface of the link such as graphite grease, metallic particles, or rust streaks. Check for obvious mechanical damage. Minor nicks, cuts, tears or abrasions are acceptable on the outer cover.

1.5.2 Link Identification. Each link shall be uniquely identified with some type of permanent marking to provide positive traceability to its base tram measurement and NDT report.

1.5.3 Dimensional Inspection. Establish tram points across the dielectric structure of the link and measure base tram reading before initial installation of the link. Measure the distance between the tram points before and after the load test. Compare the measurement to the base tram measurement. Reject link if measurement exceeds the base tram measurement by more than one percent.

1.5.4 Link Disassembly, and Nondestructive Test (NDT). Disassemble the link, connecting stud(s), hook, and nut in conjunction with hook disassembly. Perform a visual inspection of the metal link ends for thread damage, wear, and corrosion. Apply a temporary sealing tape over the threaded holes to prevent moisture entry into the link during the disassembled period. Perform a magnetic particle inspection of the stud and nut in accordance with. ASTM E 1444 or NAVSEA Technical Publication T9074-AS-GIB-010/271. Acceptance criterion shall be no cracks.

1.5.5 Electrical Test. After reassembly of the link on the crane, and at every annual certification, apply a minimum of 10,000 volts across the insulated link and measure leakage current. Leakage shall not exceed 70 microamps per 1,000 volts.

## 1.6 Prerequisites to Load Testing

1.6.1 Test Area. A safe test area shall be selected and all traffic and unauthorized personnel and equipment shall be cleared from test area. This test area shall be roped off or otherwise secured to prevent entry of unauthorized personnel and equipment.

1.6.2 Rigging. Rigging gear shall conform to the requirements of section 14.

1.6.3 Crane Track. Crane track to be used during crane load tests shall be certified per NAVFACINST 11230.1. If the crane load test is also the load test for track certification, the track shall be given a control inspection prior to load testing and shall have no visible critical or catastrophic defects as defined by NAVFACINST 11230.1.

1.7 Precautions During Load Testing. Prescribed tests are overload tests and extreme caution shall be observed at all times. Personnel shall remain clear of suspended loads and areas where they could be struck in the event of boom failure. The test load shall be raised only to a height sufficient to perform the test.

## 2 Portal and Floating Cranes

2.1 No-Load Test. (For Dravo 60-ton floating cranes, see additional requirements of paragraph 2.1.8.)

2.1.1 Hoist Operating and Limit Switch Test. Accomplish for all hooks as follows:

Note: Position boom as required.

- a. Controller Points. Raise the respective load hook through all controller points stopping below upper limit switch (where applicable).
- b. Upper Limit Switch. Raise load hook slowly into the upper limit switch to establish that limit switch is operating properly.
- c. Upper Limit Switch Bypass. Raise hook slowly through the upper limit switch by using limit switch bypass (where applicable).
- d. Backup Limit Switch. Raise hook slowly into backup limit switch (where applicable).
- e. Lowering Control Points. Lower load hook below the upper limit switch using all the lowering control points.
- f. Lower Limit Switch. Lower load hook slowly into lower limit switch to establish that limit switch is operating properly.

2.1.1.1 Emergency Brakes on Wire Rope Drums (Shaft Failure Detection System). Simulate a system fault by disconnecting the motor encoder signal while lowering the hoist at slow speed. Verify that the brake applies and that the hoist control is disabled in each direction. Reconnect the encoder after the test. Repeat this test using the drum encoder.

2.1.2 Boom. Boom operating and limit switch test shall be accomplished as follows:

- a. Raise Boom. Raise boom through all controller points, stopping below upper limit switch.
- b. Upper Limit Switch. Raise boom slowly into the upper limit switch.
- c. Limit Switch Bypass. Lower boom below limit switch and raise boom slowly through limit switch by using limit switch bypass (where applicable).
- d. Backup Limit Switch. Raise boom slowly into backup limit switch (where applicable).
- e. Controller Points. Lower boom through all controller points, stopping above boom lower limit switch (where applicable).
- f. Lower Limit Switch. Lower the boom slowly into the boom lower limit switch (where applicable).



g. Limit Switch Bypass. Raise boom above the lower limit switch and lower boom through limit switch by using limit switch bypass (where applicable).

2.1.2.1 Emergency Brake on Wire Rope Drum (Shaft Failure Detection System). With the boom at approximately mid-radius, simulate a system fault by disconnecting the motor encoder signal while lowering the boom hoist at slow speed. Verify that the brake applies and that the hoist control is disabled in each direction. Reconnect the encoder after the test. Repeat this test with the drum encoder.

2.1.2.2 Automatic Boom Brake (Where applicable, i.e., Washington Crane Company). This brake is to prevent a "free fall" boom in case of failure of clutch, boom hoist control, and foot brake. Raise the boom to near the minimum radius. Set the brake firmly. Release the mechanical boom dog. Release the boom clutch by operating the boom hoist control. Slowly release the foot brake to the free position and ensure the automatic brake applies.

2.1.3 Luffing Drum Pawl. Check luffing drum pawl for proper engagement in ratchet gear and with limit switch. Check the luffing drum pawl limit switch (if installed) for proper operation. Check that boom hoist motor shuts off, brake engages, and indicator lights operate correctly (where applicable).

2.1.4 Rotation Lock (Wind Lock, Spud Lock). Engage rotation lock and inspect to ensure full engagement. Check that rotation lock limit switches (clockwise and counterclockwise) prevent engaging rotation drive (where applicable). Operate rotation lock bypass (clockwise and counterclockwise) to ensure proper operation (where applicable).

CAUTION: Use only enough power to check operation of bypass.

Note: Applicable switches may be operated manually to check for correct operation in lieu of engaging rotation lock.

CAUTION: Ensure rotation lock is disengaged prior to continuing test.

2.1.5 Rotation. Rotate clockwise and counterclockwise with boom at minimum radius.

2.1.6 Travel. Conduct travel test in accordance with paragraph 2.2.3.I, except without load.

2.1.7 Deadman Controls. Test all deadman controls (where installed). Start each motion. Release deadman control. Motion shall stop.

2.1.8 Additional No-load Tests for Dravo 60-Ton Floating Cranes. (Perform these tests prior to the other no-load tests). These tests verify the proper operability of the back up (emergency) brake system in case of failure of the pneumatic clutch system.

- a. With all drum pawls engaged, engage and disengage each hoist (boom, main, auxiliary) clutch separately observing the corresponding hoist drum band brake to ensure the brake fully releases and sets. Also ensure that only the brake for the specific drum being clutched is affected.
- b. (If the crane is equipped with drain valves adjacent to the rotor seals on the hoist drums, perform the following test.) With the drum pawls engaged, engage the main hoist clutch and, without setting the foot brake, manually open the valve adjacent to the rotor seal at the main hoist drum. The drum band brake should set. Repeat this step with the boom and auxiliary hoists to verify setting of the drum band brakes.
- c. With the clutch engaged, operate the corresponding foot brake for each hoist to ensure proper operation.
- d. Engage the main hoist clutch and disengage the drum pawl. Lower the hook using first or second speed point, then apply the foot brake. This should stop the lowering motion. Repeat this step to verify operation of boom and auxiliary hoist foot brakes.
- e. Engage the main hoist clutch and disengage the drum pawl. Lower the hook in the first or second speed point, then activate the emergency stop (air dump) valve located in the operator's cab. This should stop the lowering motion. Repeat this step to verify operation of the boom and auxiliary hoist brakes.
- f. Verify satisfactory operation of hoist electric-air pressure interlock limit switch by bleeding air pressure to less than 75 psi. The hoist motor controller should not operate.

Note: This can be demonstrated in the operator's cab.

- g. Verify satisfactory operation of the boom clutch interlock limit switch by activating the main or auxiliary hoist block upper limit switch. Engage boom hoist clutch. Boom should not lower. This test shall be performed with both the main and auxiliary hoists.

2.2 Load Test. The following is considered to be the most time and cost effective sequence of performing the required tests. Activities may vary the sequence as required. (For Dravo 60-ton floating cranes, see additional requirements of paragraph 2.4.)

2.2.1 Load Test for Variable Rated Cranes. All cranes shall be tested in accordance with paragraphs 2.2.2 through 2.2.5. The test load for the main and boom hoist tests will be based on the maximum rated capacity of the crane at its maximum radius. In addition, variable rated cranes shall be tested in accordance with paragraph 2.3 with the appropriate test load at the maximum radius of the crane.

2.2.2 Stability Test. (For balanced deck design cranes only). During static and dynamic configurations with test load (paragraphs 2.2.3 a, b, d, and i following) observe for clearance between the rollers and the upper and lower roller rails. If no clearance is observed, stability is satisfactory. If clearance is observed, perform the following:

- a. The center pin nut clearance with the steadiment shall be set per crane OEM's specification.
- b. In the static mode, position the boom parallel and perpendicular to the track (for floating cranes, position the boom parallel and perpendicular to the athwartships centerline of barge) and examine roller path for clearance.
- c. If the loading conditions do not result in contact of the steadiment with the center pin nut, then the activity engineering organization shall evaluate for wear or structural defects. If the mechanical roller and structural assembly condition is determined to be unsatisfactory, then the crane shall be removed from service and corrective action initiated. Should the structural and mechanical roller assembly condition be determined satisfactory, then a record of the roller clearance data for various quadrants shall be recorded and incorporated in the equipment history file as a "crane roller clearance data standard of acceptance" and shall be utilized during future periodic testing. It is not necessary to repeat these roller clearance data readings on an annual basis unless there is a noticeable change with the clearance data or a major change did occur for this crane (e.g., alteration affecting crane stability).
- d. If either loading condition noted in paragraph b. results in contact of steadiment with the center pin nut, indicating a possible lack of crane stability, the crane shall be removed from service and a request for an engineering evaluation shall be forwarded to the Navy Crane Center.

2.2.3 Main and Boom Hoists, Rotate, and Travel. For the main hoist, rotate, and travel tests, the test load shall be the maximum test load for the crane. For the boom hoist tests, the test load and radius shall be such as to produce the maximum drum line pull. This may require a different test load than for the main hoist test.

- a. Hoist and Boom Static Test. Raise test load to clear ground and hold for 10 minutes with boom at the maximum radius for the load lifted. Rotate load and hook

to check bearing operation. Do not engage boom or load hoist pawl (dog). Observe lowering of the test load, which may indicate malfunction of boom or hoisting components or holding brakes. If either hoist has primary and secondary holding brakes (i.e., where each brake is designed to individually hold the load), then the following tests shall be performed, for each applicable hoist, in lieu of the single 10 minute holding test noted above:

(1) Raise the test load approximately one foot and hold open one of the brakes. Hold the load for 10 minutes and observe for lowering of the load, which may indicate malfunction of hoisting components or brake.

(2) Reset the brake held open and open the first brake tested. Again hold the load for 10 minutes observing for malfunctions. Reset the brake and verify the proper timing sequence of the setting of the brakes.

(3) If the brakes are designed to individually hold only the rated capacity (and not 125 percent), then the tests in subparagraphs (1) and (2) may be performed with a test load of 100 percent of rated capacity and the certification shall be so noted. However, the brakes, acting together, shall demonstrate the ability to hold a 125 percent test load for a 10 minute period.

b. Hoist Dynamic Test. Raise and lower the test load on each hoist controller point and visually observe smooth control between points. Stop the load during hoisting and lowering to verify the brake stops and holds the load. Check for proper operation of dynamic braking.

Note: Dynamic braking will not stop motion.

c. Wire Rope Test. During either the static or dynamic test, where possible, test the entire working length of the wire rope.

d. Boom Hoist Operating Test. Starting from maximum radius and with the load attached, raise the boom to minimum radius using all boom controller points. Lower the boom through all boom controller points. Visually observe for smooth motion between boom controller points. Stop the hoist during hoisting and lowering to verify the brake stops and holds the load. Check for proper operation of dynamic braking.

e. Hoist Foot Brake Test (Hydraulic or Mechanical). Lower test load, using first control point, then apply the foot brake. This shall stop the lowering motion of the test load.

CAUTION: Not applicable to load-sensitive reactor type hoist controls.

f. Boom Foot Brake Test (Hydraulic or Mechanical). Start with boom near maximum radius and with the test load approximately two feet from the ground surface. Lower test load using the first control point of the boom hoist. Apply the foot brake. This shall stop the lowering motion of the boom and test load.

CAUTION: Not applicable to load-sensitive reactor type hoist controls.

g. Hoist Loss of Power (Panic Test). This test is designed to test the reaction of a hoisting unit in the event of power failure during a lift. Hoist the test load approximately 10 feet above the ground. Lower test load at slow speed and, with the controller in the slow lowering position, disconnect the main power source by pushing the main power stop button or buttons, then return the controller to the neutral position. The test load shall stop lowering when the controller is placed in the neutral position.

CAUTION: This test is not to be performed on cranes that do not have powered down hoists. Additionally, the activity engineering organization shall review the system circuitry for cranes with electronic controls to assure that this test can be performed safely without damaging the control system. For assistance in the circuitry review, contact the Navy Crane Center.

h. Boom Loss of Power (Panic Test). This test is designed to test the reaction of the boom hoist in the event of power failure during a lift. Hoist the load approximately 10 feet above the ground with the boom near maximum radius. Lower the boom at slow speed, disconnect the main power source by pushing the main power stop button, then return the controller to the neutral position. The boom shall stop lowering when the controller is placed in the neutral position.

CAUTION: This test is not to be performed on cranes that do not have powered down hoists. Additionally, the activity engineering organization shall review the system circuitry for cranes with electronic controls to assure that this test can be performed safely without damaging the control system. For assistance in the circuitry review, contact the Navy Crane Center.

i. Rotation. Start with boom at maximum radius, rotate left and right 360 degrees. However, if test area will not permit, two complete revolutions of the swing pinion is considered adequate. Test loads for floating cranes can be rotated over the water.

Note: Caution shall be exercised when rotating loads over water. Ensure during the initial load test the floating crane has adequate draft readings per design data. When testing a floating crane, monitor the radius to ensure the allowable radius is not exceeded due to listing of the barge.

j. Rotate Brake Test. Rotate left and right at slow speed and apply brakes. The brakes shall demonstrate ability to stop the rotating motion in a smooth, positive manner. For floating cranes, where space permits, the parking brake shall demonstrate its ability to prevent rotation when applied with the boom at 45 degrees from the centerline of the barge. Hold for 10 minutes with brake applied.

k. Travel Test (Boom over side). This test shall be conducted with the boom at maximum allowable radius positioned 90 degrees with the crane rails and boom dog engaged. With the test load raised to clear the ground and with the boom dog engaged, travel in one direction a minimum of 50 feet. Repeat with boom on opposite side where conditions permit.

CAUTION: Operate crane at very slow travel speed. Ensure track and supporting foundation are sound and free of any obstruction over test travel area. (Not applicable to floating cranes).

l. Travel Test (Boom over front). With the test load raised to clear the ground and with the boom centered between the crane rails and boom dog engaged, travel in one direction a minimum of 50 feet. Operate the controller through all controller points. The crane shall accelerate and decelerate smoothly. All motions shall be smooth and positive. (Not applicable to floating cranes). Repeat with the boom rotated over the opposite end.

#### 2.2.3.1 Emergency Brake on Wire Rope Drum (Shaft Failure Detection System)

a. Static Test. Test the ability of the hoist caliper disc brake to hold the test load after testing the other holding brake(s). Raise the test load approximately one foot off the ground. Do not engage the boom hoist pawl (if applicable). Depress the emergency stop pushbutton to disconnect the main power source and set the brakes. Manually release all brakes except the caliper disc brake. Hold the load for 10 minutes with the caliper disc brake. Observe for lowering of the load, which may indicate a malfunction of the hoisting components or the brake. Reset the other holding brake(s) to the applied condition. Energize the main power source. Verify that the load is held by the holding brake(s). Operate the hoist in each direction and verify proper operation of all controls and brakes.

b. Dynamic Test. Perform this test with a 100 percent test load. Raise the load to a sufficient height to perform the following test. Lower the load at a slow speed (first speed point or minimum speed). Disable all hoist brakes except the wire rope drum brake. Depress the emergency stop pushbutton to set the drum brake. The brake shall stop the load. Reset all brakes. (CAUTION: Station appropriately trained personnel at each disabled hoist brake in case of failure of the drum brake to stop the load. These personnel shall be in constant contact with the load test director and prepared to safely engage the hoist brakes when directed.)



#### 2.2.4 Auxiliary Hoist. Maximum test load for the hoist.

- a. Static Test. Raise test load to clear ground and hold for 10 minutes without hoist pawl (dog) engaged. Rotate load and hook to check bearing operation. Observe for lowering of the load, which may occur, that may indicate malfunction of hoisting components or holding brakes. If the hoist has primary and secondary holding brakes, then the tests noted in subparagraphs 2.2.3.a (1), (2) and or (3), shall be performed in lieu of the 10 minute holding test noted above.
- b. Dynamic Test. Raise and lower test load on each controller point and visually observe smooth control between points. Stop the load during hoisting and lowering to verify the brake stops and holds the load. Check for proper operation of dynamic braking.
- c. Wire Rope Test. During either the static or dynamic test, where possible, test the entire working length of wire rope.
- d. Foot Brake Test (Hydraulic or Mechanical). Lower test load using first control point, then apply the foot brake. This shall stop the lowering motion of the test load.

CAUTION: Not applicable to load-sensitive reactor type hoist controls.

- e. Loss of Power (Panic Test). This test is designed to test the reaction of the hoisting unit in the event of power failure during a lift. Hoist the test load approximately 10 feet above the ground. Lower test load at slow speed and with the controller in the slow lowering position, disconnect the main power source by pushing the main power stop button or buttons, then return the controller to the neutral position. The test load shall stop lowering when the controller is placed in the neutral position.

CAUTION: This test shall not be performed on cranes that do not have powered down hoists. Additionally, the activity engineering organization shall review the system circuitry for cranes with electronic controls to assure that this test can be performed safely without damaging the control system. For assistance in the circuitry review, contact the Navy Crane Center.

##### 2.2.4.1 Emergency Brake on Wire Rope Drum (Shaft Failure Detection System)

- a. Static Test. Test the ability of the hoist caliper disc brake to hold the test load after testing the other holding brake(s). Raise the test load approximately one foot off the ground. Do not engage the boom hoist pawl (if applicable). Depress the emergency stop pushbutton to disconnect the main power source and set the



brakes. Manually release all brakes except the caliper disc brake. Hold the load for 10 minutes with the caliper disc brake. Observe for lowering of the load, which may indicate a malfunction of the hoisting components or the brake. Reset the other holding brake(s) to the applied condition. Energize the main power source. Verify that the load is held by the holding brake(s). Operate the hoist in each direction and verify proper operation of all controls and brakes.

b. Dynamic Test. Perform this test with a 100 percent test load. Raise the load to a sufficient height to perform the following test. Lower the load at a slow speed (first speed point or minimum speed). Disable all hoist brakes except the wire rope drum brake. Depress the emergency stop pushbutton to set the drum brake. The brake shall stop the load. Reset all brakes. (CAUTION: Station appropriately trained personnel at each disabled hoist brake in case of failure of the drum brake to stop the load. These personnel shall be in constant contact with the load test director and prepared to safely engage the hoist brakes when directed.)

#### 2.2.5 Whip Hoist. Maximum test load for the hoist.

a. Static Test. Raise test load to clear ground and hold for 10 minutes. Rotate load and hook to check operation of bearing. Observe for lowering of the load, which may indicate malfunction of hoisting components or holding brakes. If the hoist has primary and secondary holding brakes, the tests noted in subparagraphs 2.2.3.a.(1), (2), and/or (3) shall be performed in lieu of the 10 minute holding test noted above.

b. Dynamic Test. Raise and lower test load on each controller point and visually observe smooth control between points. Stop the load during hoisting and lowering to verify the brake stops and holds the load. Check for proper operation of dynamic braking.

c. Wire Rope Test. During either the static or dynamic test, where possible, test the entire working length of the wire rope.

d. Foot Brake Test (Hydraulic or Mechanical). Lower test load using first control point, then apply the foot brake. This shall stop the lowering motion of the test load.

CAUTION: Not applicable to load-sensitive reactor type hoist controls.

e. Loss of Power (Panic Test). This test is designed to test the reaction of a hoisting unit in the event of power failure during a lift. Hoist the test load approximately 10 feet above the ground. Lower test load at slow speed and, with the controller in the slow lowering position, disconnect the main power source by pushing the main power stop button, then return the controller to the neutral

position. The test load shall stop lowering when the controller is placed in the neutral position.

**CAUTION:** This test shall not be performed on cranes that do not have powered down load hoists. Additionally, the activity engineering organization shall review the system circuitry for cranes with electronic controls to assure that this test can be performed safely without damaging the control system. For assistance in the review, contact the Navy Crane Center.

#### 2.2.5.1 Emergency Brake on Wire Rope Drum (Shaft Failure Detection System)

a. Static Test. Test the ability of the hoist caliper disc brake to hold the test load after testing the other holding brake(s). Raise the test load approximately one foot off the ground. Do not engage the boom hoist pawl (if applicable). Depress the emergency stop pushbutton to disconnect the main power source and set the brakes. Manually release all brakes except the caliper disc brake. Hold the load for 10 minutes with the caliper disc brake. Observe for lowering of the load, which may indicate a malfunction of the hoisting components or the brake. Reset the other holding brake(s) to the applied condition. Energize the main power source. Verify that the load is held by the holding brake(s). Operate the hoist in each direction and verify proper operation of all controls and brakes.

b. Dynamic Test. Perform this test with a 100 percent test load. Raise the load to a sufficient height to perform the following test. Lower the load at a slow speed (first speed point or minimum speed). Disable all hoist brakes except the wire rope drum brake. Depress the emergency stop pushbutton to set the drum brake. The brake shall stop the load. Reset all brakes. (CAUTION: Station appropriately trained personnel at each disabled hoist brake in case of failure of the drum brake to stop the load. These personnel shall be in constant contact with the load test director and prepared to safely engage the hoist brakes when directed.)

2.3 Variable Rated Load Test. In addition to the tests prescribed in paragraph 2.2, variable rated cranes shall be tested with the appropriate test load at the maximum radius of the crane on the main hoist as follows:

2.3.1 Stability Test. (For balanced deck design cranes only). During paragraphs 2.3.2, 2.3.3, and 2.3.7 tests, observe for clearance between the rollers and the upper and lower roller rails. If no clearance is observed, stability is satisfactory. If clearance is observed perform the tests and take the necessary actions noted in paragraphs 2.2.2.a through d.

2.3.2 Static Test. Raise test load to clear ground and hold for 10 minutes with boom at maximum radius. Do not engage boom or load hoist pawl (dog). Observe for lowering of the load, which may indicate malfunction of hoisting components or brakes.

2.3.3 Dynamic Test. Raise and lower test load on each controller point and visually observe smooth control between points. Stop the load during hoisting and lowering to verify the brake stops and holds the load.

2.3.4 Boom Hoist Operating Test. Starting from maximum radius and with the load attached, raise the boom to the maximum radius for the next higher load using all controller points. Lower the boom through all controller points. Visually observe for smooth motion between controller points. Stop the hoist during hoisting and lowering to verify the brake stops and holds the load.

2.3.5 Boom Foot Brake Test (Hydraulic or Mechanical). Start with boom near maximum radius, and with the test load approximately two feet from the ground surface, lower test load, using first control point of the boom hoist. Apply the foot brake. This shall stop the lowering motion of the boom and test load.

CAUTION: Not applicable to load-sensitive reactor type hoist controls.

2.3.6 Automatic Boom Brake (Where applicable, i.e., Washington Crane Company). This brake is to prevent a "free fall" boom in case of failure of clutch, boom hoist control, and foot brake. With the test load approximately four inches above the ground, set the brake firmly. Release the mechanical boom dog. Release the boom clutch by operating the boom hoist control. Slowly release the foot brake to the free position. Hold the test load with automatic brake for five minutes then lower test load by applying the boom hoist clutch and lowering with the controller operation.

2.3.7 Rotation. Start with boom at maximum radius, rotate left and right 360 degrees. However, if test area will not permit, two complete revolutions of the swing pinion are considered adequate. Test loads for floating cranes can be rotated over the water.

Note: Caution shall be exercised when rotating loads over water. Ensure during the initial load test the floating crane has adequate draft readings per design data.

2.3.8 Travel Motion. This test shall be conducted with the boom at maximum allowable radius positioned 90 degrees with the crane rails and boom dog engaged.

CAUTION: Operate crane at very slow travel speed. Ensure track and supporting foundation is sound and free of any obstruction over test travel area.

2.4 Additional Tests for Dravo 60-Ton Floating Cranes. (Perform these tests in conjunction with the other load tests). These tests verify the proper operability of the pneumatic clutch system and the back up (emergency) brake system in case of failure in the clutch system.

**CAUTION:** The holding capacity of the hoist drum band brakes can only be verified through load testing. The test director shall be aware that when making the initial lift of the test load, the break over of the floating crane could be as much as six feet. This may require hoisting and booming operations to ensure the hoist block is maintained over the test load and the load remains within allowable radius. When switching from main hoist to boom hoist or vice versa, the pawl for the respective hoist function shall be fully engaged with the ratchet to prevent damage in case of brake slippage.

**2.4.1 Main Hoist and Boom Hoist Static Test.** With the boom near the maximum radius for the maximum capacity, raise test load to clear the ground. Engage main and boom hoist pawls. Jog the main and boom hoist drums as required to locate the pawl tip approximately 1/2 inch from setting on a ratchet tooth. Mark the boom hoist drum brake band and drum, in addition to the electric brake and drum. Hold the load for 10 minutes with only the main hoist clutch engaged. Observe for lowering of the load, which may indicate malfunction of boom band brake, hoisting components, or holding brake. Disengage the main hoist clutch and engage the boom hoist clutch. Mark main hoist band brake and drum in addition to the electric brake and drum. Hold test load for an additional 10 minutes. Observe for lowering of the test load.

**2.4.2 Main Hoist and Boom Hoist Foot Brake Test.** Raise the test load to a safe height. Lower the test load with the main hoist in the first control point, then apply the foot brake. This should stop the lowering of the load. Set the load with main hoist to approximately two feet above ground surface. Disengage the main hoist clutch and engage the boom hoist clutch. Lower the test load using the first control point of the boom hoist. Apply the foot brake. This should stop the lowering motion of the test load.

**2.4.3 Main Hoist Automatic Brake Test.** Raise the test load to a safe height. Lower the test load with the main hoist in the first speed point and, while lowering, activate the emergency stop (air dump) valve in the operator's cab. This should stop the lowering motion of the load.

**2.4.4 Boom Hoist Automatic Brake Test.** With the boom near maximum radius and with the load approximately two feet above the ground, lower the test load with the boom hoist in the first speed point. While lowering, activate the emergency stop (air dump) valve in the operator's cab. This should stop the lowering motion of the boom.

**2.4.5 Boom Hoist Variable Rated Load Test.** Repeat the applicable portions of paragraphs 2.4.1, 2.4.2, 2.4.3, and 2.4.4 using the test load and maximum radius for the variable rating of the main hoist.

**2.4.6 Auxiliary Hoist Static Test.** Raise test load to clear the ground. Engage the auxiliary hoist drum pawl. Jog the auxiliary hoist drum rotation as required to locate the pawl tip approximately 1/2 inch from setting on a ratchet tooth. Mark electric brake and drum. Hold the test load for ten minutes with the auxiliary hoist clutch engaged.

Observe for lowering of the load, which may indicate malfunction of auxiliary hoist components or holding brake. Disengage the auxiliary hoist clutch. Mark the auxiliary hoist brake band and drum. Observe for lowering of the load.

2.4.7 Auxiliary Hoist Foot Brake Test. Raise the test load to a safe height. Lower the test load in the first speed point, then apply the foot brake. This should stop the lowering motion of the load.

2.4.8 Auxiliary Hoist Automatic Brake Test. Raise the test load to a safe height. Lower the test load in the first speed point and, while lowering, activate the emergency stop (air dump) valve in the operator's cab. This should stop the lowering motion of the load.

### 3 Tower Cranes and Derricks

3.1 General. Tower cranes and stiff leg derricks shall be tested in accordance with instructions for portal cranes under paragraph 2 (except for rotation testing which is described below).

3.2 Tower Crane and Derrick Rotation. Rotation testing shall be conducted in accordance with the rotation test for portal cranes through normal design operating arc.

### 4 Hammerhead Cranes

4.1 Hammerhead Crane Hoists. Hoists shall be tested in combination(s) such that all structural, mechanical, and electrical components are tested in all possible configurations. Hoists shall be tested in accordance with applicable instructions for portal cranes.

4.2 Hammerhead Rotation. Rotation shall be tested in accordance with instructions for portal cranes.

#### 4.3 Hammerhead Trolley Motion

4.3.1 No-Load. Travel the allowable length of the trolley runway using all control points. Operate trolley into the limit switches at slow speed. Bring trolley back and by using the limit switch bypass, move trolley into the outboard rail stops. Repeat above procedure for inboard limit switches and rail stops.

4.3.2 Load Test. Raise test load to clear ground and move trolley to the maximum allowable radius. Hold test load for 10 minutes. Do not move trolley beyond the trolley limit switch. After the ten-minute holding test, travel the allowable length of the trolley runway.

4.4 Travel. Travel motion shall be tested in accordance with the instructions specified for portal cranes where applicable.

## 5 Mobile Cranes (Locomotive, Crawler, Crash, Cruiser, Truck, Commercial Truck Mounted, and Articulating Boom, including all Cranes Mounted on Automotive Truck Chassis)

5.1 Test Load. Complete tests shall be performed on each load hook. The nominal test load shall be 110 percent of rated capacity (i.e., for the crane's configuration of reeving, boom length, etc). The rated capacity shall be the capacity shown on the posted load chart or as limited by wire rope line pull if the crane is not fully reeved. The test load includes the weight of (or deduction values for) the hook, block, slings, and ancillary lifting devices (and for some cranes hoist wire rope not accounted for in load charts), and the combined weight deduction values shall be subtracted from the nominal test load in order to determine the amount of test weights to be used. Follow OEM load chart instructions for weight deduction values. Check accuracy of load indicators where installed. If controlled assembly procedures, as described in section 3, are to be used in lieu of load test and recertification for change-out of ancillary equipment, the applicable ancillary equipment shall be tested during the annual certification testing.

5.1.1 Category 4 Cranes. Test procedures for category 4 cranes shall follow OEM procedures and recommendations. Where no procedures are provided by the OEM, procedures shall be developed by the activity engineering organization using the procedures of this subsection as a guide. The nominal test load shall be 110 percent of rated capacity.

5.2 Mobile Cranes Temporarily Mounted on Barges. The certifying official shall prescribe appropriate test conditions and precautions (limit of wind velocity, list, trim, etc.). The following conditions, as a minimum, shall be adhered to:

- a. A marine list and trim indicator shall be installed in the operator's cab.
- b. Maximum list and trim shall not exceed 3 degrees under test conditions.
- c. The crane carrier shall be secured to barge deck padeyes or connectors with tie-downs (at each crane outrigger, if so equipped). Tie-downs shall have some slack when the crane is fully raised on outriggers.

5.3 Pretest Preparation. Select a test course that is level and free of ground obstructions. Extend outriggers or stabilizers as specified by the OEM, when so equipped. For most truck and cruiser cranes, crane carrier shall be raised sufficiently to completely unload tires. Level crane as required by OEM's load chart. Rotate the boom 90 degrees from the longitudinal axis of the crane carrier and position the boom at the minimum working radius.

**CAUTION:** It is strongly recommended that precautions such as attaching guy wires to the crane or placing cribbing under the counterweight be used to preclude possible overturning in the event of wire rope or mechanical failure. During stability testing, mobile cranes have little margin of safety against overturning. Test personnel shall remain fully alert to wind, other weather, and visibility conditions that may jeopardize the safe performance of the tests.

#### 5.4 No-Load Tests

##### 5.4.1 Hoist(s)

- a. Raise and lower each hook through the maximum possible working distance of hook travel.

**CAUTION:** After lowering hook, ensure wire rope is packed tightly on the drum prior to proceeding with load tests.

- b. Run each hoist block into the limit switch (where installed) at slow speed.
- c. Run each hoist block beyond the limit switch by using the bypass switch (where installed).

##### 5.4.2 Boom

- a. Raise and lower the boom through the full working range.
- b. Raise the boom into the upper limit switch (where installed). Raise the boom past the boom upper limit switch using the bypass switch (where installed).
- c. Test the lower limit switch (where installed) by the same procedure prescribed for testing the upper limit switch.
- d. Extend and retract telescoping boom sections the full distance of travel.

5.4.3 Other motions including swing shall be operated through a minimum of one cycle (one full revolution of major components).

5.5 Load Test. The load test consists of basically two parts, a maximum load test and a stability load test. The following test sequence is time and cost effective. The sequence may be varied by the activity.

### 5.5.1 Maximum Test Load for the Main Hoist

**CAUTION:** Lift the test load only high enough to perform the required tests.

a. Static Test. Raise the test load to clear the ground with boom at minimum possible radius and hold for 10 minutes without boom and load hoist pawls (dogs) engaged. Rotate load and hook to check bearing operation. Observe for any lowering that may occur, which may indicate a malfunction of boom or hoisting components, brakes, or outriggers. For telescoping boom cranes, tests 5.5.1.a through d shall be performed with boom fully retracted.

Note: Due to the number of layers of wire rope on the drum, some cranes may not be able to lift the test load per the OEM's load chart. If the crane has the same maximum capacity at extended boom length(s), perform the test with the boom extended. If the crane can not lift the test load, check the OEM's allowable line pull for the particular model hoist and layer of rope. If allowable line pull (available torque) is the limiting factor, reduce the test load based on the allowable line pull limitation and perform the required test. Certify the crane based on the reduced test load (i.e., certified capacity is test load divided by 1.10). If the crane can not lift the reduced test load, verify that the system hydraulic pressure and relief valves are set within OEM specifications. If the settings are within specification, contact the OEM.

b. Dynamic Test. Raise and lower the test load at normal operating speeds.

c. Hoist Brake. Test ability of the brake to control and stop the load. Test the ability of the brake to hold and lower the test load with the friction clutch disengaged, if applicable. (Do not lower test load in free-fall mode if the OEM permits lowering in this mode with light loads only.)

d. Boom Operation. Operate the boom from minimum radius to maximum radius for the load applied. Repeat the test in the opposite direction.

e. Hydraulic Component Slippage. Lift the test load at minimum radius and allow time for fluid and component temperatures to stabilize. Hold the load for 10 minutes without use of controls by the operator. There shall be no significant lowering of the load, boom, or outrigger beams due to components or systems malfunction or failure during the test.

#### Notes:

1. The significance of any lowering shall be evaluated by the activity engineering organization depending on operating requirements and safety.



2. For cranes not equipped with telescoping booms, this test may be performed in conjunction with the static test noted above. For telescoping boom cranes, a different test load is usually required. Test telescoping boom cranes at the maximum hydraulically extended boom length with a test load and at the minimum radius corresponding to that boom length.
3. For cranes without lockable outriggers, this test shall be performed on both sides of the crane (and over the front for cranes with front outriggers). For telescoping boom cranes, the static test of 5.5.1.a will satisfy this requirement for the outrigger test over the other side.
4. For cranes equipped with outrigger locking devices but where activity operating procedures permit operation without the use of the locking devices, this test shall be performed over both sides of the crane (and front if applicable) with the locking devices disengaged.

#### 5.5.2 Stability Test

Note: The test load shall be established based on the boom length and radius determined below.

- a. Boom Operation. Raise and lower the boom through the full working range for the length of boom extended and radius as determined below. Visually observe for smooth operation. Test boom brake for proper operation.
- b. Rotation. At slow speed, rotate left and right maximum degrees allowed by the OEM at the radius as determined below. Apply brake periodically during rotation. Brake shall demonstrate its ability to stop the rotating motion in a smooth, positive manner. Where brakes are designed for holding only, operate controls by plugging to stop rotation then apply brake. For cranes with outrigger locking devices and where such devices are used in operation, this test shall be performed with the locking devices engaged.

#### Notes:

1. These tests shall be done over the side of the crane. If the crane has a different capacity over the front or rear, the crane shall be tested in that position also. Stability testing of mobile cranes can be extremely hazardous, particularly with long booms and with jibs attached. To minimize the hazard, perform the tests in the following configurations:
  - a. For telescoping boom cranes, these tests shall be performed with the boom extended approximately halfway between fully retracted and fully extended. (For example, if a boom has a retracted length of 40 feet and ratings for eight feet

increments of extension to a fully extended length of 96 feet, the mid point between fully retracted and fully extended is 68 feet. Since this length is not on the load chart, test the crane with a boom length of 64 or 72 feet.) However, if the rated load for maximum radius for that boom length is not governed by stability (e.g., below the bold line) select the first longer increment of boom length where stability governs. If no ratings are governed by stability, perform the test with the maximum boom length. Perform the test at the maximum radius for the boom length selected. However, see note b below.

b. For all cranes test at maximum radius (for the boom length selected - see subparagraph a above) except if the weight of deductions for equipment on the crane (hook block, jib, etc.) exceeds the weight of the load below the hook, then test at a radius (in the stability range of the crane) where the below-the-hook load weight is equal to or greater than the weight of equipment deductions. For example, for a crane with configuration deductions (load block, jib, hook, etc.) of 6,000 pounds, test at a radius where the nominal test load is 12,000 pounds or greater.

2. When lifting test loads, always lift the load well within the maximum radius and slowly boom down to the pre-measured radius (as determined above) stopping at least once to test the effectiveness of the boom brake. Lift the test load only high enough to perform the required tests.

3. A crane outrigger may become light (start to raise up within the outrigger pad) and the outrigger pad may clear the ground during this procedure (with the boom positioned over the opposite corner) depending on the make and model. Generally, this is normal and not an indication of tipping. However, the activity shall verify with the crane OEM that a crane exhibiting this condition is safe for use.

5.5.3 Auxiliary and Whip Hoist. Test load shall be based on the maximum rated capacity for the hoist to be tested. For telescoping boom cranes, tests shall be performed with the boom fully extended or until 3 wraps of wire rope remain on the hoist drum.

a. Static Test. Raise the test load to clear the ground and hold for 10 minutes. Observe for any lowering that may occur, which may indicate a malfunction of hoisting components or brakes.

b. Dynamic Test. Raise and lower the test load at normal operating speeds.

c. Hoist Brake. Test the ability of the brake to control and stop the load. Test the ability of the brake to hold and lower the test load with the friction clutch disengaged, if applicable.

5.5.4 Free Rated Load Test. Check the stability and operation of crane, carrier, wheels, tires, tracks, brakes, etc., under load by performing the following tests, when lifting without outriggers and/or traveling with the load are permitted at the activity for the type of crane being tested.

CAUTION: Ensure all “on rubber” lifting requirements established by the OEM are complied with. Attach taglines to the load to control oscillation. For cranes with outriggers, extend outriggers and maintain minimal clearance (3 to 4 inches) above ground. Test personnel shall stand clear of tires during load tests.

Notes: No static test is required. Not applicable to mobile cranes temporarily mounted on barges. Some cranes have different ratings for stationary lifts and for traveling with a load. Each allowable configuration shall be tested. See section 11, for allowable free rated capacities. Because capacities for over the side lifting are limited to 60 percent of OEM capacities, testing over the side is not required.

a. Maximum Free Rated Load. Hoist maximum free rated test load at minimum possible radius over the rear (or over the front as required by the OEM). Slowly boom down to the maximum radius for the load.

(1) Rotate through the appropriate working arc.

(2) Travel a minimum of 50 feet with test load over the rear (or front as required by the OEM) with the boom parallel to the longitudinal axis of the crane carrier.

b. Stability Test. Repeat step "a" with a test load corresponding to the radii determined as follows: For telescoping boom cranes, test with the boom approximately halfway between fully retracted and fully extended but do not exceed OEM's boom length limitation for lifting on rubber. Test at the maximum radius for the boom length selected. For cranes with fixed length booms, see paragraph 5.5.2 for determination of radius.

CAUTION: When lifting test loads, always lift the load well within the maximum radius and slowly boom down to a pre-measured radius. Lift the test load only high enough to perform the required tests.

5.5.5 Ancillary Equipment. When authorized for use, ancillary equipment (swing away jibs, power pinned fly sections, manual extensions, etc.) shall be load tested. Test load shall be based on the maximum rated load for the equipment or as limited by wire rope line pull if the equipment is not fully reeved. For jibs with variable offset angles, test at the greatest offset. Record each test configuration and test load on the certification supplement form, figure 3-2.

5.5.6 Cranes with Variable Outrigger Settings. In addition to the tests noted above, perform the test noted in paragraph 5.5.2 over one side for each authorized intermediate setting of the outriggers. Record each test configuration and test load on the certification supplement form, figure 3-2.

5.5.7 Test After Change or Repair of Tires. (For cranes with "on rubber" lift capability). After change or repair of tires, the crane shall be traveled (with no load on hook) a minimum of 100 feet, forward and reverse, with the counterweight positioned over the corner of the crane with the affected tire, with the boom at minimum radius or as required by the OEM.

5.6 Weight Handling Equipment Used for Other than Lift Crane Service. Locomotive, crawler, truck, and cruiser cranes that are used for clamshell, dragline, magnet, pile driving, or other non-lift crane work shall be tested at the maximum safe working load permitted for the size wire rope being used. This test shall be performed in all working motions except travel. Buckets, magnets, etc., may be removed for testing wire rope. No test is required after reassembly. Retesting is not required when end attachment is changed from original connection (i.e., changed from clamshell use to dragline and so on) during the certification period.

## 6 Bridge/Overhead Traveling, Wall, Gantry, Cantilever Gantry and Semi-gantry

### 6.1 No-Load Test

#### 6.1.1 Hoist

- a. Raise each load hook slowly into the hoist limit switch.
- b. Check for proper operation of the backup limit switch (where applicable).
- c. Lower and raise each hook through all controller points.
- d. Check for proper operation of lower limit switch (where applicable).

6.1.1.1 Emergency Brake on Wire Rope Drum (Shaft Failure Detection System). Simulate a system fault by disconnecting the motor encoder signal while lowering at slow speed. Verify that the brake applies and that the hoist control is disabled in each direction. Reconnect the encoder after the test. Repeat this test with the drum encoder.

6.1.2 Trolley. Operate the trolley through all controller points in both directions. Operate the full distance of the bridge rails and verify proper brake operations.

6.1.3 Bridge. Operate the bridge travel controller through all points in both directions. Operate the full distance of the runway and slowly contact the runway rail stops with the crane bridge bumpers. Verify proper brake operation during this test.

6.2 Load Test. Test each load hook separately.

6.2.1 Hoist

a. Static Test. Raise test load approximately one foot and hold for 10 minutes. Rotate load and hook to check bearing operation. Observe for lowering of the load, which may indicate malfunction of hoisting components or brakes. For hoists with primary and secondary holding brakes, perform the tests in paragraph 6.2.1.b in lieu of this test.

b. Primary and Secondary Holding Brakes. For hoists with primary and secondary holding brakes (i.e., where each brake is designed to individually hold the load) raise the test load and observe the proper timing sequence in the application of the primary and secondary brake when the controller is returned to neutral. Visually observe both hoist holding brakes to ensure correct operation.

(1) Raise the test load approximately one foot and inactivate the secondary holding brake while testing the primary holding brake. Hold for 10 minutes. Rotate load and hook to check bearing operation. Observe for lowering of the load, which may indicate malfunction of hoisting components or brakes.

(2) Re-engage secondary holding brake and release the primary holding brake. Hold for 10 minutes. Observe for lowering of the load, which may indicate malfunction of hoisting components or brakes. Re-engage the primary holding brake. Recheck proper operation of time delay and ensure smooth positive stopping.

(3) If the brakes are designed to individually hold only the rated capacity (and not 125 percent), then the tests in subparagraphs (1) and (2) may be performed with a 100 percent test load, and the certification shall be so noted. However, the brakes, acting together, shall demonstrate the ability to hold a 125 percent test load for a 10-minute period.

c. Dynamic Test, Including Dynamic Load Brake. Raise and lower test load on each controller point and visually observe smooth control and acceleration between points. Stop the load during hoisting and lowering to verify the brake stops and holds the load.

Note: Dynamic load brakes include eddy current brakes, DC regenerative braking, regenerative braking from squirrel cage motors, etc. Dynamic braking will not stop motion.

d. Hoist Mechanical Load Brake (If provided). Raise test load approximately five feet. With the hoist controller in the neutral position, release (by hand) the holding brake. The load brake shall hold the test load. Again with the holding brake in the released position start the test load down slowly and return the controller to the off position as the test load lowers. The load brake shall prevent the test load from accelerating.

Note: It is not necessary for the load brake to halt the downward motion of the test load. For hoists where the holding brake can not be released by hand (or otherwise defeated without disassembly), merely observe for smooth lowering motion and unusual noise/overheating of the mechanical load brake.

e. Loss of Power (Panic Test). This test is designed to test the reaction of a hoisting unit in the event of power failure during a lift. Hoist the test load to convenient distance above the surface. Lower test load at slow speed and with the controller in the slow lowering position, disconnect the main power source and return the controller to the neutral position. The test load shall stop lowering when the controller is placed in the neutral position.

CAUTION: The activity engineering organization shall review the system circuitry for cranes with electronic controls to assure that this test can be performed safely without damaging the control system. For assistance in the review, contact the Navy Crane Center.

f. Emergency Brake on Wire Rope Drum Dynamic Test. Perform this test with a 100 percent test load. Raise the load to a sufficient height to perform the following test. Lower the load at a slow speed (first speed point or minimum speed). Disable all hoist brakes except the wire rope drum brake. Depress the emergency stop pushbutton to set the drum brake. The brake shall stop the load. Reset all brakes. (CAUTION: Station appropriately trained personnel at each disabled hoist brake in case of failure of the drum brake to stop the load. These personnel shall be in constant contact with the load test director and prepared to safely engage the hoist brakes when directed.)

6.2.2 Trolley Motion. Operate the trolley with the test load (if space is available) the full distance of the bridge rails using extreme caution. Verify proper brake operation.

6.2.3 Bridge Motion. With the trolley at one end of the bridge, operate the bridge the full distance of the runway (if space is available). With the trolley at the opposite end of

the bridge, operate the bridge in the opposite direction using extreme caution. Observe for any binding of the bridge trucks, and verify proper brake operation.

6.3 Stopping Under Loss of Power (For Cranes without Bridge or Trolley Automatic Brakes). A safety hazard exists in controlling the motion of the bridge and trolley, and therefore the motion of the load, for certain cranes in the event of a power failure. The seriousness of the hazard varies with the speed of bridge or trolley; the size and weight of the load; the surrounding environment; and the operating characteristics of the individual cranes. The major factor in reducing this hazard is the skill and response of the operator because it is not considered either feasible or practical to modify all the existing cranes that are not provided with automatic braking in all travel modes. Accordingly, the following actions shall be taken:

6.3.1 The operating characteristics of the crane under a loss of power shall be determined by operational field testing (with the test load) and recorded. This shall be a one time test unless repairs, or alterations are made that will change the operating characteristics of the crane under the loss of power.

6.3.2 The certifying official shall make a determination that the operating characteristics are within acceptable limits of safety for operations under loss of power.

6.3.3 Instructions, as appropriate, shall be posted in the crane cab to warn the operator of the characteristics of the crane and the necessary precautions in the event of loss of power.

## 7 Jib, Pillar, Pillar Jib, Monorail, and Fixed Overhead Hoist

7.1 No-Load Test. Test each operation separately.

7.1.1 Trolley. Operate trolley assembly the full length of the monorail or jib. Operate all rail switches for proper operation.

7.1.2 Swing. (Jib, Pillar, and Pillar Jib) Swing through working range (where space is available) at maximum radius.

7.1.3 Hoist. Raise the load hook into the hoist limit switch at slow speed. Raise and lower the hook at each control point. Lower hook and verify operation of lower limit switch, where applicable.

7.2 Load Test

7.2.1 Hoist

a. Static Test. Raise load approximately one foot and hold for 10 minutes. Rotate load and hook to check bearing operation. Observe for lowering of the load, which may indicate malfunction of hoisting component or brake.

b. Dynamic Test, Including Dynamic Load Brake. Raise and lower test load on each controller point and visually observe smooth control and acceleration between points. Stop the load during hoisting and lowering to verify the brake stops and holds the load.

Note: Dynamic load brakes include eddy current brakes, DC regenerative braking, regenerative braking from squirrel cage motors, etc. Dynamic braking will not stop motion.

c. Mechanical Load Brake. Raise test load approximately five feet. With the hoist controller in the neutral position, release (by hand) the holding brake. The load brake shall hold the test load. Again with the holding brake in the released position, start the test load down slowly and return the controller to off position as the test load lowers. The load brake shall prevent the test load from accelerating.

Notes: It is not necessary for the load brake to halt the downward motion of the test load. For hoists where the holding brake can not be released by hand (or otherwise defeated without disassembly), merely observe for smooth lowering motion and unusual noise/overheating of the mechanical load brake.

d. Loss of Power (Panic Test). Raise the test load approximately three feet and, while slowly lowering test load, cut main power to hoist. Load shall stop. Air operated hoists shall be vented during this test. The significance of the stopping distance for air hoist shall be evaluated and published by the certifying official depending on operating requirements and safety.

CAUTION: The activity engineering organization shall review the system circuitry for cranes with electronic controls to assure that this test can be performed safely without damaging the control system. For assistance in the review, contact the Navy Crane Center.

e. Trolley. Operate the trolley through the full distance of the monorail or jib (where the space is available). Observe for any malfunctioning of the trolley assembly and alignment of monorail or jib. Verify proper brake operation.

f. Swing (Where Applicable). Swing the test load (where space is available) through the working range at maximum radius, stopping the load at several points. There shall be no excessive drift of jib or trolley at any of these points. If a horizontal force of 15 pounds or less will restrain the load, then the drift is acceptable.



(INTENTIONALLY LEFT BLANK)



APPENDIX F - EXAMPLES OF LOAD BEARING PARTS,  
LOAD CONTROLLING PARTS, AND OPERATIONAL SAFETY DEVICES

EXAMPLES OF LOAD BEARING PARTS

HOOK	FOUNDATIONS FOR HOIST
HOOK NUT	COMPONENTS
HOOK BEARING	FOUNDATION BOLTS & NUTS
LOAD BLOCK	TROLLEY WHEELS & AXLES
SHEAVES	TROLLEY FRAME MAIN MEMBERS
SHEAVE PINS	BRIDGE BEAM AND END
BOOM HEEL PINS	CONNECTIONS
BOOM PIN HOUSINGS	HOOK TRUNNION
BOOM PIN HOUSING CONNECTIONS	EQUALIZER BARS AND PINS
WIRE ROPE	SHEAVE BEARINGS
WIRE ROPE FITTINGS	DRUM AND PINION SHAFT BEARINGS
WIRE ROPE DRUMS	HOIST REDUCER BEARINGS AND
DRUM SHAFTS	BEARING RETAINERS
DRUM SHAFT BEARING HOUSINGS	HOIST REDUCER MECHANICAL LOAD
DRUM SHAFT HOUSING NUTS &	BRAKES
BOLTS	HOIST DRIVE KEYS
HOIST DRUM BULL GEAR	LOAD RESTRAINING SHEAR BLOCKS
HOIST DRUM PINION GEAR	LOWER ROLLER PATH
GEAR TO SHAFT CONNECTION	ROLLER SPIDERS
GEAR TO DRUM CONNECTION	TRUCK SYSTEM SADDLES
PINION SHAFT	LUFFING HOIST PAWL, RATCHET, &
PINION SHAFT BEARING HOUSINGS	FOUNDATION
PINION SHAFT BEARING HOUSING	UPPER ROLLER PATH
BOLTS & NUTS	ROLLER PATH ROLLERS/WHEELS
AUTOMATIC HOIST BRAKES	LOAD CARRYING AXLES OF ROLLERS
PINION SHAFT TO HOIST GEARBOX	ROLLER PATH SUPPORTING MEMBERS
COUPLING	(UPPER & LOWER)
OUTPUT SHAFT OF HOIST GEARBOX	GUDGEON AND EQUALIZER PINS
HOIST GEARBOX GEARS	TRUCK AXLES
HOIST GEARBOX GEAR SHAFTS	TRUCK WHEELS
HOIST GEARBOX INPUT SHAFT	ALL MEMBERS OF TUBULAR BOOMS
GEARBOX INPUT SHAFT TO MOTOR	MAIN CHORD MEMBERS OF STRUCTURAL
COUPLING	SHAPE BOOMS
HOIST AUTOMATIC BRAKE	SHEAVE NEST MEMBERS
BRAKEWHEELS	LUFFING BRIDLE
AS A COMPONENT, ENTIRE HOIST	LUFFING BRIDLE TO BOOM CONNECTIONS
REDUCER	"A" FRAME LEGS AND CONNECTIONS
HOIST MOTOR SHAFT	GANTRY LEG MAIN MEMBERS
ALL HOIST DRIVE TRAIN	EQUALIZER FRAME MAIN MEMBERS
COMPONENTS	TRUCK FRAME MAIN MEMBERS
	INSULATED LINK

## EXAMPLES OF LOAD CONTROLLING PARTS

FOOT CONTROLLED BRAKES  
MASTER CYLINDERS FOR BRAKES  
SLAVE CYLINDERS FOR BRAKES  
ROTATE BULL GEAR  
ROTATE PINION GEAR  
ROTATE PINION GEAR SHAFT  
OUTPUT SHAFT OF ROTATE GEARBOX  
COUPLING OF OUTPUT SHAFT TO PINION SHAFT  
GEARS OF ROTATE GEARBOX  
GEAR SHAFTS OF ROTATE GEARBOXES  
COUPLING OF INPUT SHAFT TO MOTOR SHAFT  
ROTATE ELECTRIC BRAKES  
TRAVEL ELECTRIC BRAKES  
TRAVEL GEAR SHAFTS  
TRAVEL GEAR SHAFT TO MOTOR COUPLING  
TRAVEL GEARS  
MOTOR SHAFT  
BEARING HOUSINGS FOR TRAVEL AND ROTATE  
TRAVEL AND ROTATE DRIVE KEYS  
TRAVEL GEAR GEARBOX COMPONENTS  
CRANE MOUNTED DIESEL ENGINES AND GENERATORS  
CRANE MOUNTED ELECTRICAL POWER DISTRIBUTION  
ELECTRICAL CONTROL CIRCUITS

Note: Electrical circuit designs are too numerous to list.

The only electrical circuit components that are to be considered as load controlling are those associated with movement of the load.

## EXAMPLES OF OPERATIONAL SAFETY DEVICES

INTERLOCKS  
UPPER HOIST LIMIT SWITCH  
LOWER HOIST LIMIT SWITCH  
LUFFING HOIST LIMIT SWITCH  
ROTATE LIMIT SWITCH  
EMERGENCY STOP SWITCHES  
LOCKING DEVICES  
OVERLOAD INDICATORS WITH SHUTDOWN CAPABILITY  
RADIUS INDICATOR  
OVERSPEED, PRESSURE, AND TEMPERATURE DEVICES ON CRANE MOUNTED DIESEL ENGINES (I.E., PROVIDING POWER TO MOVE THE LOAD) WITH SHUTDOWN CAPABILITY

Note: Operational safety devices do not include switches, gauges, bells, alarms, fuses, etc., on engines, air compressors, circuits, etc., that protect personnel or equipment, but are not activated by the hook load or position.

## APPENDIX G - GENERAL CRANE SAFETY COURSE

Note: The length of the course shall be sufficient to cover the topics applicable to the type(s) of cranes to be operated. Specific emphasis shall be given to mobile crane load charts, including loading limitations, weight deductions, wire rope types and permissible line pulls, ancillary equipment, and other situations unique to this type of crane. Sufficient load chart sample problems shall be given to ensure students have a firm understanding.

1 COURSE TOPICS. The following topics shall be covered, though not necessarily in the order presented.

1.1 First Day. General description of various types of weight handling equipment (WHE)

a. Provide a general description of the applicable types of WHE in use or to be used by the activity and discuss the following:

- (1) Size and characteristics of each machine.
- (2) The various operating modes, i.e., hoisting, luffing, swing, and travel.
- (3) Major components of hoist, luffing, swing, and travel mechanisms.
- (4) Type of carrier used.
- (5) Types of brakes used on WHE and how they operate.
- (6) Define load bearing, load controlling components and safety devices.
- (7) Types of safety devices used on WHE.
- (8) Properly matching crane to the job.

b. General crane safety.

- (1) Major cause of crane accidents, citing examples.
- (2) Maintaining machine in satisfactory working condition.
- (3) Results of operating an unsafe crane.
- (4) Describe ways to avoid accidents.

c. Operator's physical, emotional, and mental condition.

- (1) Operator's determination of personal, physical, mental, and emotional condition.
  - (2) Alertness requirement.
  - (3) Side effects of medication.
  - (4) Operator responsibility for safe crane operation.
  - (5) See supervisor if in doubt.
- d. Understanding the crane.
  - (1) Checkout an unfamiliar crane prior to operation.
  - (2) Read and understand OEM's operation manual.
  - (3) Read and understand posted instructions.
- e. Review, quiz, and discussion covering first day material.

## 1.2 Second Day. Pre-operation inspection.

- a. Unsafe conditions.
  - (1) Determining unsafe conditions.
  - (2) Deficiencies of load bearing or load controlling parts, or safety devices.
  - (3) Reporting conditions of unsafe cranes.
- b. ODCL, see figure 9-1.
  - (1) Purpose of inspection.
  - (2) Inspect items on ODCL.
  - (3) Completing ODCL.
  - (4) Turn in completed ODCL.
- c. Instruction for conducting pre-operation inspection.



(1) How inspection is conducted.

(2) Parts of inspection.

(3) Walk around inspection. Observe and report conditions on applicable items on ODCL.

(4) Machinery house inspection.

(a) Walk around inspections.

(b) Observe and report conditions on applicable items on ODCL.

(5) Operator cab inspection.

(a) Controls in position for inspection.

(b) Run engine.

(c) Observe and report conditions on applicable items on ODCL.

(6) Operating inspection.

(a) Engine running.

(b) Alert personnel prior to operation.

(c) Operate crane through various modes and perform inspection of applicable items on ODCL.

(d) Observe and report conditions on applicable items on ODCL.

d. Review, quiz, and discussion covering second day material.

### 1.3 Third Day. Safety procedures for crane operations.

a. Crane Team.

(1) Team member responsibilities.

b. OEM's operation manual.

(1) Understanding contents of manual.



- (2) Understanding activity safety instructions.
- (3) Bypassing safety devices.
- (4) Conflicts with instructions.
- c. Load rating charts.
  - (1) Safe handling of load using load rating chart.
  - (2) Verification of load weights (50 percent rule).
  - (3) Identification/marketing of load weights.
  - (4) Rules for lifting hoppers, tubes, and other containers.
  - (5) Boom configuration and length.
  - (6) Verification of maximum radii.
  - (7) Ground condition.
    - (a) Level machine.
    - (b) Outriggers and tires.
  - (8) Work quadrant operation.
  - (9) Use of indicating devices.
  - (10) Define stability and structural competence.
  - (11) Crane OEM's notes used with load rating chart.
  - (12) Sample problems using simple and complicated load rating charts.
- d. Review, quiz, and discussion covering third day material.

#### 1.4 Fourth Day. Safety procedures for crane operations.

- a. Standard hand signals.

- (1) Using approved hand signals. See Figures 10-1 and 10-2.
  - (2) Purpose of using hand signals.
  - (3) Receiving correct signal prior to moving machine.
  - (4) Designated person giving signals.
  - (5) Exception to following signals.
- b. Other types of communication.
- c. Communication for “blind” and complex lifts.
- d. Lifting of personnel.
  - (1) Paragraph 10.8.
- e. Adverse operating conditions.
  - (1) Adequate support.
  - (2) Climate conditions.
  - (3) Congestion/obstructions.
  - (4) High winds.
- f. Position the crane for stability.
  - (1) Prevent overturning crane.
  - (2) Firm ground support.
  - (3) Setting outriggers correctly.
  - (4) Extending outrigger arms for on-rubber lifting.
  - (5) Determine operating radius.
  - (6) Use load rating charts.
  - (7) Location of load in quadrant of operation.

g. Proper clearance.

- (1) Clearing all obstructions.
- (2) Proper rotate superstructure clearances including counterweight.

h. Electrical power lines.

- (1) Deenergize power lines.
- (2) Additional requirements if line can not be deenergized.
- (3) Minimum working distance from energized power lines.
- (4) Using insulated boom guards.
- (5) Designated person giving signals.
- (6) Leaving an electrified crane.

i. Positioning the boom.

- (1) Disengaging boom pawl (dog) and swing lock.
- (2) Location of load.
- (3) Side loading boom.
- (4) Using boom hoist pawl (dog).
- (5) Effects of simultaneously lowering boom and hoist line under load.

j. Hoisting and lowering the load.

- (1) Vertical lifting only.
- (2) Using load rating chart.
- (3) Received proper signal.
- (4) Balance load each time.
- (5) Sequence of checking load brakes.

- (6) Failure of load brakes during lifts.
- (7) Minimum number of wire rope wraps on drum.
- (8) Precautions when making lifts out of water.
- k. Rotating the load.
  - (1) Disengaging swing lock.
  - (2) Checking swing brake.
  - (3) Failure of swing brake during swing operation.
  - (4) Defective components.
- l. Review, quiz, and discussion covering fourth day material.

1.5 Fifth Day. Safety procedures for crane operations.

- a. Traveling the crane.
  - (1) Boom in traveling position.
  - (2) Crane stability during movement.
  - (3) Extension of outrigger arms.
  - (4) Boom positions for mobile crane.
  - (5) Using taglines.
  - (6) "Over the side" limitation.
  - (7) Location of load.
  - (8) Speed of travel.
  - (9) Check ground to be traversed.
  - (10) Loads not parallel to tracks for portal cranes.
- b. General precautions.

- (1) Awareness of surroundings.
- (2) Operating around people and obstructions.
- (3) Speed and effort of operation.
- (4) Define boom "kickback."
- (5) Preventing boom "kickback."
- c. Securing the crane.
  - (1) Consult OEM's operation manual.
  - (2) Shutdown procedures.
    - (a) Truck cranes.
    - (b) Securing of hook blocks.
    - (c) Crawler cranes.
    - (d) Portal cranes.
    - (e) Floating cranes.
    - (f) Bridge and gantry cranes.
    - (g) Other cranes.
  - (3) Completion of ODCL.
- d. Review of entire course.
- e. Final examination covering entire course.

2 EXAMINATION AND RECORD. Each applicant for initial license shall be given a final written examination covering the contents of the course. To pass, each applicant shall achieve a score of not less than 70 percent correct. An operator's license shall not be issued until the applicant passes the final examination. The graded examination, signed and dated by the instructor, or a certificate of completion with test score, shall be filed in the operator's license file.



## APPENDIX H - CATEGORY 2 AND CAB OPERATED CATEGORY 3 CRANE SAFETY COURSE

1 COURSE TOPICS. The following topics shall be covered, though not necessarily in the order presented.

### 1.1 General

#### a. General description of applicable cranes.

- (1) Size and characteristics of each crane.
- (2) The various operating modes, i.e., hoisting, double hook, trolley, double trolley, and bridging.
- (3) Major components of hoist, trolley, and bridge mechanisms.
- (4) Types of brakes and how they operate.
- (5) Define load bearing and load controlling components and safety devices.

#### b. General crane safety.

- (1) Major cause of crane accidents and cite examples.
- (2) Maintaining machine in satisfactory working condition.
- (3) Results of operating an unsafe crane.
- (4) Describe ways to avoid accidents.

#### c. Operator's physical, emotional and mental condition.

- (1) Operator determination of personal, physical, mental, and emotional condition.
- (2) Alert requirements.
- (3) Side effects of medication.
- (4) Operator responsibility for safe crane operation.
- (5) See supervisor if in doubt.

d. Understanding the crane.

- (1) Checkout on unfamiliar crane prior to operation.
- (2) Read/understand posted instructions.
- (3) Check machine out by pre-operation inspection.

e. Unsafe conditions.

- (1) Determining unsafe conditions.
- (2) Deficiencies of load bearing or load controlling parts, or safety devices.
- (3) Reporting unsafe conditions.

f. Pre-operation inspection, see figure 9-1.

- (1) Purpose of inspection.
- (2) Inspect items on ODCL.
- (3) Completing ODCL.
- (4) Turn in completed ODCL.

g. Instruction for conducting pre-operation inspection.

- (1) How daily inspection is conducted.
- (2) Walk around inspection. Observe and report conditions on applicable items in ODCL.
- (3) Machinery inspection. Walk around inspections of the Trolley and Bridge.
- (4) Operator cab inspection.
  - (a) Controls in position for inspection.
  - (b) Push reset.
  - (c) Observe and report conditions on applicable items on ODCL.
- (5) Operating inspection.



- (a) Alert personnel prior to operation.
- (b) Operate crane through various modes and perform inspection of applicable items on ODCL.
- (c) Observe and report conditions on applicable items on ODCL.

## 1.2 Safety procedures for crane operations

- a. Understanding activity safety instructions.
  - (1) Conflicts with instructions.
- b. Load rating charts.
  - (1) Safe handling of load using load rating chart.
  - (2) Weight of load.
  - (3) Use of indicating devices.
- c. Standard hand signals, see figures 10-1 and 10-2.
  - (1) Using approved hand signals.
  - (2) Purpose of using hand signals.
  - (3) Receiving correct signal prior to moving machine.
  - (4) Designated person giving signals.
  - (5) Exception to designated signal giver.
- d. Electrical power lines.
  - (1) De-energize power lines.
  - (2) Minimum working distance from energized power lines.
  - (3) Be aware of your crane power lines when lifting unusual loads.
- e. Hoisting and lowering the load.

- (1) Receive proper signal.
- (2) Balance load each time.
- (3) Sequence of checking load brakes.
- (4) Failure of load brakes during lifts.
- (5) Minimum number of wire rope wraps on drum.
- f. Traveling the crane.
  - (1) Using taglines.
  - (2) Location of load.
  - (3) Speed of travel.
  - (4) Check ground to be traversed.
  - (5) Avoid hitting bridge stops.
- g. Trolleying the load.
  - (1) Center over load.
  - (2) Clear obstacles before trolleying.
  - (3) Speed of trolley.
  - (4) Be aware of trolley stops.
- h. General precautions.
  - (1) Awareness of surroundings.
  - (2) Operating around people and obstructions.
  - (3) Speed and effort of operation.
- i. Securing the crane.
  - (1) Engage safety devices.

- (2) Controllers in neutral.
  - (3) Open switches.
  - (4) Secure hook and block.
  - (5) Complete ODCL.
- j. Review of entire course.
  - k. Final examination.

2 EXAMINATION AND RECORD. Each applicant for initial license shall be given a final written examination covering the contents of the course. To successfully pass, the applicant shall achieve a score of not less than 70 percent correct. An operator's license shall not be issued until the applicant successfully passes the final examination. The graded examination, signed and dated by the instructor, or a certificate of completion with test score, shall be filed in the operator's license file.

(INTENTIONALLY LEFT BLANK)

## APPENDIX I - BASIC QUESTIONS FOR CATEGORY 1 AND 4 CRANE OPERATORS WRITTEN TEST

Note: Activities shall supplement this list with questions pertinent to the specific types of crane(s) at the activity as well as the activity's unique mission and safety requirements. Elimination of non pertinent questions and modification to suit activity applicability is permitted. (Q = Question/A = Answer)

1. Q: What is the operator's main concern during crane operations?  
A: Operating safely.
2. Q: What two expiration dates are of particular importance to all crane operators?  
A: The expiration date of the certification for the crane being operated, and the expiration date of the operator's license.
3. Q: When can an unlicensed crane operator trainee operate a crane?  
A: Only under the direction of a qualified licensed operator.
4. Q: Give four examples of types of Category 1 cranes.  
A: (Any four of the following) Portal, hammerhead, locomotive, truck, cruiser, crawler, derrick, floating, tower, container, and aircraft crash crane.
5. Q: What are the principal parts of a Category 1 and Category 4 crane?  
A: Boom, machinery house, roller path or rotate bearing, supporting structure, and travel system.
6. Q: What is the definition of "boom length"?  
A: The distance from the boom "heel" or "foot" pins to the center of the boom tip sheave (or, for articulating booms, to the boom attachment point for the hook) .
7. Q: What is a jib boom?  
A: An extension attached to the main boom used when lifting light loads to a higher elevation than that permitted by the main boom.
8. Q: What is the purpose of a hoist limit switch?  
A: To prevent overtravel of the hook block and the possibility of two-blocking.
9. Q: What is two-blocking? Why is two-blocking dangerous?  
A: Two-blocking occurs when the hook block comes in contact with the upper sheave block during hoisting of the hook (or lowering the boom). Two-blocking is dangerous because it could result in damage to the crane, parting of the hoist lines, and dropping the load.

10. Q: What types of power does a Category 1 or 4 crane generally use and what is its source?  
A: Electric or hydraulic power supplied by a diesel engine.
11. Q: How is electrical current conveyed from the revolving portion of the crane to the lower crane structure?  
A: Through a collector ring system.
12. Q: Define the term "radius".  
A: "Radius" is the horizontal distance from a projection of the axis of rotation to the ground or water line, before loading, to the center of the hoist line(s) with load applied.
13. Q: On mobile crane load charts, what is the significance of the bold lines separating the various capacities? Why are they important?  
A: Capacity ratings below the heavy lines are based on crane tipping. They are important because even slight overloads could cause the crane to tip over.
14. Q: What are the minimum required clearances when operating near overhead electrical transmission lines?  
A: The minimum clearance depends on the line's voltage. For 50,000 volts and under, the minimum clearance is 10 feet. The minimum clearance increases as the line voltage increases.
15. Q: Give three factors that shall be considered when selecting a crane for a particular job.  
A: The weight of the load, the radius of the lift, and the height of the lift.
16. Q: When are operators required to perform an operator's daily check of the crane?  
A: Prior to initial use of the crane in each shift or, if a lift is in progress during a shift change of operators, immediately after completion of the lift, unless the crane will not be operated again during that shift.
17. Q: Who is responsible for cleanliness and housekeeping of a crane?  
A: The operator.
18. Q: Why is it important to have bent or dented crane boom members inspected and evaluated?  
A: Bends and dents can greatly reduce the strength of a boom, possibly resulting in sudden collapse of the boom.

19. Q: What is the minimum amount of rope that shall be on grooved drums?  
Smooth drums?  
A: Two full wraps on grooved drums and three full wraps on smooth drums.
20. Q: During performance of your pre-operational check you find minor deficiencies. What do you do?  
A: Note the deficiency on the ODCL and turn the card in to your supervisor at the end of the operation or shift.
21. Q: Describe all the actions required if an asterisked item on the ODCL is found unsatisfactory.  
A: Stop operations. Notify the supervisor of the condition. Annotate the ODCL.
22. Q: When is it permissible for an operator to leave the controls of a crane while a load is suspended from the hook?  
A: The operator shall remain at the controls at all times while a load is suspended from the hook until relieved by another operator.
23. Q: Who has primary responsibility for determining the weight of an object to be hoisted?  
A: The rigger in charge has primary responsibility, however, the operator shall determine for him/her self that the estimated weight to be lifted (at the required radius) will not exceed the safe load carrying capacity of the crane as posted on the load chart.
24. Q: Why should the hook be positioned directly over the load when attaching the load?  
A: To avoid side loading of the boom and dragging the load as it is picked up.
25. Q: Who is responsible for making certain that a load is properly secured and balanced before a lift is made?  
A: Primary responsibility is the rigger's, but the operator shall not lift a load if he/she detects any defects in the attachment.
26. Q: When should a tagline be used during lifting operations?  
A: When the load shall be prevented from swinging or rotating, such as operation in windy conditions and handling odd shaped loads.
27. Q: Is it necessary for the operator to see the load or work area?  
A: Not if there is a designated signal giver who is in control of the lift and is in view of the operator, or if the signal giver is in constant radio contact with the operator.

28. Q: Under what conditions should the operator refuse to obey a signal?  
A: When, in his/her opinion, the signaled movement will endanger the crane, the load, or personnel in the vicinity.
29. Q: What should an operator do if he/she is not sure of the meaning of a signal?  
A: Stop the machine until the meaning of the signal is understood.
30. Q: What signal may an operator obey from a person other than the designated signal giver?  
A: When given a stop signal from anyone, the operator shall stop the crane.
31. Q: How should an operator check the hoist brakes when lifting a heavy load?  
A: Lift the load slightly off the ground and hold momentarily to ensure there is no slippage of the brakes.
32. Q: Why should crane swing be relatively slow?  
A: To prevent outward swing of the load due to centrifugal force.
33. Q: Why should extreme caution be used when lifting loads from the water?  
A: Because the load on the crane may increase as the object leaves the water due to loss of buoyancy, water held inside the object, and surface tension (suction).
34. Q: Describe the proper method of landing a load.  
A: Lower the load slowly, stopping a few inches from the landing point. Then slowly lower the rest of the way.
35. Q: When should the rotate locking device be engaged?  
A: Whenever the operator leaves the cab or controls.
36. Q: In cold weather operation, what precautions should be taken to avoid damage when sheaves may be frozen?  
A: When performing the operation portion of the pre-operational check, raise the hooks and boom before lowering them.
37. Q: What should be done when leaving a crane at the end of the work shift?  
A: Ensure all controls are in the "off" position. Set the rotate locking devices and drum pawls. Secure power. Lock the operator's cab and machinery house.



## APPENDIX J - BASIC QUESTIONS FOR CATEGORY 2 AND CAB OPERATED CATEGORY 3 CRANE OPERATORS WRITTEN TEST

Note: Activities shall supplement this list with questions pertinent to the specific types of crane(s) at the activity as well as the activity's unique mission and safety requirements. Elimination of non pertinent questions and modification to suit activity applicability is permitted. (Q = Question/A = Answer)

1. Q: What is the operator's main concern during crane operations?  
A: Operating safely.
2. Q: What two expiration dates are of particular importance to all crane operators?  
A: The expiration date of the certification for the crane being operated, and the expiration date of the operator's license.
3. Q: When can an unlicensed crane operator trainee operate a crane?  
A: Only under the direction of a qualified licensed operator.
4. Q: When are operators required to perform an inspection of the crane?  
A: Prior to initial use of the crane in each shift or, if a lift is in progress during a shift change of operators, immediately after completion of the lift, unless the crane will not be operated again during that shift.
5. Q: During performance of your pre-operational check you find minor deficiencies. What do you do?  
A: Note the deficiency on the ODCL and turn the card in to your supervisor at the end of the operation or shift.
6. Q: Describe all the actions required if an asterisked item on the ODCL is found unsatisfactory.  
A: Stop operations. Notify the supervisor of the condition. Annotate the ODCL.
7. Q: What is the minimum amount of rope that shall be on grooved drums? On smooth drums?  
A: Two full wraps on grooved drums and three full wraps on smooth drums.
8. Q: Who is responsible for cleanliness and housekeeping of a crane?  
A: The operator.
9. Q: What are the principal parts of an overhead traveling crane?  
A: Bridge girders, end trucks, trolley with hoisting mechanism, and operator's cab or pendant control.

10. Q: What is the purpose of a hoist limit switch?  
A: To prevent overtravel of the hook block and the possibility of two-blocking.
11. Q: What is two-blocking? Why is it dangerous?  
A: Two-blocking occurs when the hook block comes in contact with the upper sheave block during hoisting of the hook. Two-blocking is dangerous because it could result in damage to the crane, parting of the hoist lines, and dropping the load.
12. Q: How is current carried from building or shore power to the bridge and trolley of Category 2 and 3 cranes?  
A: By an insulated electrification conductor system, festoon system, or cable track system.
13. Q: What is meant by "skewing"?  
A: A condition where one end of the bridge gets ahead of the other end, frequently causing binding on the rails.
14. Q: What may cause the bridge to skew?  
A: Wheel slippage on one side only because of slippery track, or a heavy load suspended from one end of the bridge.
15. Q: How may excessive skew be straightened?  
A: By slowly bumping the bridge into the end stops.
16. Q: When is it permissible for an operator to leave the controls of a crane while a load is suspended from the hook?  
A: The operator shall remain at the controls at all times while a load is suspended from the hook until relieved by another operator.
17. Q: What disadvantage exists from a very high mounting of an overhead traveling crane?  
A: The operator may have difficulty in judging position and in seeing signals.
18. Q: What signal may an operator obey from a person other than the designated signal giver?  
A: When given a stop signal from anyone, the operator shall stop the crane.
19. Q: Is it necessary for the operator to see the load or work area?  
A: Not if there is a designated signal giver who is in control of the lift and is in view of the operator, or if the signal giver is in constant radio contact with the operator.

20. Q: Under what conditions should the operator refuse to obey a signal?  
A: When, in his/her opinion, the signaled movement will endanger the crane, the load, or personnel in the vicinity.
21. Q: What should an operator do if he/she is not sure of the meaning of a signal?  
A: Stop the machine until the meaning of the signal is understood.
22. Q: Who has primary responsibility for determining the weight of an object to be hoisted?  
A: The rigger in charge has primary responsibility, however, the operator shall determine for him/her self that the estimated weight to be lifted will not exceed the safe load carrying capacity of the crane.
23. Q: Who is responsible for making certain that a load is properly secured and balanced before a lift is made?  
A: Primary responsibility is the rigger's, but the operator shall not lift a load if he/she detects any defects in the attachment.
24. Q: When should a tagline be used during lifting operations?  
A: When the load shall be prevented from swinging or rotating, such as operation in windy conditions and handling odd shaped loads.
25. Q: Why should the hook be positioned directly over the load when attaching the load?  
A: To avoid side loading of the hoist and/or dragging the load as it is picked up.
26. Q: What work is done in the first hoisting position of a hoist?  
A: Taking the slack out of the lines slowly, and starting to move a light load or empty hook smoothly.
27. Q: How should an operator check the hoist brakes when lifting a heavy load?  
A: Lift the load slightly off the ground and hold momentarily to ensure there is no slippage of the brakes.
28. Q: What is dynamic lowering control?  
A: An automatic device that speeds the lowering of an empty hook or light load, and slows a heavy load.
29. Q: Describe the proper method of landing a load.  
A: Lower the load slowly, stopping a few inches from the landing point. Then slowly lower the rest of the way.
30. Q: Why shall sudden starts and stops of the bridge and trolley be avoided?  
A: Sudden starts and stops may cause skidding and uneven wear of the wheels.

31. Q: What is meant by "inching"?  
A: Performing a motion very slowly, a very little at a time.
32. Q: If a heavy load shall be inched into an exact vertical position, should the final adjustment be made by raising or lowering? Why?  
A: By lowering. When hoisting, the load may inadvertently lower while the master switch is moved from neutral to a hoist speed high enough to support and raise the load.
33. Q: At what point during a lift may trolley or bridge travel be started?  
A: When the tracks are clear and the load is high enough off the ground to pass over obstacles safely.
34. Q: What is meant by plugging?  
A: Use of reverse power instead of a brake to stop the bridge or trolley travel.
35. Q: What precaution should be taken when stopping the crane by plugging?  
A: Be ready to use the foot brake instantly if the power should fail.
36. Q: What should be done when leaving a crane at the end of the work shift?  
A: Ensure all controls are in the "off" position. Open the main switch.
37. Q: What extra precaution should be taken against wind movement when securing an outdoor crane?  
A: The bridge brake shall be locked or the bridge shall be locked by setting the spud lock or by blocking.

APPENDIX K - BASIC PERFORMANCE TEST  
FOR WEIGHT-HANDLING EQUIPMENT OPERATOR LICENSE  
CATEGORY 1 AND 4 CRANES

Notes: (1) Prerequisite for this examination is complete familiarity with Standard Hand Signals for Controlling Crane Operations shown in figure 10-1.

(2) Performance test requirements shall be supplemented and modified by each activity for the particular operating characteristics and features of their cranes as well as the unique mission of the activity.

(3) Performance tests for category 4 cranes shall be modified, as necessary, for the type of crane being used.

---

---

GENERAL INFORMATION:

TESTING ACTIVITY:\_\_\_\_\_ TEST DATE:\_\_\_\_\_

APPLICANT'S NAME:\_\_\_\_\_

TO BE COMPLETED BY EXAMINER

MAKE AND MODEL OF TEST EQUIPMENT:\_\_\_\_\_

TYPE OF CONTROLS:\_\_\_\_\_

RESULTS: SATISFACTORY\_\_\_\_\_ UNSATISFACTORY\_\_\_\_\_

REMARKS: \_\_\_\_\_

\_\_\_\_\_

SIGNATURE:\_\_\_\_\_

## GROUP A - PRE-OPERATION INSPECTION

### 1. WALK AROUND INSPECTION.

Note: Hook should be accessible for inspection.

- \_\_\_\_\_ a. Ensure the crane is currently certified before proceeding.
- \_\_\_\_\_ b. Check crane for tags or other operational restrictions or warnings.
- \_\_\_\_\_ c. Assure no repairs are in progress.
- \_\_\_\_\_ d. Assure no vehicles or objects are in a position where they might be struck by the crane and that no other ground or overhead obstacles and hazards are in the crane parking, travel, and work areas.
- \_\_\_\_\_ e. Perform a pre-operational walk around inspection, a machinery inspection, and an operator cab inspection, and document on a Crane Operator's Daily Checklist (ODCL, figure 9-1). Do not begin operating inspection until directed by examiner.
- \_\_\_\_\_ f. Remove wheel chocks, unfasten rail clamps, and remove rail truck spring wedges as required.

### 2. FAMILIARITY WITH LUBRICATION REQUIREMENTS.

- \_\_\_\_\_ a. Check lubricant levels where accessible and identify points that may require lubrication during periods of operation.

## GROUP B - STARTING THE ENGINE

- \_\_\_\_\_ 1. Check position and disengage master switch, engine clutch, or hydraulic pump drive as applicable.
- \_\_\_\_\_ 2. Check controller handles and assure that they are in neutral.

Note: The operator shall be required to explain to the examiner the function of these control handles and of all other pedals, levers, and switches on the machine.

- \_\_\_\_\_ 3. Start engine in sequence and in the manner prescribed by the OEM.
- \_\_\_\_\_ 4. Observe gauges for correct readings and describe purpose of gauges.

\_\_\_\_\_ 5. Allow engine to warm up as appropriate.

Note: Machines equipped with air or hydraulic controls shall not be operated until gauges show required operating pressure.

\_\_\_\_\_ 6. Engage master switch, engine clutch, or hydraulic pump drive as applicable, and watch for uncontrolled movement of the crane, boom, or hook.

\_\_\_\_\_ 7. Continue to warm up the engine as required by the OEM.

Note: The operator shall listen for any indication of improper conditions and shall report these and their significance to the examiner.

### GROUP C - TESTING OPERATING CONTROLS

\_\_\_\_\_ 1. Close main switch if applicable.

\_\_\_\_\_ 2. Perform operating inspection and no load test portion of the pre-operation inspection and document on the ODCL. Lower limit switch test need only be performed where operationally possible.

\_\_\_\_\_ 3. When direct current is used to operate the test crane, observe ammeters, if any, and state whether or not their readings are proper for the movements made.

### GROUP D - TRAVELING

Note: For self-propelled cranes.

\_\_\_\_\_ 1. Swing boom to center forward or other position as required by OEM for traveling.

\_\_\_\_\_ 2. Prepare crane for traveling in accordance with OEM's requirements.

\_\_\_\_\_ 3. Inform crane rigger, track walker, or railway brakeman of destination and allow him/her to direct the crane during its travel.

\_\_\_\_\_ 4. Proceed to test area.

## GROUP E - OPERATING TESTS

- Notes:
- (1) The following problems assume a full revolving crane. If the crane is a limited-swing derrick or a mobile crane with restricted swing due to stability, etc., the examiner shall require that it be swung in the fullest allowable arc.
  - (2) If it is a floating crane, it is assumed that the crane is moored alongside a dock or barge in still water with little wave action. If the water is rough during the test, the examiner may make allowances for the unsteadiness of the crane when applying the standards of accuracy set forth in these tests.
  - (3) Truck mounted cranes shall have at least a two part hoisting line on the hook block.
  - (4) The accuracy levels set forth for these tests are meant to be minimum standards. The activity may, based on local mission requirements, impose more stringent standards.
  - (5) At no stage of testing or operation shall the operator allow cables to become slack enough to become loose on the drums. This is an unacceptable practice and the examiner shall mark this action accordingly.

### PROBLEM 1 - TEST FOR ACCURACY

Place an open container or other suitable target within the operating range of the crane. The target shall be at least half the height of the hook block and approximately 12 inches in diameter larger than the largest dimension of the hook block. The target shall be placed on a type of support that will not keep it from being knocked over when struck by the hook block or any other part of the crane. Adjust the boom angle so that the hook is inward from the target, swing the crane in a complete circle or to its fullest arc, and, without the help of signals, lower the empty hook block into the target without knocking it over. The operator shall make three attempts. A time limit may be imposed by the examiner.

The following actions are considered unacceptable:

- \_\_\_\_\_ a. Failure to accurately place hook. The operator shall, in at least two out of three attempts, lower the empty hook into the target without knocking it over.
- \_\_\_\_\_ b. Failing to keep safe distances from hazards. The operator shall not permit any part of the machine to come within 10 feet of obstructions.



- \_\_\_\_\_ c. Striking. The operator shall not permit the hook to strike the ground, boom, or any object or person.
- \_\_\_\_\_ d. Swinging abruptly. The operator shall not cause the hook to jerk, seesaw, or wobble while swinging.
- \_\_\_\_\_ e. Swinging too rapidly. The operator shall not swing the crane so rapidly as to cause excessive throw of the hook by centrifugal force.
- \_\_\_\_\_ f. Contacting limit switches.

## PROBLEM 2 - LIFTING AND HANDLING HEAVY LOADS

Note: When hammerhead cranes are used, trolley motion shall be substituted where boom motions are requested.

The object or test weights to be lifted in this test shall weigh between 25 percent and 50 percent of the rated capacity of the crane and shall be placed at an intermediate position between the crane's minimum radius and the maximum radius for that load. If applicable, the operator, with such assistance as may be needed, shall extend and secure the outriggers. After the load is staged, properly rigged and attached to the hook, a line shall be drawn around it on the ground six inches out from its edges. One inch shall be added for every ten feet of radius beyond twenty feet. Upon receiving the proper signal, the operator shall lift the weight to clear the ground. Except for emergency signals, no other signal shall be given during this test. The operator shall then boom-out close to maximum operating radius, boom-in close to minimum radius, swing the crane one full revolution or in its fullest arc, and then set the load inside the line originally drawn around the weight. When approaching the original position, the examiner, rigger, or a qualified assistant may rotate the load with taglines to conform to the drawn outlines, but without guiding the load into the desired position.

The following actions are considered unacceptable:

- \_\_\_\_\_ a. Failure to accurately place the load. The operator shall, in not more than two attempts, place the load inside the marked area.
- \_\_\_\_\_ b. Failing to obtain a firm level position (Mobile cranes only). The operator shall not handle the load until the crane is in a firm and level position and outriggers deployed, if required.
- \_\_\_\_\_ c. Placing the hook inaccurately. The operator shall place the hook within six inches of the attaching point of the load without taking more than two compensating moves before specific assistance of a rigger is required.

- \_\_\_\_\_ d. Hoisting the load prematurely. The operator shall not hoist until the load has been properly secured, the rigger is clear of the load, and the hoist signal is given.
- \_\_\_\_\_ e. Failing to observe improper rigging. The operator shall inform the examiner whenever, in the opinion of the operator, the rigging appears to be improper or unsafe.
- \_\_\_\_\_ f. Delaying hoist action. The operator shall hoist the load promptly when so signaled.
- \_\_\_\_\_ g. Snapping the load. The operator shall take the slack out of the line in a slow controller position before applying the full hoisting power.
- \_\_\_\_\_ h. Failing to test brake. The operator shall stop hoisting the load when it is a few inches above the ground or deck and apply the brake to make sure that it will hold the load.
- \_\_\_\_\_ i. Failing to preserve stability. The operator shall not boom down to the extent that the position of the load exceeds the safe operating radius of the crane.
- \_\_\_\_\_ j. Failing to keep safe distances from hazards. The operator shall not permit any part of the machine to come within 10 feet of obstructions.
- \_\_\_\_\_ k. Striking. The operator shall not permit the hook or load to strike the ground, boom, or any object or person.
- \_\_\_\_\_ l. Swinging abruptly. The operator shall not cause the load to jerk, seesaw, or wobble while swinging.
- \_\_\_\_\_ m. Swinging too rapidly. The operator shall not swing the crane so rapidly as to cause excessive throw of the load by centrifugal force.
- \_\_\_\_\_ n. Endangering Personnel. The operator shall not position the load over personnel and shall sound a warning for them to stay clear of the crane and the load.
- \_\_\_\_\_ o. Failing to insert tilt blocks in chocked position(Locomotive cranes only). The operator shall not lift a heavy load until tilt blocks are inserted to eliminate truck spring action.
- \_\_\_\_\_ p. Dropping the load. The operator shall not allow the load to strike the ground abruptly.

- \_\_\_\_\_ q. Exceeding the allowable swing arc. The operator shall not rotate the crane beyond the allowable swing arc for mobile cranes nor contact limit switches for limited arc cranes and derricks.

### PROBLEM 3 - ABILITY TO FOLLOW SIGNALS ACCURATELY

Place a screen or use a bulkhead or building so that the operator can not see any part of the load or its supporting slings during the operation. The load shall be light enough not to affect the stability or balance of the crane. A competent signalman or rigger shall direct the operator in the following actions:

- (1) Placing the hook so that the rigger can attach the load.
- (2) Lifting the load.
- (3) Placing the load so that the operator shall adjust the boom angle and swing the boom.
- (4) Allowing a rigger to detach the load.
- (5) Lifting the hook clear of the load.

The following actions are considered unacceptable:

- \_\_\_\_\_ a. Moving without signals. When working with the aid of a signalman or rigger, the operator shall not move any part of the crane except in response to signals. The operator may stop the crane without signals if he/she feels the signaled move is unsafe.
- \_\_\_\_\_ b. Responding to signals inaccurately. The operator shall take prompt and appropriate action in response to each signal. If the operator fails to understand a signal, he/she shall stop the crane until the signal is understood.
- \_\_\_\_\_ c. Responding to "Go" signals abruptly. The operator shall not engage any controller so abruptly as to start any movement with a jerk.
- \_\_\_\_\_ d. Responding to "Stop" signals too slowly. The operator shall not continue any action after being directed to stop.
- \_\_\_\_\_ e. Hoisting the load prematurely. The operator shall not hoist until the rigger is clear of the load and the hoist signal is given.

- \_\_\_\_\_ f. Delaying hoist action. The operator shall hoist the load promptly when so signaled.
- \_\_\_\_\_ g. Snapping the load. The operator shall take the slack out of the line in a slow controller position before applying the full hoisting power.
- \_\_\_\_\_ h. Swinging abruptly. The operator shall not cause the load to jerk, seesaw, or wobble while swinging.
- \_\_\_\_\_ i. Swinging too rapidly. The operator shall not swing the crane so rapidly as to cause excessive throw of the load by centrifugal force.
- \_\_\_\_\_ j. Failing to obtain a firm level position. The operator shall not handle the load until the crane is in a firm and level position (outriggers deployed if required).

#### PROBLEM 4 - LIFTING AND HANDLING ODD-SHAPED OR SHIFTING LOADS

Note: For cranes capable of traveling with loads.

Over an approximately 200 linear feet course (suitable for the type of crane being used), lift and carry a light to moderate weight load approximately 20 feet long. Pipe, beams, logs, or loose lumber are acceptable. Place the load at the end of the course as directed by the examiner. A ground man or rigger using a tagline to control excessive swing or rotation of the load shall assist the operator.

The following actions are considered unacceptable:

- \_\_\_\_\_ a. Failing to maintain a firm level position. The operator shall not handle or travel with the load unless the crane is in a firm and level position that can be maintained through the travel operation.
- \_\_\_\_\_ b. Hoisting the load prematurely. The operator shall not hoist until the load has been properly secured and the rigger is clear of the load and the hoist signal is given.
- \_\_\_\_\_ c. Failing to observe improper rigging. The operator shall inform the examiner whenever in the opinion of the operator, the rigging appears to be improper or unsafe.
- \_\_\_\_\_ d. Delaying hoist action. The operator shall hoist the load promptly when so signaled.

- \_\_\_\_\_ e. Snapping the load. The operator shall take the slack out of the line in a slow controller position before applying the full hoisting power.
- \_\_\_\_\_ f. Failing to test brake. The operator shall stop hoisting the load when it is a few inches above the ground or deck and apply the brake to make sure that it will hold the load.
- \_\_\_\_\_ g. Failing to preserve stability. The operator shall not boom down to the extent that the position of the load exceeds the safe operating radius of the crane.
- \_\_\_\_\_ h. Failing to keep safe distances from hazards. The operator shall not permit any part of the machine to come within 10 feet of obstructions.
- \_\_\_\_\_ i. Striking. The operator shall not permit the hook or load to strike the ground, boom, or any object or person.
- \_\_\_\_\_ j. Swinging abruptly. The operator shall not cause the load to jerk, seesaw, or wobble while swinging.
- \_\_\_\_\_ k. Swinging too rapidly. The operator shall not swing the crane so rapidly as to cause excessive throw of the load by centrifugal force.
- \_\_\_\_\_ l. Endangering Personnel. The operator shall not position the load over personnel and shall sound a warning for them to stay clear of the crane and the load.
- \_\_\_\_\_ m. Dropping the load. The operator shall not allow the load to strike the ground abruptly.

#### GROUP F - RETURNING, STOPPING AND SECURING THE CRANE

- \_\_\_\_\_ 1. Move machine into designated parking area.
- \_\_\_\_\_ 2. Set boom at approximately 45° angle with hook block hanging 4 to 8 feet below boom point sheaves or place in boom cradle if required.
- \_\_\_\_\_ 3. Rotate boom into proper location to set house or wind lock.
- \_\_\_\_\_ 4. Set all controllers in neutral, set drum pawls, and open master switch. Disengage engine clutch or hydraulic pump drive as applicable.
- \_\_\_\_\_ 5. Stop engine as prescribed.

(INTENTIONALLY LEFT BLANK)

APPENDIX L  
BASIC PERFORMANCE TEST  
FOR WEIGHT HANDLING EQUIPMENT OPERATOR LICENSE  
CATEGORY 2 AND CAB OPERATED CATEGORY 3 CRANES

Notes: (1) Prerequisite for this examination is complete familiarity with Standard Hand Signals for Controlling Overhead and Gantry Cranes shown in figure 10-2.

(2) Performance test requirements shall be supplemented and modified by the activity for the particular operating characteristics and features of the cranes as well as the unique mission of the activity.

(3) The performance testing includes evaluation of the operator's ability to follow hand signals. Unacceptable actions include moving without signal and incorrect response to signals. If the operator will be required to operate without seeing the load, the test shall be modified accordingly. Additional criteria for testing ability to follow hand signals and blind operation is included in appendix K basic performance test problem #3.

---

---

GENERAL INFORMATION:

TESTING ACTIVITY:\_\_\_\_\_ TEST DATE:\_\_\_\_\_

APPLICANT'S NAME:\_\_\_\_\_

TO BE COMPLETED BY EXAMINER

MAKE AND MODEL OF TEST EQUIPMENT:\_\_\_\_\_

TYPE OF CONTROLS:\_\_\_\_\_

RESULTS: SATISFACTORY\_\_\_\_\_ UNSATISFACTORY\_\_\_\_\_

REMARKS: \_\_\_\_\_

\_\_\_\_\_

SIGNATURE:\_\_\_\_\_

## GROUP A - PRE-OPERATION INSPECTION

### 1. PRELIMINARY INSPECTION AROUND CRANE.

- \_\_\_\_\_ a. Ensure crane is currently certified before proceeding.
- \_\_\_\_\_ b. Check crane for tags or other operational restrictions or warnings.
- \_\_\_\_\_ c. Assure no repairs are in progress.
- \_\_\_\_\_ d. Perform inspections listed on the Operator's Daily Checklist (ODCL) and document on the ODCL. Do not operate crane until instructed by the examiner.
- \_\_\_\_\_ e. If accessible, check tracks for obstructions, misalignment, damage, loose connections, and conditions that may impact proper operation.
- \_\_\_\_\_ f. Check work area for hazards and obstacles. Request correction before proceeding when necessary.

### 2. FAMILIARITY WITH LUBRICATION REQUIREMENTS.

- \_\_\_\_\_ a. Check lubricant levels where accessible and identify points that may require lubrication during periods of operation.

## GROUP B - TESTING OPERATING CONTROLS

- \_\_\_\_\_ 1. Check to assure that all controllers are in the "Off" position.
- \_\_\_\_\_ 2. Energize the crane.
- \_\_\_\_\_ 3. If equipped, check action of deadman controls.
- \_\_\_\_\_ 4. Test action of hoist controller by raising, lowering, and stopping the hook.
- \_\_\_\_\_ 5. Test action of travel controllers and brakes by moving the crane back and forth a few feet. Check for proper brake action.
- \_\_\_\_\_ 6. Test trolley controllers and brakes by moving trolley back and forth a few feet. Check for proper brake action.



- \_\_\_\_\_ 7. Test limit switches and other safety devices.
- \_\_\_\_\_ 8. Check warning devices and gauges. Notify examiner of discrepancies.
- \_\_\_\_\_ 9. Document the operating test portion on the ODCL.

### GROUP C - OPERATING

Notes: (1) The accuracy standards indicated are considered minimum. The activity may impose more stringent standards based upon local or mission requirements.

(2) At no stage of the testing shall the operator allow the wire rope to become slack enough to loosen on the drum. This is an unacceptable practice and the examiner shall mark this action accordingly.

### PROBLEM 1 - TEST FOR ACCURACY

Place an open container or other suitable target within the operating range of the crane and near one corner of the test area. The target should be at least half the height of the hook block and approximately 12 inches in diameter larger than the largest dimension of the hook block. The crane shall be positioned so that the hook is over the diagonally opposite corner of the work area. The operator shall position the hook over the container or target. Simultaneous controller operation, i.e., both bridge and trolley travel, shall be tested as appropriate. The operator shall demonstrate proficiency in placing the hook in the container or at the target location.

Note: The following actions are considered unacceptable:

- \_\_\_\_\_ a. Striking. The operator shall not permit the hook to strike anything.
- \_\_\_\_\_ b. Operating abruptly. The operator shall not cause the hook to swing excessively while operating.
- \_\_\_\_\_ c. Contacting limit switches.

### PROBLEM 2 - LIFTING AND HANDLING HEAVY LOADS

The load to be lifted in this test should weigh between 25 percent and 50 percent of the crane's rated capacity. The operator shall be told to treat the load as a heavy load. Use of a test weight is recommended. After the load is staged, properly rigged, and attached to the hook, a line shall be drawn on the floor 4 inches beyond the perimeter

of the load. Upon receiving the proper signal, the operator shall lift the load just above the floor and test the operation of automatic brakes and foot brakes as appropriate. The operator shall be directed to move the load through a predetermined course that tests the operators ability to move the load. The course shall require diagonal movement or multiple controller movements as appropriate. The operator shall then return the load to the marked area. A rigger may assist by rotating the load, but shall not guide the load or direct load movement.

Note: The following actions are considered unacceptable:

- \_\_\_\_\_ a. Failing to keep safe distances. The operator shall not permit any part of the crane or load to pass too closely to obstructions.
- \_\_\_\_\_ b. Striking. The operator shall not permit the load or hook to strike the ground or any object or person.
- \_\_\_\_\_ c. Abrupt movement. The operator shall not cause the load to jerk, seesaw, or wobble due to movements of the crane.
- \_\_\_\_\_ d. Hoisting the load prematurely. The operator shall not hoist until the load has been properly secured, the rigger is clear of the load, and the hoist signal is given.
- \_\_\_\_\_ e. Failing to observe improper rigging. The operator shall inform the examiner whenever, in the opinion of the operator, the rigging appears to be improper or unsafe.
- \_\_\_\_\_ f. Snapping the load. The operator shall remove any slack in the hoist line using a low speed controller position or other appropriate method.
- \_\_\_\_\_ g. Failing to test brakes. Brakes shall be tested immediately after the load is lifted.
- \_\_\_\_\_ h. Endangering personnel. The operator shall not position the load over personnel and shall sound a warning gong or siren and wait for personnel to clear the area.
- \_\_\_\_\_ i. Improperly landing the load. The operator shall demonstrate proficiency in safely and smoothly landing the load within the marked perimeter.

### PROBLEM 3 - LIFTING AND HANDLING ODD-SHAPED OR SHIFTING LOADS

The operator shall lift and carry a light to moderately heavy load approximately twenty feet long over a predetermined course. Pipe, logs, beams, or loose lumber are

acceptable. A rigger shall give the operator directions using hand signals and control the load using tag lines.

Note: The following actions are considered unacceptable:

- \_\_\_\_\_ a. Placing the hook incorrectly. The operator shall demonstrate proficiency in locating the hook as required for the lift.
- \_\_\_\_\_ b. Hoisting prematurely. The operator shall not hoist until the load has been properly secured, the rigger is clear of the load, and the hoist signal is given.
- \_\_\_\_\_ c. Improper rigging. Failure to identify unsafe rigging.
- \_\_\_\_\_ d. Snapping the load. The operator shall remove any slack in the hoist line using a low speed controller position or other appropriate method.
- \_\_\_\_\_ e. Endangering personnel. The operator shall not position the load over personnel and shall sound a warning gong or siren and wait for personnel to clear the area.
- \_\_\_\_\_ f. Failing to keep safe distances. The operator shall not permit any part of the crane or load to pass too closely to obstructions.
- \_\_\_\_\_ g. Striking. The operator shall not permit the load or hook to strike the ground or any object or person. The load shall be safely and smoothly landed as directed.
- \_\_\_\_\_ h. Swinging abruptly. The operator shall not cause the hook to jerk, seesaw, or wobble due to movements of the crane.

#### GROUP D - SECURING THE CRANE

- \_\_\_\_\_ 1. Move the crane to the proper storage location.
- \_\_\_\_\_ 2. Place hook in the appropriate storage location, normally in its uppermost position, below any upper limit switch.
- \_\_\_\_\_ 3. Place all controllers in neutral.
- \_\_\_\_\_ 4. Secure the power supply and lock as appropriate.

(INTENTIONALLY LEFT BLANK)

## APPENDIX M - PROCEDURES FOR THIRD PARTY CERTIFICATION BY THE NAVY CRANE CENTER

Note: These procedures are for Navy owned cranes, derricks, container spreaders, and below the hook lifting devices. Non-Navy owned equipment (including rented, leased, and contractor owned and operated cranes, derricks, and other devices) requiring third party certification shall be certified to OSHA standards by a private OSHA accredited certification agency.

1 Cranes and Derricks. As prescribed in section 1, cranes and derricks used in longshoring operations, and floating cranes and floating derricks used in shipbuilding, ship repair, and shipbreaking are required by OSHA to be certified by an OSHA accredited certification agency. Certification requirements are addressed in 29 CFR 1915, 29 CFR 1917, 29 CFR 1918, and 29 CFR 1919. OSHA has recognized this publication as an alternate standard to those certification requirements for Navy owned cranes and derricks provided the certification is performed by the Navy Crane Center. It is Navy policy that this publication shall be used in lieu of the above noted CFR's as the standard for certification of Navy owned cranes and derricks used in the above noted operations. Therefore, all applicable Navy owned cranes and derricks shall be certified by a representative of the Navy Crane Center. This is in addition to the certification by the local certifying official required by this publication.

In addition to annual third party certification, a third party certification is required whenever an interim recertification is required per section 3.

1.1 Procedures. A certification will be granted by the Navy Crane Center "signatory authority" upon successful completion of the following:

- a. Documentation Review. The signatory authority shall ensure that documentation prescribed by this publication is complete, current, and correct. For floating cranes (including mobile cranes mounted on barges), ensure the material inspection report for the barge is current and indicates the barge is fit for further service per OPNAVINST 4780.6. Review documentation of the current depot availability and any approved deferrals of depot availability and ensure the requirements or conditions of the have been met.
- b. Condition Inspection. The signatory authority shall perform a condition inspection and complete the applicable portions of figure 3-3 (Crane Condition Inspection Record).
- c. Load Test. The signatory authority shall witness the activity's load test or other appropriate proof test.

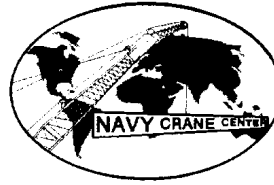
1.2 Certification. Upon successful completion of the procedures in paragraph 1.1, and upon certification by the activity certifying official, a Certificate of Unit Test and/or Examination of Crane, Derrick, or Other Material Handling Device, figure M-1, will be issued by the signatory authority. This certificate shall be posted in the operator's cab. A copy of the certificate shall be filed in the Equipment History File for the crane or derrick. In addition to retaining a copy of the certificate, the signatory authority shall forward copies to the Navy Crane Center and to the OSHA (Federal) Area Office having cognizance over the activity.

1.3 Deficiencies Precluding Certification. Should the signatory authority find deficiencies that preclude third party certification and the deficiencies can not be corrected immediately, a Notice to Owner of Deficiencies Found on Certification Survey, figure M-2, will be issued. This notice shall be posted in the operator's cab until the crane or derrick is certified by the signatory authority. In addition to retaining a copy of the notice, the signatory authority shall forward copies to the Navy Crane Center and to the OSHA Area Office.

2 Container Spreaders and Below the Hook Lifting Devices Used in Longshoring. This is a one-time third party certification. The signatory shall thoroughly inspect the entire assembly and review any associated documentation (design drawings, material lists, etc.). Upon satisfactory inspection, the signatory authority shall witness a load test at 125 percent of the rated load of the assembly. Upon successful completion of these procedures, a certificate (figure M-1) will be completed and signed by the signatory authority. The certificate shall be retained in the file for the particular device.

Naval Facilities Engineering Command - Navy Crane Center

**Certificate of Unit Test and/or Examination of  
Crane, Derrick, or Other Material Handling Device**



*This certificate may be issued only by persons specifically approved by the Navy Crane Center to comply with the Navy's Alternate Standard for Certification of Weight Handling Equipment. NAVFAC P-307 has been approved by the U.S Department of Labor, Occupational Safety and Health Administration, as an alternate means of compliance with the provisions of 29 CFR Part 1919.*

Certificate No. \_\_\_\_\_

1. Owner \_\_\_\_\_

2. Description (check): Crane \_\_\_\_\_ Derrick \_\_\_\_\_ Other (describe) \_\_\_\_\_

Location: (a) Remains at worksite \_\_\_\_\_ (b) Changes worksite \_\_\_\_\_ (c) Aboard vessel \_\_\_\_\_

If (a) or (c), describe: \_\_\_\_\_

If crane, type (truck, rail, etc): \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model \_\_\_\_\_ Serial No. \_\_\_\_\_

If derrick, describe: \_\_\_\_\_

Owner's identification, if any: \_\_\_\_\_

3. Service status at time of survey (check): Lifting \_\_\_\_\_ Clamshell \_\_\_\_\_ Magnet \_\_\_\_\_

Other, describe: \_\_\_\_\_

4. Boom at time of survey (except bridge cranes): Length \_\_\_\_\_ Type \_\_\_\_\_

5. Test loads applied (cross out if only examination conducted):

Radius	Proof Loads (TEST LOAD)	Rated Loads
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____

Means of application of proof load: \_\_\_\_\_

Basis for assigned load ratings: \_\_\_\_\_

6. Remarks and/or limitations imposed: \_\_\_\_\_

7. Load indicating or limiting device (check): Fitted \_\_\_\_\_ Not fitted \_\_\_\_\_ Accuracy \_\_\_\_\_

I certify that on the \_\_\_\_\_ day of \_\_\_\_\_, 19\_\_\_\_, the above described device was (tested and examined) (examined) by the undersigned or his/her authorized representative; that said (test and examination) (examination) met in all respects with the requirements of NAVFAC P-307, an OSHA approved alternate standard for compliance with the provisions of 29 CFR Part 1919; any deficiencies considered to constitute an unsatisfactory condition have been corrected; and that the device has been found to be in compliance in all applicable respects with the governing requirements.

Name and address of accredited or otherwise authorized organization making the test and/or examination:

Navy Crane Center, 10 Industrial Hwy., Mail Stop #82, Lester, PA 19113-2090.

Name and address of authorized person carrying out the test and/or examination: \_\_\_\_\_

Position of signatory in the organization making the test and/or examination: \_\_\_\_\_

Distribution:

Original - Owner (post in operator cab)

Copies to - Owner (equipment history file)

Certifier

OSHA Area Office

Navy Crane Center

Signature \_\_\_\_\_

Date \_\_\_\_\_

FIGURE M-1



Naval Facilities Engineering Command - Navy Crane Center



## Notice to Owner of Deficiencies Found on Certification Survey

*This notice may be issued only by persons specifically approved by the Navy Crane Center to comply with the Navy's Alternate Standard for Certification of Weight Handling Equipment. NAVFAC P-307 has been approved by the U.S. Department of Labor, Occupational Safety and Health Administration, as an alternate means of compliance with the provisions of 29 CFR Part 1919.*

1. Owner \_\_\_\_\_

2. Identification, location, and specific description of equipment \_\_\_\_\_

3. The undersigned, being authorized to do so, hereby tenders notification of the following listed uncorrected deficiencies, found upon (test and examination) (examination) of the described equipment in accordance with the requirements of NAVFAC P-307, to constitute in the opinion of the undersigned a currently unsatisfactory condition.


4. Under the applicable requirements of NAVFAC P-307, an OSHA approved alternate standard for compliance with the provisions of 29 CFR Part 1919; the issuance of any certificate of (test and examination) (examination) is prohibited until such time as correction of deficiencies has been verified by the undersigned. It is further required that the certifying authority notify the nearest local office of the Occupational Safety and Health Administration of the above circumstances, by copy of this notice.

5. Name and address of accredited or otherwise authorized organization making the test and/or examination:

Navy Crane Center, 10 Industrial Hwy., Mail Stop #82, Lester, PA 19113-2090.

6. Name and address of authorized person carrying out the test and/or examination:

7. Position of signatory in the organization making the test and/or examination:

Distribution:

Original - Owner (post in operator cab)

Copies to - Certifier

OSHA Area Office  
Navy Crane Center

Signature \_\_\_\_\_

Date \_\_\_\_\_

FIGURE M-2

## APPENDIX N - PERSONNEL QUALIFICATIONS

- 1 The following personnel who perform functions addressed in this publication shall be trained in, and/or demonstrate (to the satisfaction of their supervisors) adequate knowledge and/or skill in, the areas listed below. Category 3 crane operators shall be trained, and demonstrate proficiency, in the areas noted in paragraph 1.4 below.

2

Note: Specific qualification requirements for licensed operators are identified in sections 7 and 8.

### 1.1 Maintenance Personnel (Mechanics and Electricians)

- a. Proper use and care of precision instruments and recording of measurements.
- b. Lockout/tagout procedures.
- c. Maintenance requirements for components (e.g., brakes, clutches, drive trains, motors, controls) integral to the operation of WHE within the person's technical discipline.
- d. For mechanics, basic electrical safety; for electricians, familiarity with the National Electrical Code (NEC).
- e. Proper fastening and lubricating techniques.

### 1.2 Inspector

- a. Requirements of sections 2, 3, and 5, and appendices C, D, and E of this publication.
- b. For mechanical inspectors, inspection requirements for crane structure, brakes, clutches, drive trains, wire rope, and other mechanical components integral to the operation of WHE.
- c. For electrical inspectors, NEC requirements as well as inspection requirements for electrical motors, motor control circuits, and other electrical components integral to the operation of WHE.
- d. Proper use and care of precision instruments and recording of measurements.
- e. Lockout/tagout procedures.

### 1.3 Load Test Director

- a. Requirements of section 3 and appendices C, D, and E of this publication.

- b. Proper use and care of precision instruments and recording of measurements.
- c. Lockout/tagout procedures.
- d. Calculation of weight for load tests.
- e. General knowledge of the operational characteristics of the WHE and components being tested.
- f. Ability to interpret OEM load charts.
- g. Limits of stability of the WHE being tested.
- h. Proper crane communications, i.e., hand signals (See figures 10-1 and 10-2), radio communications, etc.

1.4 Operator of Non-Cab Operated Category 3 WHE. (For the specific type of equipment being operated and the types of lifts the operator will be required to make.)

- a. Operation of the equipment.
- b. Determining the weights of loads.
- c. Determining the center of gravity of loads.
- d. Planning the crane/load movement path and checking for clearances.
- e. Selecting and properly using appropriate rigging equipment.
- f. Basic knots, bends, and hitches, and their use.
- g. Performing necessary calculations to determine the allowable capacity of rigging configurations.
- h. Selecting appropriate attachment points on loads to be lifted.
- i. Performing prior-to-use visual inspections of rigging equipment.
- j. Performing prior-to-use inspection and operation of WHE being operated.
- k. Directing of other personnel assisting in the rigging evolution.
- l. Accident and equipment deficiency problem recognition and reporting procedures.

m. Proper crane communications, i.e., hand signals (See figures 10-1 and 10-2), radio communications, etc.

#### 1.5 Rigger (including Ordnance Handler)

- a. Determining the weights of loads.
- b. Determining the center of gravity of loads.
- c. Planning the crane/load path and checking for clearances.
- d. Selecting and properly using appropriate rigging equipment.
- e. Basic knots, bends, and hitches and their use. (Not required for ordnance handlers when rigging configurations are in accordance with the configurations shown in NAVSEA OP2173).
- f. Performing necessary calculations to determine the allowable capacity of rigging configurations. (Not required for ordnance handlers when rigging configurations are in accordance with the configurations shown in NAVSEA OP2173).
- g. Selecting appropriate attachment points on loads to be lifted.
- h. Performing prior-to-use visual inspections of rigging equipment.
- i. Proper crane communications, i.e., hand signals (See figures 10-1 and 10-2), radio communications, etc.
- j. Coordinating activities of other personnel assisting in the lift (when designated as Rigger-in-Charge).
- k. General knowledge of mobile crane configuration variations and load chart limitations.
- l. The requirements of section 10 (as applicable to riggers) and section 14 of this publication.

#### 1.6 Crane Walker

- a. Acceptable methods for initiating emergency stop actions and an understanding of when such actions are appropriate.
- b. Acceptable rail switch alignment requirements.



- c. Requirements for inspecting the crane travel path.

## 2 Supervisors

2.1 Operator Supervisors. Crane Operator Supervisors shall be trained in or demonstrate adequate knowledge in the following areas:

- a. Conducting pre-job briefings.
- b. Assessing personnel qualifications to operate specific cranes and how to determine that those qualifications are current.
- c. Familiarity with safe operating practices, including the requirements of section 10 of this publication.

2.2 Rigger Supervisors. Rigger Supervisors (for weight handling evolutions) shall be trained in or demonstrate adequate knowledge in the following areas:

- a. Conducting pre-job briefings.
- b. Assessing personnel qualifications to perform specific operations and how to determine that those qualifications are current.
- c. Knowledge and abilities noted for Rigger in paragraph 1.5 above, including the requirements of sections 10 and 14 of this publication.

3 Engineers. Engineers performing work in support of WHE shall:

- a. Be technically competent in their particular engineering discipline.
- b. For crane engineers, be knowledgeable of the design fundamentals of WHE and MIL-HDBK-1038, and the requirements of sections 2 through 5 and appendices C through F of this publication.
- c. For rigging engineers, be knowledgeable of ASME B30.9, military and federal standards for rigging gear, and sections 10 and 14 of this publication.

4 WHE Certifying Officials. WHE Certifying Officials shall be trained in or demonstrate adequate knowledge in the application of the requirements of this manual for inspection, maintenance, testing, and certification of WHE.





APPENDIX O  
NAVY CRANE CENTER POLICY AND  
GUIDANCE FOR CRANE ALTERATION REQUESTS

1. The Navy Crane Center (NCC) will review alteration requests identified as urgent by the activity on a highest priority basis.
2. The scope of NCC reviews will be limited to the specific subject of the submitted request. When a peripheral non-compliance or unsafe condition is noted, NCC will address it as an advisory comment to the activity.
3. Appropriate activity industrial process instructions will be accepted where applicable.
4. Fatigue shall be analytically addressed in requests dealing with new shafts or other components subject to fatigue. For shafts, the analysis shall be performed in accordance with ANSI B106.1M, Design of Transmission Shafting.
5. Alteration requests addressing shaft misalignment shall show parallel and angular alignment measurements and measurement techniques to be utilized for the measurements. The coupling OEM's initial, running, and ultimate alignment tolerances, as well as details of alignment securing features such as shear bars, pins, bolts, etc. shall also be shown.
6. Alteration requests addressing components that experience lateral or shear loads designed to be resisted by shear bars shall include calculations and installation procedures demonstrating design assumptions are satisfied.
7. Replacement of brake components with OEM's approved equivalent or optional components (such as stiffer springs) shall be handled as a locally approved alteration. Introduction of non-standard components shall be approved by NCC.

(INTENTIONALLY LEFT BLANK)

## APPENDIX P – CONTRACTOR CRANE REQUIREMENTS

<b>CERTIFICATE OF COMPLIANCE</b>	
This certificate shall be signed by an official of the company that provides cranes for any application under this contract. Post a completed certificate on each crane brought onto Navy property.	
PRIME CONTRACTOR /PHONE:	CONTRACT NUMBER:
CRANE SUPPLIER/PHONE: (if different from prime contractor)	CRANE NUMBER: (i.e., ID number)
CRANE MANUFACTURER/TYPE/CAPACITY:	
CRANE OPERATOR'S NAME(S):	
<p>I certify that:</p> <p>1. The above noted crane conforms to applicable OSHA regulations (host country regulations for naval activities in foreign countries). The following regulations apply: _____</p> <p>2. That the operators noted above have been trained and are qualified for the operation of the above noted crane.</p> <p>3. That the operators noted above have been trained not to bypass safety devices during lifting operations.</p>	
COMPANY OFFICIAL SIGNATURE:	DATE:
COMPANY OFFICIAL NAME/TITLE:	
<b>POST ON CRANE</b> (IN CAB OR VEHICLE)	

FIGURE P-1

CONTRACTOR CRANE OPERATION CHECKLIST			
		YES	NO
1	Does the operator know the weight of the load to be lifted?		
2	Is the load to be lifted within the crane manufacturer's rated capacity in its present configuration?		
3	Is the crane level and on firm ground?		
4	Are outriggers required?		
5	If so, are outriggers fully extended and down, and the crane load off the wheels?		
6	If blocking is required, is the entire surface of the outrigger pad supported and is the blocking material of sufficient strength to safely support the loaded outrigger pad?		
7	If outriggers are not used, is the crane rated for on-rubber lifts by the manufacturer's load chart?		
8	Is the swing radius of the crane counterweight clear of people and obstructions and accessible areas within the swing area barricaded to prevent injury or damage?		
9	Has the hook been centered over the load in such a manner to minimize swing?		
10	Is the load well secured and balanced in the sling or lifting device before it is lifted more than a few inches?		
11	Is the lift and swing path clear of obstructions?		
12	If rotation of the load being lifted is hazardous, is a tag or restraint line being used?		
13	Are personnel prevented from standing or passing under a suspended load?		
14	Is the crane operator's attention diverted?		
15	Are proper signals being used at all times?		
16	Do the operations ensure that side loading is prohibited?		
17	Are personnel prevented from riding on a load?		
18	Are start and stop motions in a smooth fluid motion (no sudden acceleration or deceleration)?		
19	If the load is to be suspended and left unattended, have prior planning and written procedures been completed?		
20	If operating near electric power lines, are the rules and guidelines understood and adhered to?		
21	Is the lift a critical lift?		
22	If so, are all regulations understood and check-off sheets initialed and signed off?		
Contractor:		Subcontractor:	
Location:		Date:	
Notes:			

FIGURE P-2

## APPENDIX Q - REFERENCES

Note: When referring to the following criteria, the latest edition or revision shall apply.

1. DOD Handbook MIL-HDBK-1038, *Weight Handling Equipment*, Department of Defense, Washington, D.C.
2. SECNAV Instruction 4440.31, *Management of Civil Engineering Support Equipment and Material Handling Equipment*, Department of the Navy, Office of the Secretary, Washington, D.C.
3. SECNAV Instruction 11260.2, *Navy Weight Handling Program for Shore Activities*, Department of the Navy, Office of the Secretary, Washington, D.C.
4. OPNAV Instruction 4780.6, *Procedures for Administering Service Craft and Boats in the U.S. Navy*, Department of the Navy, Office of the Chief of Naval Operations, Washington, D.C.
5. OPNAV Instruction 4790.2, *The Naval Aviation Maintenance Program (NAMP)*, Department of the Navy, Office of the Chief of Naval Operations, Washington, D.C.
6. OPNAV Instruction 4790.4, *Ships' 3-Maintenance Material Management*, Department of the Navy, Office of the Chief of Naval Operations, Washington, D.C.
7. OPNAV Instruction 5102.1, *Mishap Investigation and Reporting*, Department of the Navy, Office of the Chief of Naval Operations, Washington, D.C.
8. OPNAV Instruction 5100.23, *Navy Occupational Safety and Health (NAVOSH) Program*, Department of the Navy, Office of the Chief of Naval Operations, Washington, D.C.
9. NAVFAC Guide Specification NFGS-01525, *Safety Requirements*, Department of the Navy, Naval Facilities Engineering Command, Alexandria, VA.
10. NAVFAC Instruction 11200.33, *Weight Handling Equipment Audits, Validations, and Third Party Certifications; Procedures for Conducting*, Department of the Navy, Naval Facilities Engineering Command, Alexandria, VA.
11. NAVFAC Instruction 11230.1, *Inspection, Certification, and Audit of Crane and Railroad Trackage*, Department of the Navy, Naval Facilities Engineering Command, Alexandria, VA.
12. NAVFAC P-300, *Management of Transportation Equipment*, Department of the Navy, Naval Facilities Engineering Command, Alexandria, VA.

13. NAVFAC MO-324, *Inspection and Certification of Boilers and Unfired Pressure Vessels*, Department of the Navy, Naval Facilities Engineering Command, Alexandria, VA.
14. NAVFAC MO-118, *Inspection of Vertical Transportation Equipment*, Department of the Navy, Naval Facilities Engineering Command, Alexandria, VA.
15. *NAVSEA Crane Quality Manual*, Department of the Navy, Naval Sea Systems Command, Washington, D.C.
16. NAVSEA 0989-030-7000, *Lifting Standard*, Department of the Navy, Naval Sea Systems Command, Washington, D.C.
17. NAVSEA OP 5, Volume 1, *Ammunition and Explosives Ashore: Safety Regulations for Handling, Storing, Production, Renovation and Shipping*, Department of the Navy, Naval Sea Systems Command, Washington, D. C.
18. NAVSEA Technical Publication T9074-AS-GIB-010/271, *Requirements for Nondestructive Testing Methods*, Department of the Navy, Naval Sea Systems Command, Washington, D.C.
19. Naval Ships' Technical Manual S9086-UU-STM-010, "Chapter 613: Wire and Fiber Rope and Rigging," Department of the Navy, Naval Sea Systems Command, Washington, D.C.
20. Naval Ships' Technical Manual, S9086-T4-STM-010, Chapter 589, "Cranes," Department of the Navy, Naval Sea Systems Command, Washington, D.C.
21. EM 385-1-1, *Safety and Health Requirements Manual*, Department of the Army, U.S. Army Corps of Engineers, Washington, D.C.
22. Federal Specification for Wire Rope RR-W-410, *Wire Rope and Strand*
23. Code of Federal Regulations, Title 29, Subpart B, Chapter XVII, Part 1910, "Occupational Safety and Health Standards;" Part 1915, "Occupational Safety and Health Standards for Shipyard Employment;" Part 1917, "Marine Terminals;" Part 1918, "Safety and Health Regulations for Longshoring;" Part 1919, "Gear Certification;" Part 1926, "Safety and Health Regulations for Construction;" Occupational Safety and Health Administration (OSHA), Office of the Federal Register, National Archives and Records Administration, Washington, D.C.
24. U.S. Department of Transportation, Federal Highway Administration, Motor Carrier Safety Regulation, 49 Code of Federal Regulations, Part 391 Sections 41-43, "Physical Qualifications and Examinations."

25. ASME B30.2 through B30.11, B30.16, B30.17, and B30.20 through B30.22, "Safety Standards for Cableways, Cranes, Derricks, Hoists, Hooks, Jacks, and Slings," American Society of Mechanical Engineers, New York, NY.

26. ASTM E 1417, "Standard Practice for Liquid Penetrant Examination," and E 1444, "Standard Practice for Magnetic Particle Examination," American Society for Testing and Materials, Philadelphia, PA.

27. SAE J765, *Crane Load Stability Test Code*, Society of Automotive Engineers, Inc., Warrendale, PA.

28. OCPM Instruction 12792.3, *Department of the Navy Drug Free Workplace Program*, Department of the Navy, Office of Civilian Personnel Management, Washington, D.C.

(INTENTIONALLY LEFT BLANK)



## APPENDIX R - RELATED DOCUMENTS

Note: When referring to the following criteria, the latest edition or revision shall apply.

1. OPNAV Instruction 5450.218, *Mission, Functions and Tasks of Commander, Naval Facilities Engineering Command Headquarters*, Department of the Navy, Office of the Chief of Naval Operations, OP-44, Washington, D.C.
2. NAVFAC Instruction 11450.1, *Management of Weight Handling Equipment*, Department of the Navy, Naval Facilities Engineering Command, Alexandria, VA.
3. NAVSUP Instruction 10490.33, *Material Handling Equipment; Administration and Control of (SUP 0622)*, Department of the Navy, Naval Supply Systems Command, Washington, D.C.
4. NAVSUP Publication 538, *Materials Handling Equipment Maintenance Manual*, Department of the Navy, Navy Supply Systems Command, Washington, D.C.
5. ANSI/AWS D1.1, *Structural Welding Code*, American Welding Society, Miami, FL.
6. CMAA #70, *Specifications for Electric Overhead Traveling Cranes*, Crane Manufacturers Association of America, Inc., Charlotte, NC.
7. CMAA #74, *Specifications for Top Running and Under Running Single Girder Electric Traveling Cranes Utilizing Under Running Trolley Hoist*, Crane Manufacturers Association of America, Inc., Charlotte, NC.
8. *Bob's Rigging and Crane Manual*, Bob De Benidictus, Inc. Crane and Rigging Safety Consultants, Boone, N.C.
9. *Crane Handbook*, Construction Safety Association of Ontario, Etobicoke, Ontario, Canada.
10. *Handbook for Riggers*, W.G. Newberry, Canada.
11. *Handbook of Rigging for Construction and Industrial Operations*, McGraw Hill book Company, New York, NY.
12. *IPT's Crane and Rigging Handbook*, IPT Publishing and Training Inc., Alberta, Canada.
13. *Mobile Craning Today*, Operating Engineers Training Institute of Ontario, Ontario, Canada.

14. *Rigging Handbook, The Complete Industrial Reference*, Jerry A. Klinke, ACRA Publishing, Stevensville, MI.
15. *Rigging Manual*, Construction Safety Association of Ontario Etobicoke, Ontario, Canada.
16. *Standard Code of Operating Rules for Railroads*, Association of American Railroads, Chicago, IL.
17. Weaver, W.M., *Whiting Crane Handbook*, Whiting Corporation, Harvey, IL.
18. *Wire Rope Users Manual*, Wire Rope Technical Board, Stevensville, MD.
19. *Wire Rope Sling Users Manual*, Wire Rope Technical Board, Stevensville, MD.

## INDEX

Accident	
Action.....	12-2
Definition.....	12-1
Discussion .....	12-1
Investigation and Reporting .....	12-2
Adverse Operating Conditions .....	4-2, 10-7
Aircraft and Helicopter Crash Cranes, Rated Capacity .....	1-2, 6-1, 11-3, I-1
Alterations (See Crane Alterations)	
Ancillary Equipment on Mobile Cranes, Exception for.....	3-4
Annual Certification .....	2-3, 3-1
Annual Inspections (Category 2 and 3 Cranes) .....	2-4, Appendix D
Annual Inspections (Category 4 Cranes) .....	2-4
Applicable Equipment.....	1-1
Application for Crane Operator License .....	8-1
Area Safety.....	9-5
Articulating Boom Cranes.....	11-3
Balance Point Loads .....	11-1
Battery .....	9-4
Below the Hook Lifting Devices .....	14-18
Biennial Load Test Program .....	3-1
Block .....	9-2
Boom and Jib.....	9-2
Boom Angle and Radius Indicator .....	9-5
Boom Damage, Telescoping Booms .....	4-6
Boom Lacing Damage .....	4-6
Boom Length Indicator (Telescoping Boom Cranes).....	11-6
Boom Main Chord Damage .....	4-5
Boom Stops .....	9-2, 10-6
Brakes .....	1-3, 2-5, 3-2, 4-3, 9-4, 9-6, 10-10, 13-1, 14-1
Capacity Ratings .....	11-1
Capstans .....	13-1
Carrier Frame .....	9-2
Category 1 Cranes .....	1-2, 2-3
Category 2 Cranes .....	1-2, 2-4
Category 3 Cranes .....	1-2, 2-4
Category 4 Cranes .....	1-2, 2-4
Certification, Line Handling Mechanisms .....	13-2
Certification Program.....	3-1
Action.....	3-1
Date .....	3-1
Frequency.....	3-1
Certifying Official .....	1-4

Chain Inspection Criteria .....	C-7, D-5
Chain Sling	
Inspection Criteria.....	14-5
Rejection Criteria .....	14-5
Use Criteria.....	14-6
Chainfalls.....	14-18
Changes to OEM Rated Capacity .....	4-2
Chocks.....	9-3
Clarification, Request for .....	1-9
Clearance from Obstructions.....	10-9
Clutches .....	3-2, 9-4
Commercial Truck Mounted Cranes, Rated Capacity .....	11-3
Communications During Lifts.....	10-5
Complex Lifts.....	10-3
Identification and Procedures .....	10-4
Component Setting Adjustments .....	4-4
Compressor .....	9-3
Condition Inspection.....	3-6, 13-2
Container Spreaders .....	14-4
Continuance for Productive Service, Exception for .....	3-4
Contractor Crane Certificate of Compliance.....	P-1
Contractor Crane Operation Checklist .....	P-2
Contractor Operated Cranes .....	1-6
Contracting Officer Responsibilities .....	1-8
Control Action .....	9-4
Control of Applications for Tests and Licenses .....	8-1
Controlled Disassembly and Re-assembly, Exception for .....	3-3
Controls .....	9-4
Covered Equipment, Rigging Gear and Misc. Equipment .....	14-1
Crane Accident	
Action.....	12-2
Definition.....	12-1
Discussion .....	12-1
Investigation and Reporting .....	12-2
Crane Alterations.....	1-4, 4-1
Additional Requirements and Exemptions .....	4-2
Administrative Related Changes .....	4-2
Based on Prior Navy Crane Center Approval .....	4-2
Environmental Related Changes .....	4-2
Equipment Related Changes .....	4-2
Exceptions .....	4-5
Fabrication to Original Specifications .....	4-3
Locally Approved .....	4-2
Navy Crane Center Approved .....	4-1

OEM Changes .....	4-3
Operational Related Changes .....	4-2
Records .....	4-7
Request Form .....	4-1, 4-8
To Microprocessor Controlled Cranes .....	4-5
To OEM's Rated Capacity of WHE .....	4-2
Components that Pre-Date MIL-HDBK-1038 .....	4-6
Crane Operating Envelope .....	12-1
Crane Safety Advisories .....	11-6
Crane Safety Course .....	7-2
Crane Team .....	10-1
Crane Walker .....	10-1
Cranes Equipped with Outriggers and Outriggers not Deployed .....	11-3
Cranes Integral to Larger Machine Systems .....	14-18
Cranes not Equipped with Outriggers, Rated Capacity .....	11-3
Damaged Crane Booms .....	4-5
Deferral of Work .....	2-3
Deficiencies, Reportable .....	2-1
Definitions, Special .....	1-3
Designation of Certification Personnel .....	3-1
Deviation, Request for .....	1-9
Drug Free Workplace Program (DFWP) .....	7-1
Electric Motors .....	9-4
Electrical Power Lines, Proper Clearance .....	10-9, 10-17
Electromagnetic Interference Susceptibility .....	10-6
Emergency Brakes on Wire Rope Drums .....	E-5
Emergency Stops .....	9-5
End Connections, Wire Rope .....	11-3
Engines .....	9-3
Equipment Deficiency Memoranda .....	11-6
Equipment Familiarity Checkouts .....	6-1
Equipment History File .....	5-1, 13-3
Equipment Markings .....	14-1
Equipment Weights and Marking .....	10-5
Examiner .....	8-2
Exceptions, Military Unique Operation .....	1-1
Extension of Certification for Emergent Conditions, Exception for .....	3-3
Extension of Inspection and Maintenance Schedules .....	2-6
Eye Bolts .....	14-15
Fire Extinguishers .....	9-4, 9-5
Fleeting Sheave .....	9-6
Free Rated Capacities .....	11-3
Gantry .....	9-2
Gauges .....	9-4

General Operating Precautions.....	10-6
General Safety Devices.....	1-4, 9-5
Glass .....	9-4
Hand Signals .....	10-13
Handrails .....	9-3
Hardware .....	9-2
Hoist Roll Back .....	3-7
Hoisting and Lowering the Load.....	10-10
Hook .....	9-2
Hook Identification.....	E-2
Hook Inspection and Testing.....	E-1
Housekeeping .....	9-3
Incidental Licenses for Operation by Maintenance and Inspection Personnel.....	6-2
Indicator and Warning Lights .....	9-4
Industry Consensus Standard Equivalents.....	4-3
Inspection, Operator.....	9-1
Inspection Action, Lubrication and Servicing .....	2-5
Inspection and Corrective Action.....	2-2
Inspection Specifications.....	2-1
Insulated Links .....	C-12, D-7, E-2
Interchangeability .....	4-3
Interim Recertification.....	3-2
Interim Recertification Requirements for WHE in Relocatable Buildings .....	3-5
Introduction, Manual.....	1-1
Introduction, Rigging .....	14-1
Ladders .....	9-3
Language Ability.....	7-2
Lashing.....	14-18
Leaks .....	9-3
Level Ground.....	11-1
Lever Operated Hoists .....	14-18
License, Crane Operator	
Applicability.....	6-1
Application .....	8-1
Authorization.....	8-2
Authorized Operation.....	6-1
Capacity .....	8-2
Crane Safety Course .....	7-2
Date Issued.....	8-2
Disqualification, Grounds for .....	7-1
Expiration.....	8-3
Files .....	8-4
Form and Content.....	8-1
Identification .....	8-1

Issuance .....	8-3
Number .....	8-2
Operation by Maintenance and Inspection Personnel .....	6-2
Performance Tests.....	7-3
Personal and Physical Qualifications .....	7-1
Physical Faculties and Fitness .....	7-1
Physical Qualification Requirements, Deviations from .....	7-1
Possession of .....	6-1
Qualification and Testing.....	7-1
Qualified to Operate .....	8-2
Record .....	8-3
Renewal Procedure .....	8-3
Restrictions.....	8-2
Revocation.....	8-4
Suspension .....	8-3
Test Equipment.....	7-3
Test Facilities.....	7-3
Test Reports .....	7-2
Type of Control .....	8-2
Use and Limitations of .....	6-1
Validity .....	8-2
Written Test for Operators.....	7-2, I-1, J-1
Licensing Procedures and Documentation.....	8-1
Licensing Program Personnel, Designation of .....	6-2
Lifting of Personnel.....	10-6
Lifting Operations .....	10-3
Limit Switches.....	9-6
Line Handling Mechanisms	
Condition Inspection, Load Test, and Certification.....	13-2
Equipment History File .....	13-3
General.....	13-1
Lubrication and Servicing .....	13-3
Operator Check .....	13-1
Preventive Maintenance .....	13-1
Links and Rings.....	14-14
General Inspection .....	14-14
Repairs .....	14-15
Use Criteria.....	14-15
List and Trim Indicator (Floating Cranes) .....	9-5
Load Bearing Parts.....	1-3, F-1
Load Control.....	10-11
Load Controlling Parts.....	1-3, F-2
Load Rating Charts .....	9-5
Load Test, Line Handling Mechanisms .....	13-2

Load Test, Rigging Gear and Misc. Equipment.....	14-2
Load Test and Recertification Requirement.....	3-2
Load Testing.....	3-6
Load Tests	
Hammerhead Cranes.....	E-16
Jib, Pillar, Pillar Jib, Monorail, and Fixed Overhead Hoist.....	E-26
Mobile Cranes.....	E-17
Overhead, Wall, and Gantry Cranes .....	E-23
Portal and Floating Cranes.....	E-3
Tower Cranes and Derricks .....	E-16
Loading in Excess of Certified Capacity .....	3-5
Locally Approved Crane Alterations .....	4-2
Lockout/Tagout Procedures .....	11-6
Locomotive Cranes, Stability.....	11-1
Longshoring Cranes, Third Party Certification .....	1-4, M-1
Longshoring Operations .....	1-5
Lubrication.....	2-5, 9-4
Lubrication and Servicing, Documentation.....	2-5
Machinery House Inspection .....	9-3
Maintenance Inspection Type and Frequency .....	2-3
Maintenance Inspections.....	2-1
Major Deficiency .....	1-4, 3-6
Mandatory Crane Alterations.....	4-1
Margin of Stability.....	11-1
Metal Mesh Slings .....	14-9
Inspection Criteria.....	14-9
Rejection Criteria .....	14-9
Use Criteria.....	14-10
Mobile Cranes Temporarily Mounted on Barges .....	3-7, 10-11
No Load Test.....	9-6
Non-Applicable Equipment.....	1-8
Non-Destructive Test	
Hooks.....	E-2
Insulated Links.....	E-3
Non-Navy Owned Cranes at Naval Activities .....	1-6
Non-Shouldered Eyebolts .....	14-16
OEM's Operation Manual .....	10-3
OEM's Supplemental Safety Information .....	10-3
OEM's Supplemental Service Information .....	2-2
Oil Analysis.....	5-2, C-6, D-3
Operating Envelope.....	12-1
Operating Inspection .....	9-5
Operating Precautions.....	10-7
Operation Safety .....	10-1



Operation Safety Procedures .....	10-1
Operational Safety Devices.....	1-3, 9-5, F-2
Operator, Other Qualifications .....	7-1
Operator Cab Inspection .....	9-4
Operator Check, Line Handling Mechanisms .....	13-1
Operator Check (Non-Cab Operated Category 3 Cranes) .....	9-6
Operator Condition .....	10-2
Operator Detected Deficiencies .....	9-7
Operator Inspections .....	9-1
Operator Licensing Program (See License, Crane Operator)	
Operator Responsibilities .....	10-2
Operator Safety Procedures.....	10-1
Operator's Daily Checklist (ODCL) Documentation.....	9-1
Outriggers/Stabilizers and Locking Devices.....	9-3
Overhead Electrical Transmission Lines .....	10-9
Pendants .....	9-2
Performance Tests, Evaluating and Grading .....	7-3
Performance Test for Operators.....	7-3, K-1, L-1
Periodic Inspection, Rigging.....	14-4
Portable A-Frames .....	14-18
Portable Floor Cranes .....	14-18
Portable Gantries .....	14-18
Portable Hoists .....	14-18
Portable Load Indicating Devices (Dynamometers, Load Cells, etc.) .....	14-18
Positioning the Boom.....	10-10
Positioning the Crane for Stability .....	10-8
Pre-lift Preparation .....	10-4
Pre-Use Check (Non-Cab Operated Category 3 Cranes) .....	9-6
Pre-Use Check (Category 1, 2, 4 and Cab Operated Category 3 Cranes) .....	9-1
Machinery House Inspection .....	9-3
Operating Inspection .....	9-5
Operator Cab Inspection.....	9-4
Submission of Reports.....	9-6
Walk Around Inspection.....	9-1
Pre-Use Inspection, Rigging Gear and Misc. Equipment .....	14-4
Preventive Maintenance, Line Handling Mechanisms.....	13-1
Purpose of Manual .....	1-1
Qualifications of Personnel .....	1-4
Radius Indicator .....	9-3, 9-5
Rated Capacity .....	11-3
Recalibration, Exceptions for.....	3-5
Recertification Not Required, Travel Components on Portal Cranes .....	3-2
Record Formats.....	1-8
Record Keeping, Rigging Gear and Misc. Equipment .....	14-1

Reeving .....	9-2
Reinspection.....	2-3
Relocatable Buildings, Interim Certification Requirements .....	3-5
Rented or Leased Cranes .....	1-6
Repairs .....	4-4
Repairs and Alterations, Rigging Gear and Misc. Equipment .....	14-4
Replacement Parts .....	2-3, 4-3
Reportable Deficiencies .....	2-1
Resin Sockets.....	11-3
Revision, Request for .....	1-9
Rigger.....	
Rigger-in-Charge.....	10-1
Rigging Gear and Miscellaneous Equipment .....	14-1
Rigging Used in Load Testing .....	E-3
Rotate Base.....	9-2
Rotating the Load .....	10-10
Routine Lifts .....	10-4
Safety Course for Operators.....	7-2, G-1, H-1
Safety Devices.....	1-3, 10-2, F-2
Safety Guards and Plates.....	9-2
Securing the Crane .....	10-11
Selective Load Test.....	3-2, 3-7
Servicing.....	2-5, 13-3
Shackles.....	14-14
General Inspection .....	14-14
Use Criteria.....	14-15
Sheaves.....	9-2
Ship Repair.....	1-4
Shipbreaking .....	1-4
Shipbuilding.....	1-4
Shop Repair Order .....	2-2
Shoulder Eye bolts .....	14-15
Slewing Ring Bearings .....	2-5, 5-2, C-9
Slings .....	14-4
Specification Data Sheets .....	2-1
Speltered Sockets .....	11-3
Stability.....	9-6
Stability Factors.....	11-3
Stability Testing and Calibration, Used and Altered Cranes .....	11-1
Standing Crane Alterations .....	4-2
Stops .....	9-2
Submission of Reports, ODCL .....	9-6
Swaged Connections.....	11-4
Swivel Hoist Rings.....	14-17

Swivels .....	14-14
Synthetic Rope Slings .....	14-10
Inspection Criteria.....	14-10
Rejection Criteria .....	14-10
Use Criteria.....	14-11
Synthetic Roundslings.....	14-12
Inspection Criteria.....	14-12
Rejection Criteria .....	14-13
Repairs .....	14-13
Use Criteria.....	14-13
Synthetic Slings.....	14-10
Synthetic Webbing Slings .....	14-12
Inspection Criteria.....	14-12
Rejection Criteria .....	14-12
Use Criteria.....	14-12
Tackle Blocks .....	14-17
Technical Bulletin .....	4-3
Telescoping and Articulating Boom Damage .....	4-6
Test and Inspection Program, Rigging Gear and Misc. Equipment.....	14-2
Test Loads.....	3-7, E-1, E-17
Test Speeds .....	3-7
Test Weights .....	3-7
Testing and Recertification.....	4-6
Third Party Certification.....	1-4
Tipping.....	11-1
Tires .....	9-3
Tracks.....	9-3
Travel Components .....	3-2
Traveling the Crane.....	10-11
Truck, Cruiser, and Crawler Cranes, Stability Testing .....	11-1
Type "A" Inspection .....	2-4, Appendix C
Type "B" Inspection .....	2-4, Appendix C
Type "C" Inspection .....	2-4, Appendix C
Types of Weight Handling Equipment.....	Appendix B
Understanding the Crane .....	10-2
Unusual Noises .....	9-6
Vibration Analysis.....	5-2, C-6, D-3
Visibility .....	9-5
Voiding of Certifications .....	3-3
Walk Around Inspection .....	9-1
Walkways .....	9-3
Warning Tags.....	9-4
Wedge Socket Connections .....	11-4
Wedge Sockets .....	11-4

Wheels .....	9-3
Winches .....	13-1
Windlocks.....	9-3
Wire Rope .....	9-2
Wire Rope Certification .....	5-2
Wire Rope End Connections	
Approved End Connections .....	4-4
Speltered Sockets.....	11-3
Swaged Connections .....	11-4
Wire Rope Endless Slings.....	14-9
Wedge Sockets .....	11-4
Others .....	11-6
Wire Rope Rejection Criteria.....	C-11, D-6
Wire Rope Slings .....	14-6
Inspection Criteria.....	14-6
Rejection Criteria .....	14-6
Use Criteria.....	14-7
Written Examination, Evaluating and Scoring .....	7-2

# STANDARD NAVY DISTRIBUTION LIST (No. Copies in Parentheses)

21A(2)	FA23(2)	FKN3(2)
22A(2)	FA24(2)	FKN7(2)
23(1)	FA42(2)	FKN8(2)
24A(1)	FA46(4)	FKN10(2)
24D(1)	FA50(2)	FKN13(2)
24G(1)	FB6(2)	FKP1E(1)
26C(2)	FB7(2)	FKP1H(2)
26DD(2)	FB10(1)	FKP1J(2)
26E(2)	FB13(4)	FKP4A(2)
26GG(2)	FB21(4)	FKP4E(2)
26HHH(2)	FB28(2)	FKP7(8)
26QQ(5)	FB30(2)	FKP8(1)
26R(2)	FB31(2)	FKP16(2)
26W(2)	FB34(2)	FKP23(1)
26Z(2)	FB44(1)	FKQ6C(2)
27G(2)	FB45(2)	FKR1A(2)
28K1(2)	FB48(2)	FKR1B(2)
39(5)	FB54(4)	FKR6(2)
41A(1)	FC3(2)	FKR7A(2)
42B1(3)	FC4(2)	FR3(2)
42B2(3)	FC5(2)	FR4(2)
42W(3)	FC7(2)	FR5(1)
A3(2)	FC14(2)	FR7(1)
C31G(2)	FF1(1)	FR9(2)
C40(2)	FF5(2)	FR10(2)
C80H(1)	FF38(1)	FR14(1)
C84A(1)	FF74(4)	FT1(2)
C84B(2)	FH26(2)	FT6(2)
C84D(1)	FH28(2)	FT20(2)
C84K(1)	FKA1(2) (except FKA1C 20 copies)	FT22(2) (less FCTCPAC)
C84M(1)	FKA8F(2) (less FKA8F2 & FKA8F6)	FT27(1)
E3A(2)	FKM8(2)	FT28(6)
FA3(1)	FKM9(2)	FT37(20)
FA6(2)	FKM11(2)	FT78(2)
FA7(2)	FKM14(4)	FT85(2)
FA10(4)	FKM32(2)	FT104(4)
FA13(2)	FKN1(10)	
FA18(4)	FKN2(4)	

Navy Crane Center (C4M)  
 Naval Facilities Engineering Command  
 10 Industrial Highway, Mail Stop #82  
 Lester, PA 19113-2090 (100 copies)

ADDITIONAL COPIES  
 (Stock Number 0525-LP-013-6440):  
 DOD by MILSTRIP to RIC-NFZ.  
 Other customers contact:  
 Naval Inventory Control Point  
 700 Robbins Avenue  
 Philadelphia, PA 19111-5098(215) 697-  
 2626 DSN: 442-2626